


Joie™

chrome™ 2

stroller

GB Instruction manual

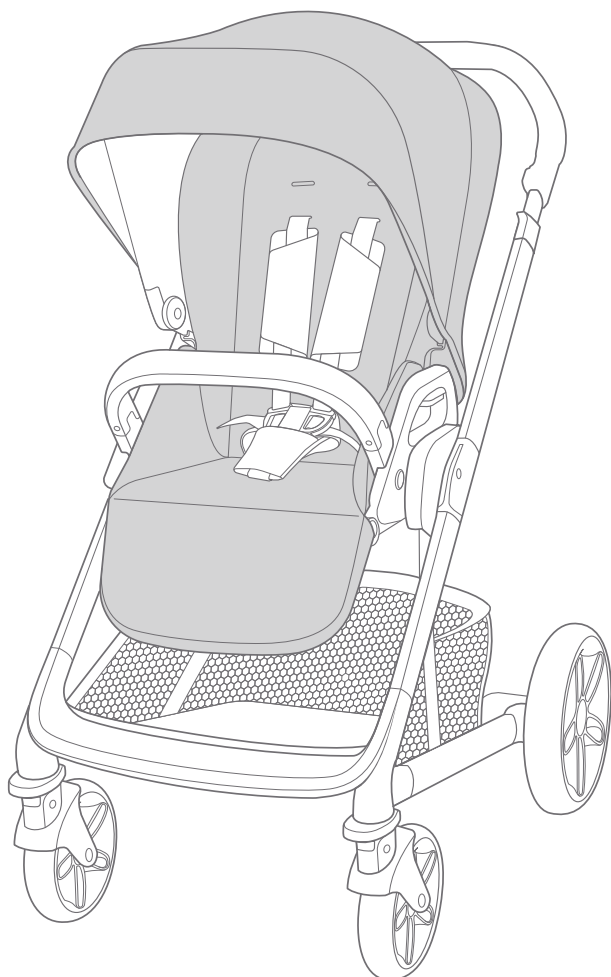

Congratulations on becoming part of the Joie family! We are so excited to be part of your journey with your little one. While traveling with the Joie chrome™ 2, you are using a high quality, fully certified stroller, complies with Australian Trade Practices Act 1974 Consumer Protection Notice No 8 of 2007 and AS 2088:2022 Amd 1:2024. This product is suitable for children up to 22kg or 4 years whichever comes first. Please carefully read this manual and follow each step to ensure a comfortable ride and best protection for your child.

IMPORTANT - READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Visit us at joiebaby.com to download manuals and see more exciting Joie products!

Contents

WARNING	4
Stroller Assembly	8
Open Stroller	8
Assemble & Detach Front Wheel	8
Assemble & Detach Rear Wheel	10
Assemble Storage Basket	10
Assemble Canopy	12
Assemble Arm Bar	14
Stroller Operation	16
Use Canopy	16
Switch Seat	16
Adjust Recline	16
Use Buckle	18
Use Shoulder & Waist Harnesses	20
Adjust Calf Support	20
Use Front Swivel Lock	22
Use Brake	22
Adjust Handle	22
Tether Strap	22
Fold Stroller	22
Use Accessories	24
Detach & Assemble Soft Goods	30
Care and Maintenance	32


Emergency

In case of emergency or accident, it is most important to have your child taken care of with first aid and medical treatment immediately.

Parts List

Make sure all parts are available before assembly. If any part is missing, please contact local retailer. No tools are required for assembly.


1 Stroller Frame	8 Seat Mount	14 Storage Basket
2 Front Wheel (X2)	9 Seat Release Button	15 Brake Lever
3 Rear Wheel (X2)	10 Buckle	16 Storage Latch
4 Brake Assembly	11 Folding Button	17 Storage Latch Mount
5 Arm Bar	12 Handle Adjustment Button	18 Tether Strap
6 Calf Support	13 Recline Handle	19 Handle
7 Swivel Lock		

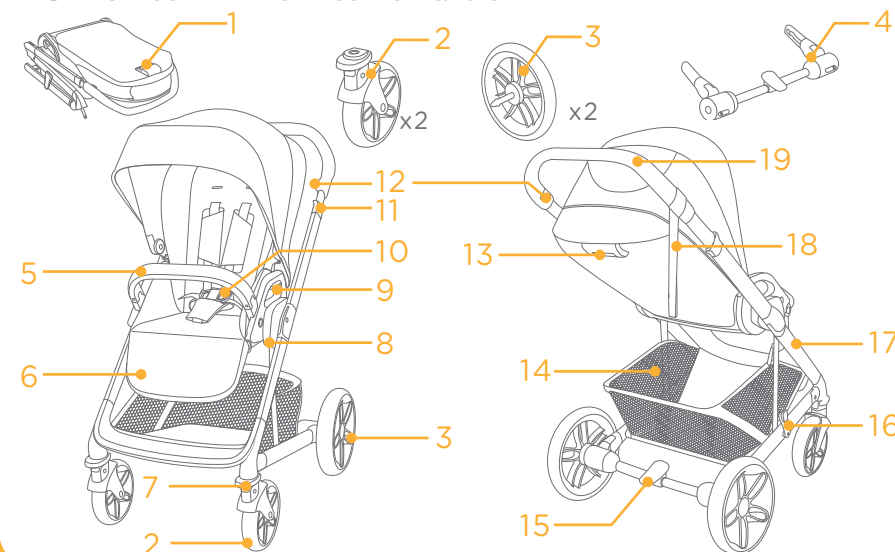

Accessories

(May not be included)

- 1 Rain Cover
- 2 Adapter

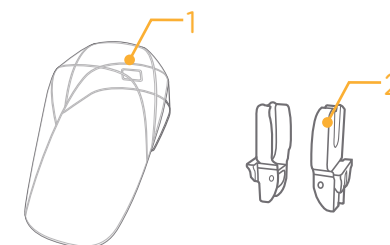

Accessories may be sold separately or may not be available depending on region.

WARNING

FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.

DO NOT LEAVE CHILDREN UNATTENDED.

DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.

MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER. OTHERWISE THEY MAY BE INJURED.

USE THIS HARNESS AT ALL TIMES.

ALWAYS KEEP CHILD IN VIEW WHILE IN STROLLER.

DO NOT USE THE SEAT WITH ANY OTHER MODELS OF STROLLER.

SECURE THE CHILD IN THE HARNESS AT ALL TIMES.

ALWAYS USE THE SHOULDER HARNESS AND WAIST STRAP COMBINATION WITH THE CROTCH BUCKLE.

TO AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT, ALWAYS USE SEAT BELT.

USE THIS TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.

DO NOT USE FOR UNSUPERVISED SLEEPING.

Ensure that all the locking devices are engaged before use.

Do not let your child play with this product.

Never leave the harness buckled when not fitted to a child in the stroller because the harness can form loops which may pose a strangulation hazard.

The use of accessories not approved by the vehicle manufacturer is unsafe.

Adult assembly required.

PLEASE TRANSPORT THE FOLDED STROLLER SAFELY.

Use of this stroller with a child weighing more than 22 kg will cause excessive wear, and stress on the stroller, and could create an unstable condition. Use the stroller with only one child at a time.

To prevent a hazardous, unstable condition, do not place more than 4.5 kg in the storage basket before use.

Overloading, folding incorrectly, or using component parts from other manufacturers may cause the stroller to be damaged, broken or unsafe. Please read the instruction manual carefully.

Please read all the instructions in the manual before using the product. Please save instruction manual for future use. Failure to follow these warnings and instructions may result in serious injury or death.

Safety belts and restraint system must be used correctly.

Child may slip into leg openings and be strangled if the harness is not used.

Never use stroller on stairs or escalators.

The stroller is not to be used near an open fire or exposed flame.

Never allow your child to stand on the stroller or sit in the stroller with head toward front of stroller.

Never place the stroller on roads or dangerous area.

The vehicle is designed for use on flat or gently sloping surfaces and may be unstable on higher sloping and uneven surfaces, resulting in the possibility of the vehicle tipping over.

Do make sure all parts are assembled and fastened properly before using the stroller.

To avoid strangulation, do not place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.

To prevent tipping, do not put anything on the handle. Always lift the child in and out of the stroller.

Do not lift stroller while child is in stroller.

Do not use storage basket as a child carrier.

The rear-facing position is suitable for children under 2 years or less.

To prevent tipping, never let child climb the stroller.

To avoid finger entrapment or injury to the body, use care when folding and unfolding the stroller.

Be sure the stroller is fully open or folded before allowing child near the stroller.

Check that the infant child restraint attachment device is correctly engaged before use.

To avoid strangulation, do make sure your child is clear from the canopy.

Discontinue using your stroller if it is damaged or broken.

Stroller to be used only at walking speed. This product is not intended for use while jogging.

To avoid suffocation, remove plastic bag and packaging materials before using this product. The plastic bag and packaging materials should then be kept away from babies and children.

This product is not suitable for running or skating.

Stroller designed to be used from birth shall recommend the use of the most reclined position for new born babies.

The parking device must be engaged when placing and removing children.

Please ensure that the storage latch has been properly locked, before lifting or moving the vehicle.

The vehicle is not to be used as an unsupervised sleeping environment.

The brakes must always be applied when the stroller is not moving.

For infant child restraint used in conjunction with a chassis, this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.

Stroller Assembly

Please read all the instructions in this manual before assembling and using this product.

Open Stroller

see images 1 - 3






Separate storage latch from storage latch mount ①, and then lift the handle upwards ②, a click sound means the stroller is open completely.

Press the recline handle on the back of backrest to rotate the backrest to vertical position. ③

! Check that the stroller is completely open before continuing.

Assemble & Detach Front Wheel

see images 4 - 5

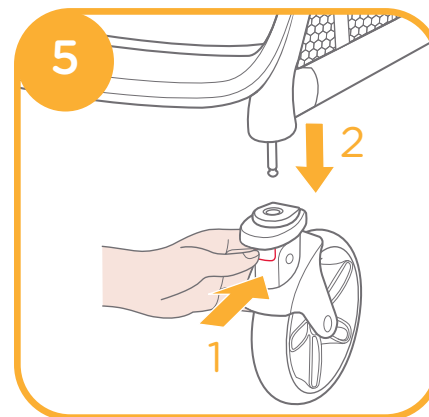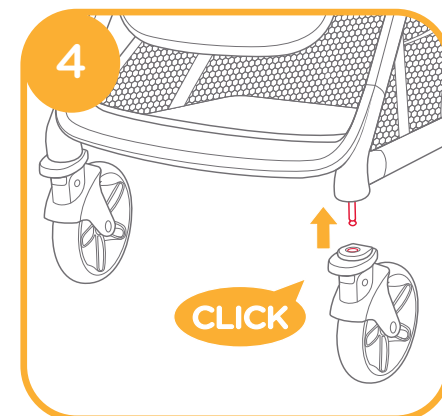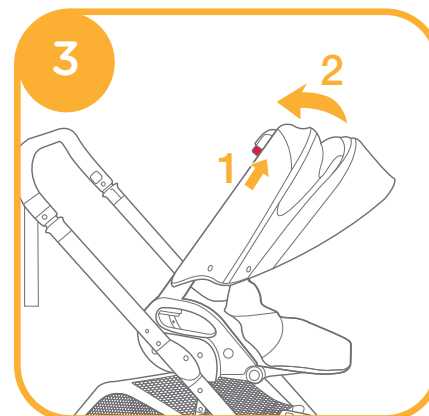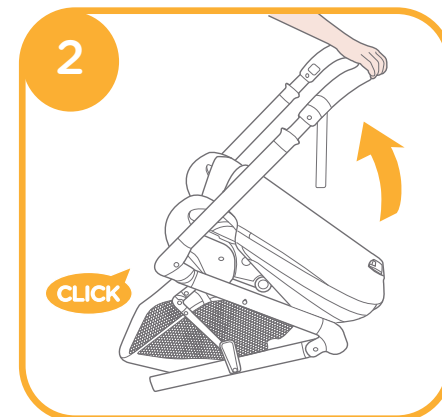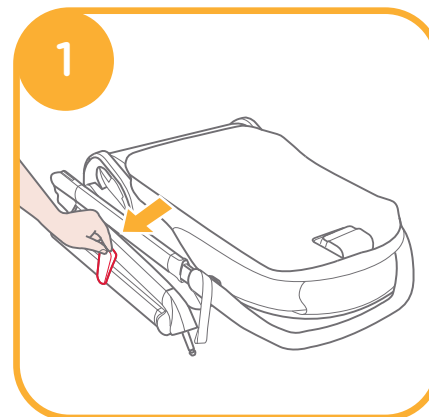

Assemble & Detach Rear Wheel

see images 6 - 7

Attach brake assembly 6

Assemble wheels as shown 7





To remove wheels press release button 7 - 1, then pull out wheel 7 - 2,

Assemble Storage Basket

see images 8 - 9

Assemble and secure basket to frame 8.

Then ensure all snap fasteners are attached to frame 9

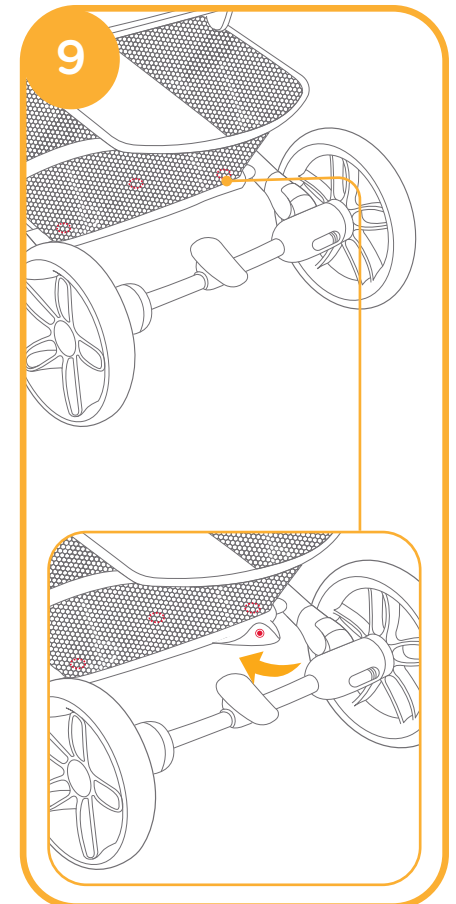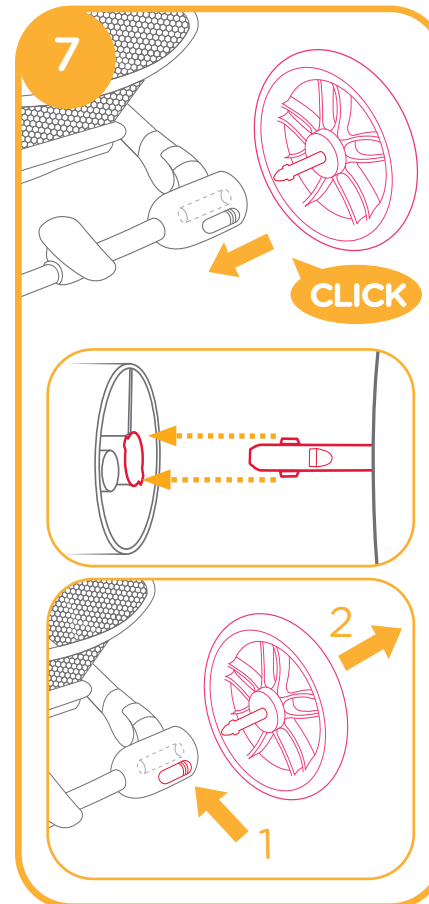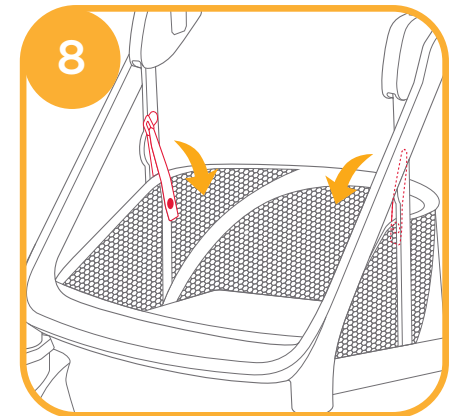
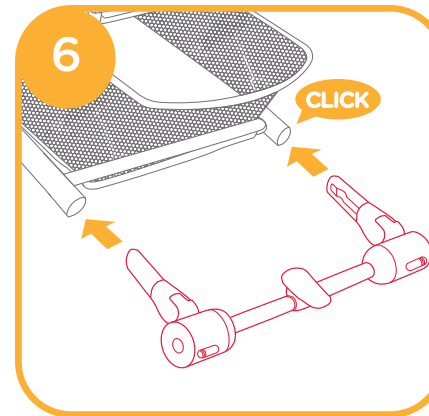


Assemble Canopy

see images 10 - 11

Fasten canopy to seat cover 10

Attach canopy pivot hinges 11 - 1. then fasten canopy press stud 11 - 2.

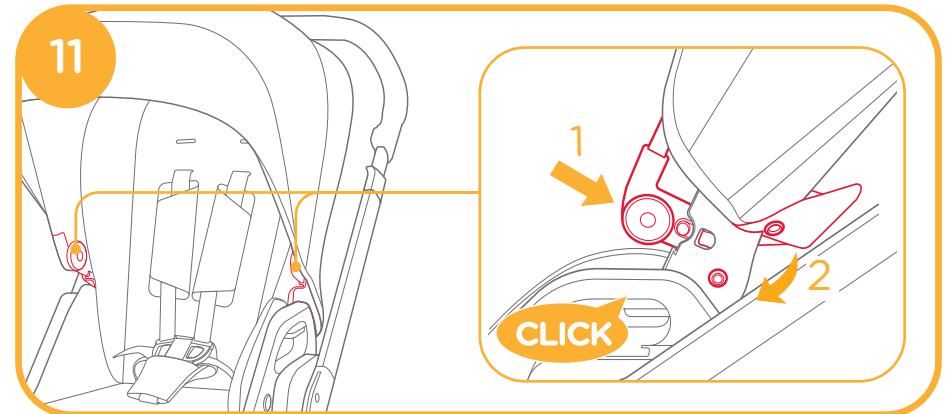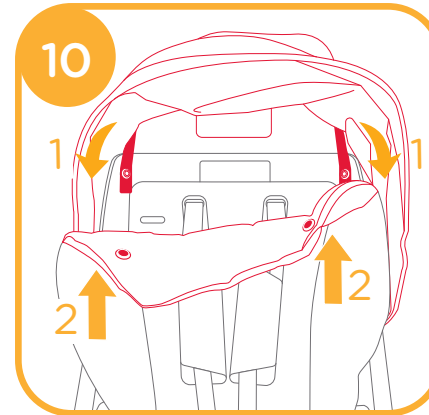




Assemble Arm Bar

see images 12 - 13

Arm bar can be opened one side for easy seating and unseating of child.

! Always secure the child with the harness. The arm bar is not a restraint device.

The completely assembled stroller is shown as 14

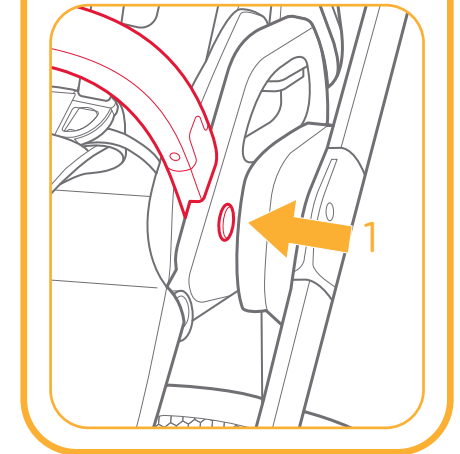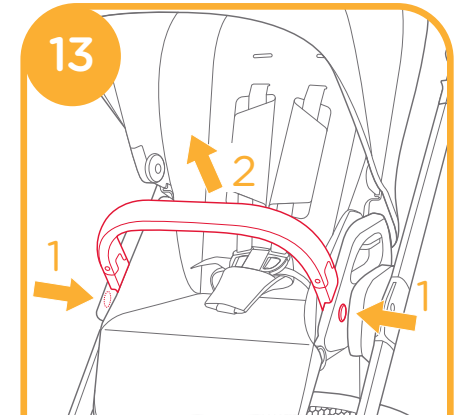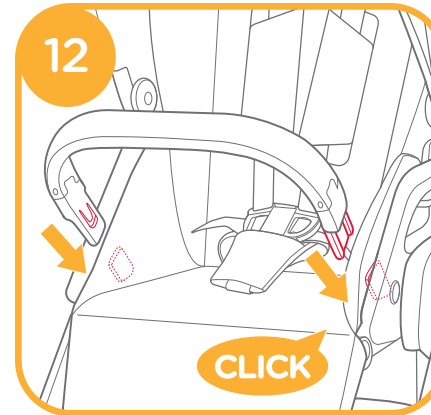

Stroller Operation

Use Canopy

see images 15 - 16

! When extending the canopy, hold or press down the backrest 15, to maintain the same upright/recline angle.

! Once fitted, removing the canopy on a regular basis is not recommended.

Switch Seat

see images 17 - 18

The seat can be switched, for parent facing or forward facing.

Squeeze the seat release buttons while lifting the seat. 17 Turn the seat to reverse direction, and then insert the seat to seat mounts.

18

Adjust Recline






see image 19

There are 5 positions for the backrest.

To recline the backrest, squeeze the adjustment button 19 - 1, and then adjust the backrest to a desired angle. 19 - 2 To raise the backrest, push up.

! Make sure the recline is set properly for use.

! Use the most reclined backrest angle for newborn babies, until infant is able to sit more upright.

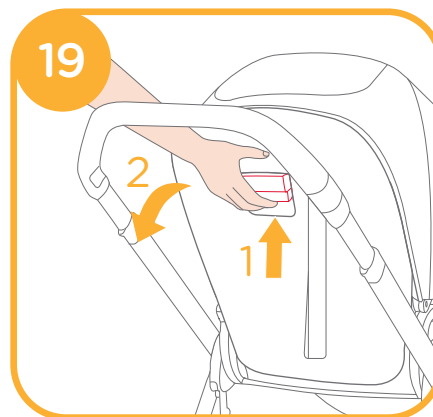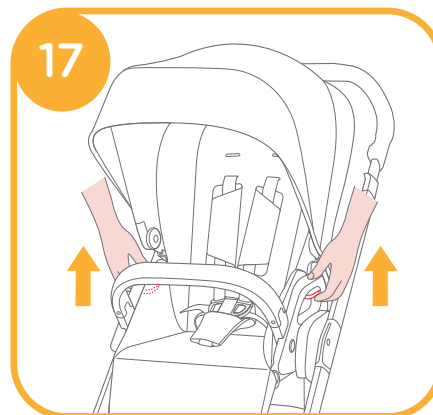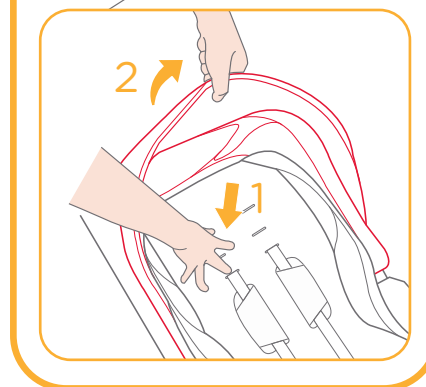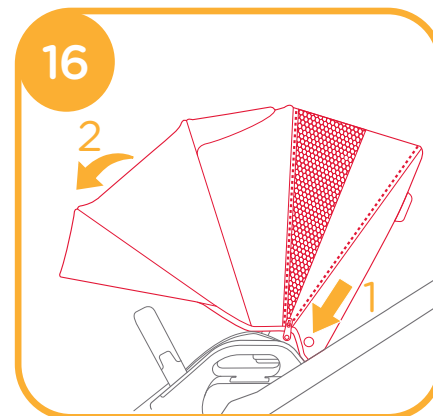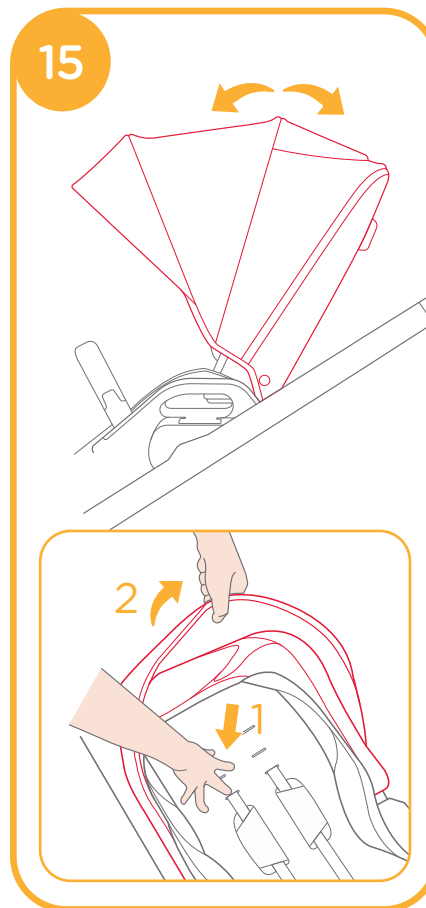

Use Buckle

see images 20 - 21



Release Buckle

Press the center button to release the buckle. 20

Lock Buckle

Match the waist belt buckle with the shoulder buckle 21 - 1, and click into the center buckle. 21 - 2 A “click” sound means the buckle is locked completely. 21 - 3

- ! To avoid serious injury from falling or sliding out, always secure your child with harness.
- ! Make sure your child is snugly secured. The space between the child and the shoulder harness is about the thickness of one hand.
- ! Do not cross the shoulder belts. This will cause pressure on child's neck.

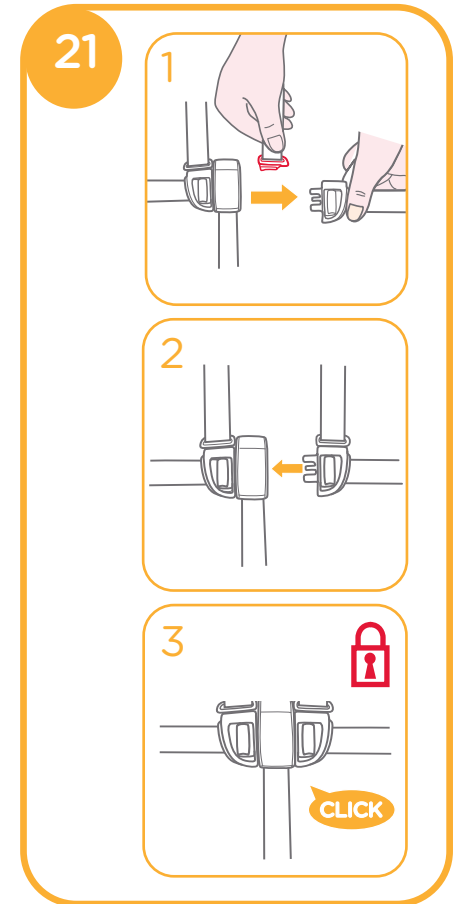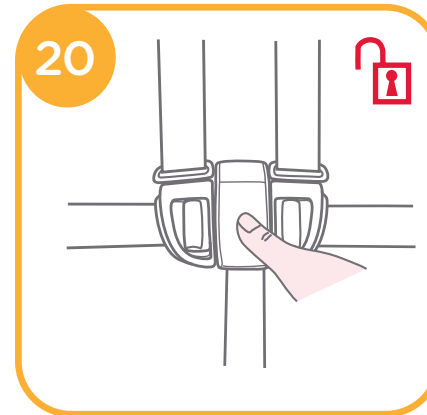

Use Shoulder & Waist Harnesses

see images 22 - 25

! In order to protect your child from falling out, after your child is placed into the seat, check whether the shoulder and waist harnesses are at proper height and length.

22 - 1 Shoulder harness anchor A

22 - 2 Shoulder harness anchor B

22 - 3 Slide adjuster

For larger child, use shoulder harness anchor A and the highest shoulder slots. For smaller child, use shoulder harness anchor B and the lowest shoulder slots.

To adjust the position of the shoulder harness anchor, turn the anchor to be level with the side facing forward. Thread it through the shoulder harness slot from back to front. 23 Rethread it through the slot that is closest to child's shoulder height. 24

Use slide adjuster to change the harness length. 25 - 1

Press the button 25 - 2, while pulling the waist harness to proper length. 25 - 3

Adjust Calf Support

see images 26 - 27

The calf support has 2 positions.






Raise Calf Support

To raise the calf support, just push it upwards.

Lower Calf Support

Press the adjustment buttons on both sides of the calf support

27 - 1, and rotate the calf support downwards. 27 - 2

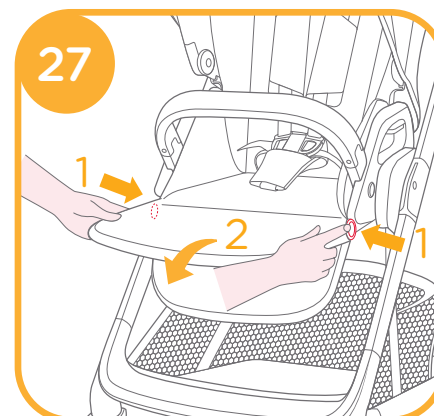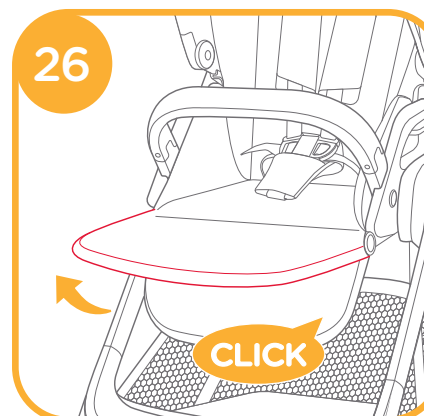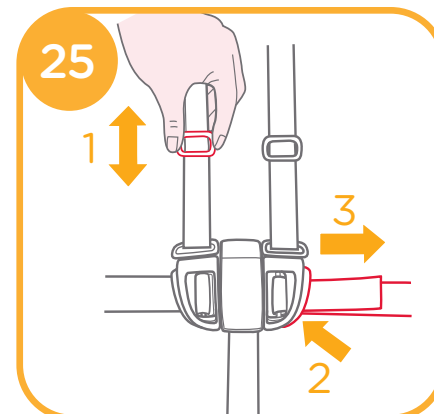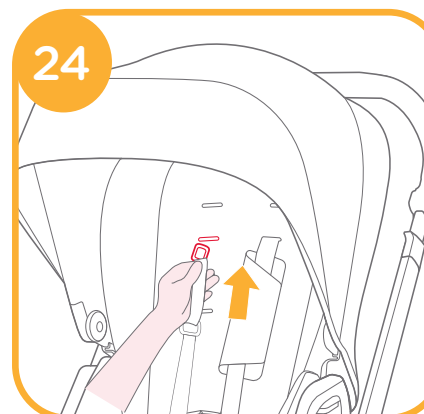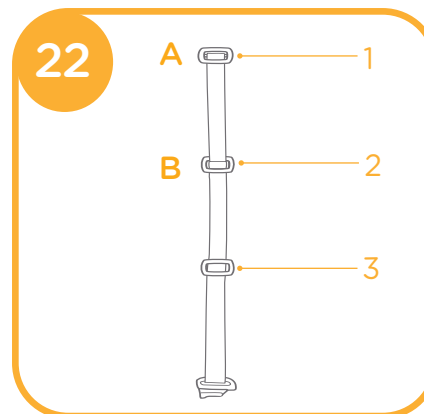

Use Front Swivel Lock

see image 28

Push up the front swivel locks to maintain the moving direction. 28

Tip It is recommended to use swivel locks on uneven surfaces.

Use Brake

see images 29 - 30

To lock wheels, step the brake lever downwards. 29

To release wheels, just lift the brake lever upwards. 30

Tip Always apply brake when stroller is in stopped position.

Adjust Handle

see image 31

The handle has 3 positions.

To adjust the height of the handle, pull the handle upward or downward 31 - 2 while pressing the handle adjustment button.

31 - 1

Tether Strap

Use the tether strap to prevent the stroller inadvertently rolling away. Check that when your hand is through the loop, it allows you to easily control the stroller.

Fold Stroller







see images 32 - 33

! Please fold the canopy before folding the stroller.

Press the recline handle on the back of backrest to rotate the backrest to horizontal position. 32

Lift the folding button, step the folding pedal downwards, push the stroller forward to fold. 32

The storage latch will automatically hook onto the storage mount, then the stroller is folded and locked completely. 33

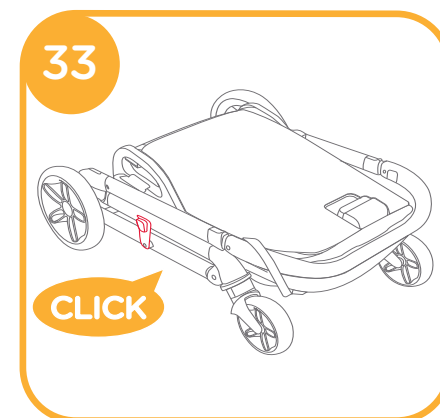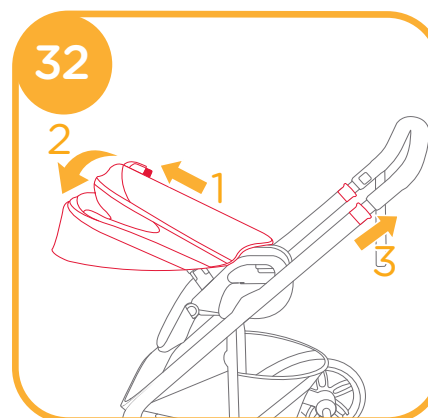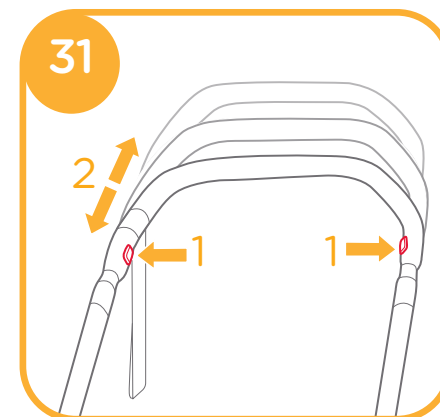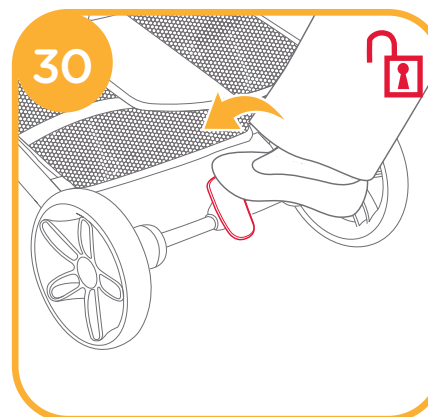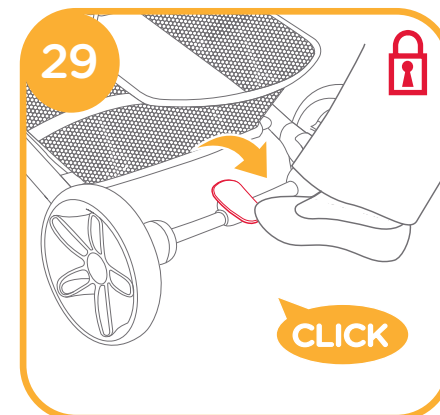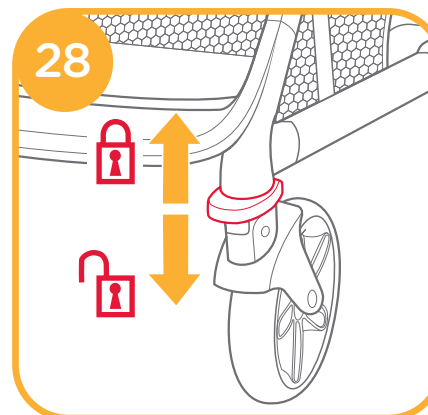

Use Accessories

Accessories may be sold separately or may not be available depending on region.

Use with Joie Child Restraint





see images 34 - 39

When using with Joie child restraint gemm, please refer to the following instructions.

1. To attach adapter, place adapter onto mounts as show 34, A “click” sound means the adapter is locked completely. 35
 2. To attach child restraint, place child restraint onto adapter as show 36, A “click” sound means the child restraint is locked completely. 37
 3. To remove child restraint, lift the child restraint upwards 38 - 2 while pressing the two stroller fix release buttons A. 38 - 1
- ! If you have any problems about using the stroller and the adapter, please refer to their own instruction manuals.
- ! To remove adapter, lift the adapter upwards 39 - 2 while pressing the two release buttons. 39 - 1
- ! Please don't fold stroller when attaching the child restraint.
- ! Child weight ≤ 9 kg (approximately 6 months old or under)

Accessories (May not be included in purchase)

Accessories may be sold separately or may not be available depending on region.

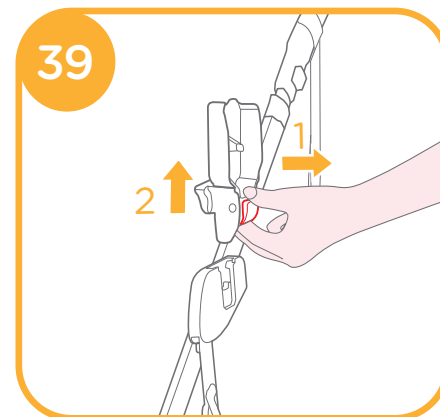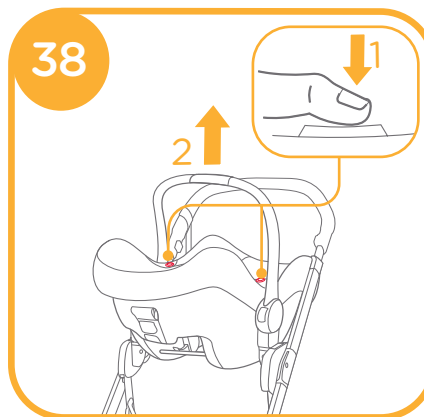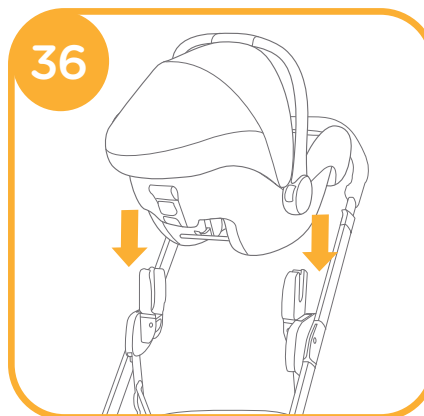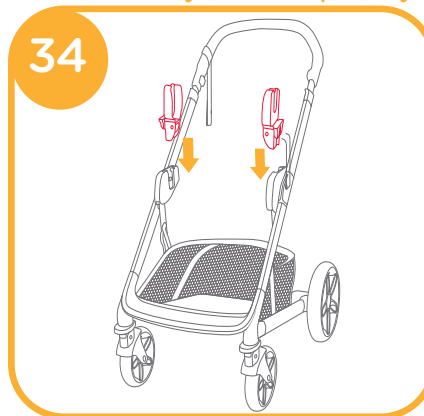

Use Rain Cover

see image 40

To assemble the rain cover, place it over the stroller. 40

- ! Before using the rain cover, to be make sure the seat has been fastened.
- ! When using the rain cover, please always check its ventilation.
- ! When not in use, please check that the rain cover has been cleaned and dried before folding.
- ! Do not fold the stroller after assembling the rain cover.
- ! Do not place your child into the stroller assembled with rain cover during hot weather.
- ! To be used under adult supervision. Do not use on a pushchair without a canopy.



Detach & Assemble Soft Goods







see images 41 - 50

Remove armbar shown as 13

Open the buckle which is on the bottom of seat. 41

To re-assemble seat soft goods, follow the steps above in reverse




50 - 42

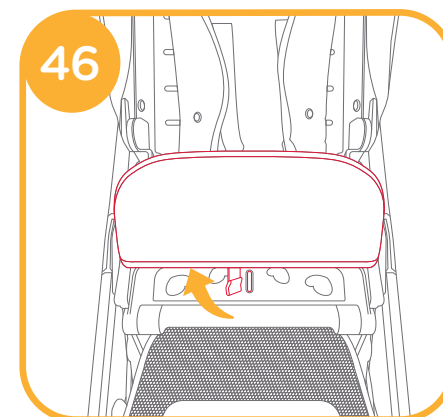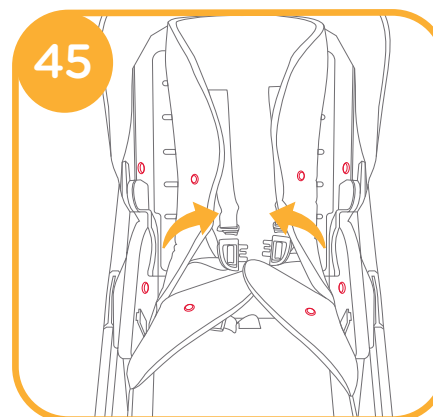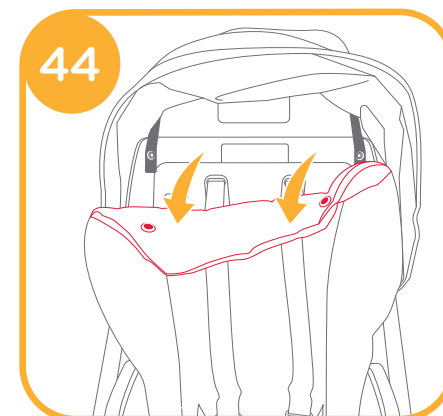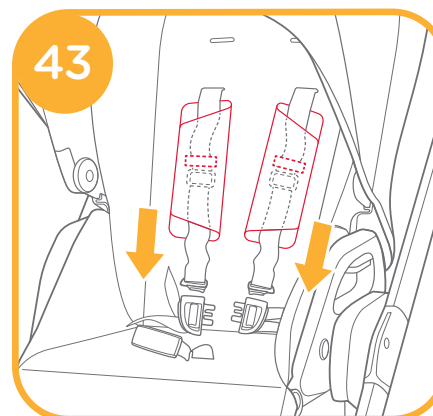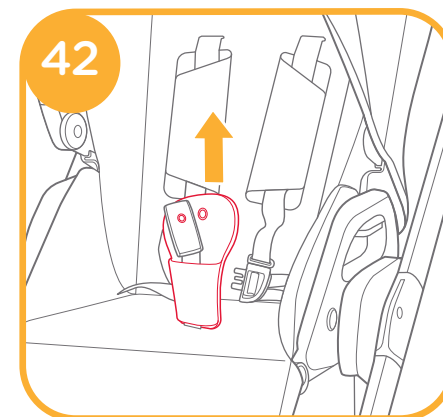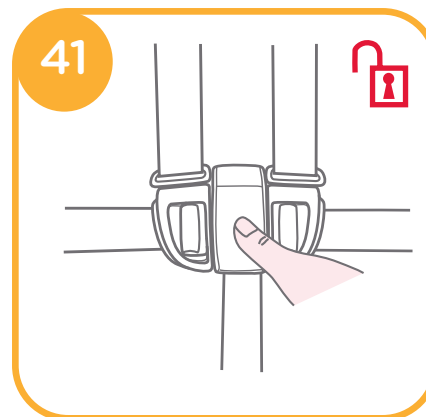



Care and Maintenance

see image 51

- ! Removable seat pad may be washed in cold water and drip-dried. No bleach.
- ! To clean stroller frame, use only household soap and warm water. No bleach or detergent.
- ! From time to time, check your stroller for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed.
- ! Excessive exposure to sun or heat could cause fading or warping of parts.
- ! If stroller becomes wet, open canopy and allow to dry thoroughly before storing.
- ! If wheels squeak, use a light oil (e.g., Silicon Spray, antirust oil, or sewing machine oil). It is important to get the oil into the axle and wheel assembly. 51
- ! When using your stroller at the beach, completely clean your stroller after use to remove sand and salt from mechanisms and wheel assemblies.

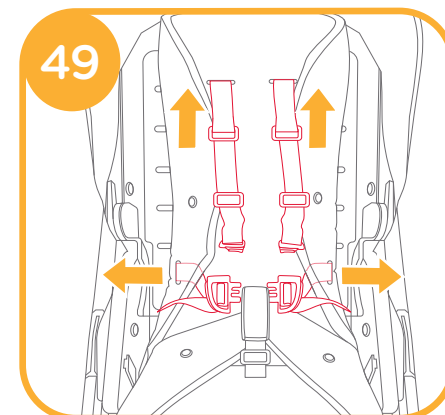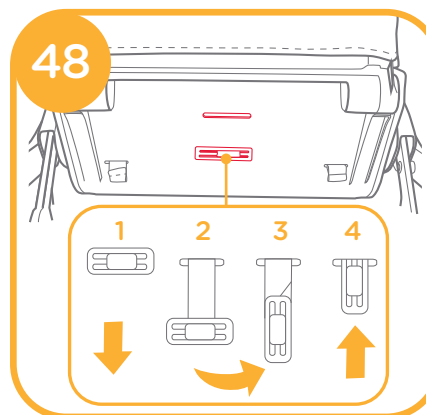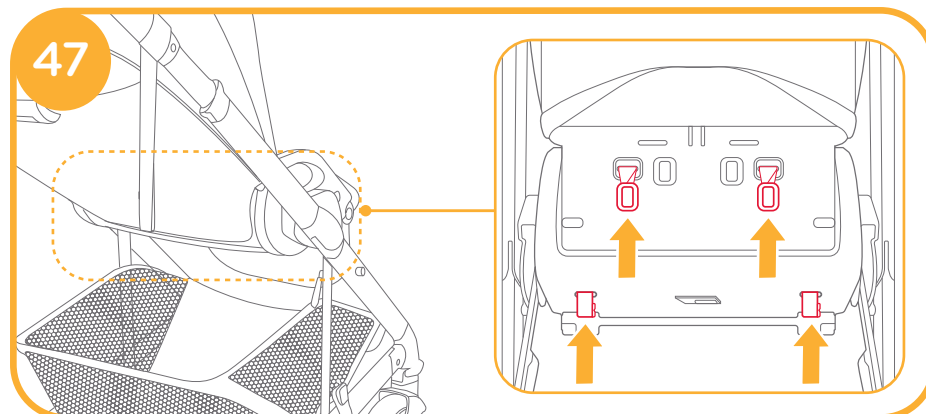

Care and Maintenance

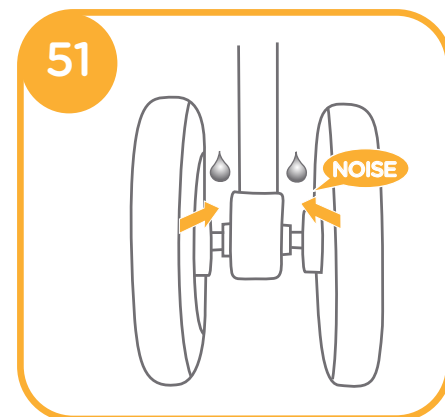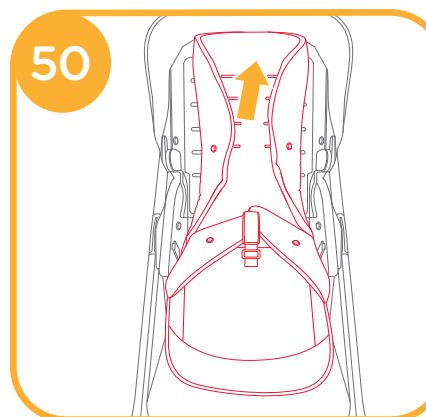



Distributed by Allison AU Pty Ltd

ACN: 642 240 140

Unit 1, 35 Lyn Parade

Prestons

NSW Australia 2170

For after-sales & warranty service, contact:

1800 951 070 customerservice@allisonau.com.au

bring the kids™

Share the joy at joiebaby.com

IM-002043C