 


JoieTM signature

 
 
 
 
 
 
 
 
 
 
versitiTM

 
 
 
 
 
 
 
 
 
 
使用說明書

 
 
 
 
 
 
 
 
 
 
 
 
組裝及使用本產品前
請先閱讀說明書全文

 
 
 
 
 
 
 
 
 
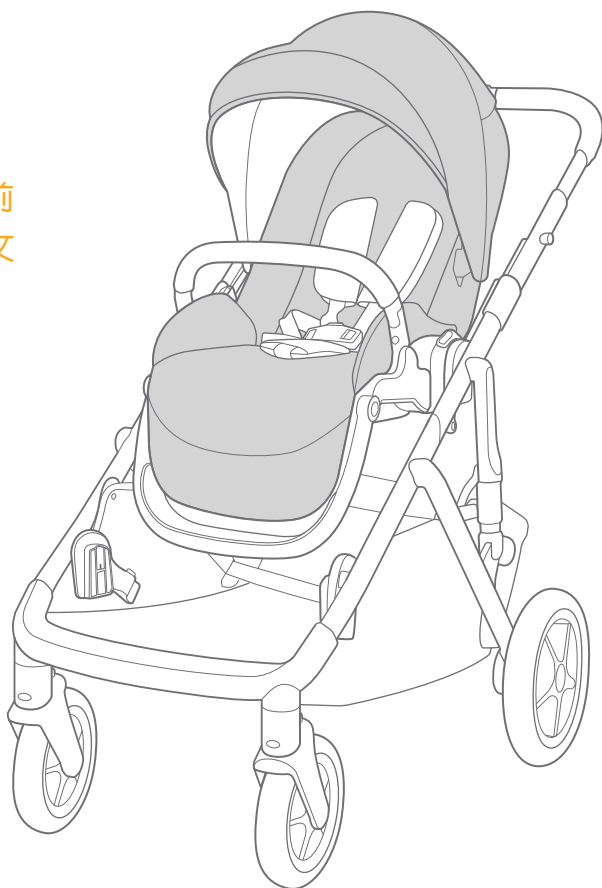 


新生兒至15kg(後向模式)以及新生兒至22kg/0-48個月(前向模式)
重要!請詳細閱讀並保留以備參照

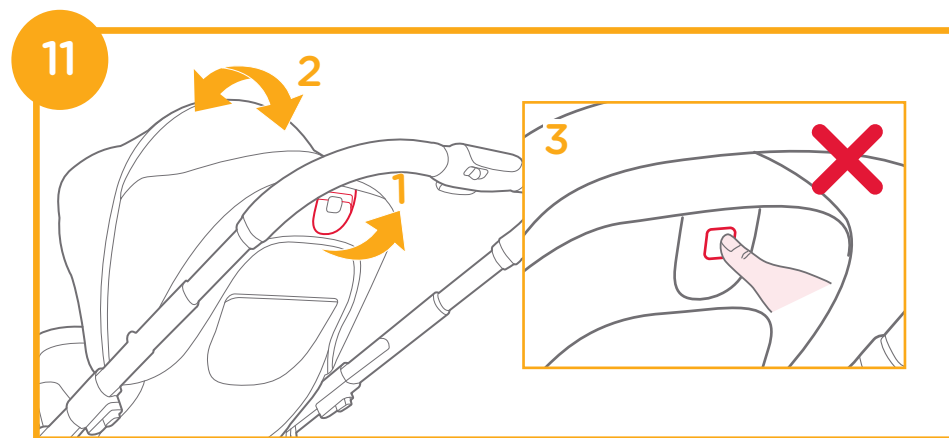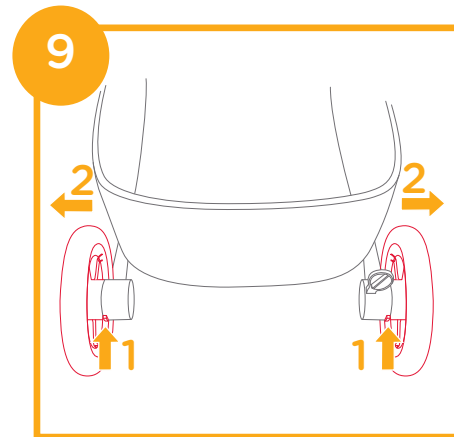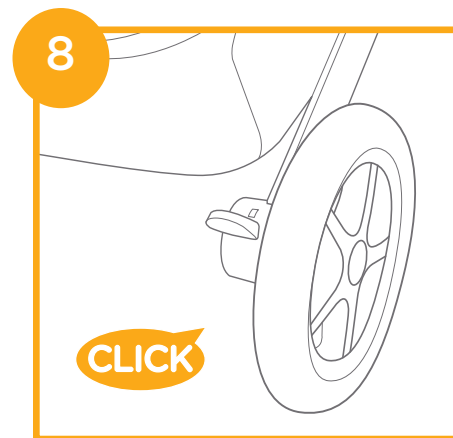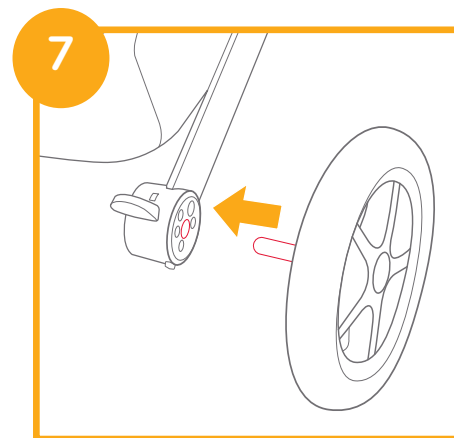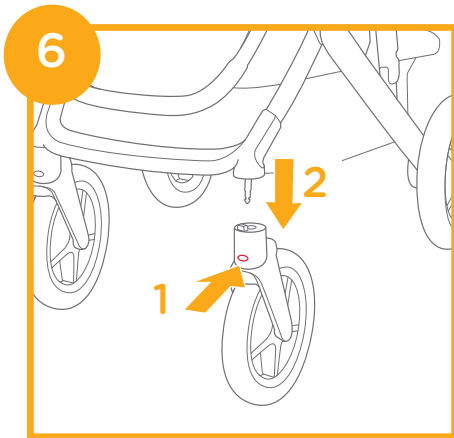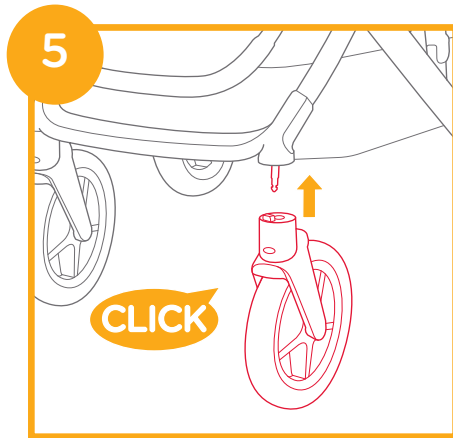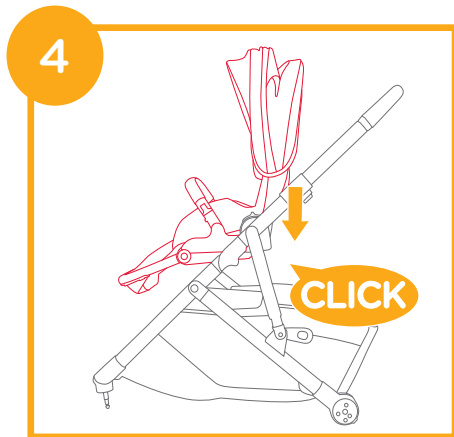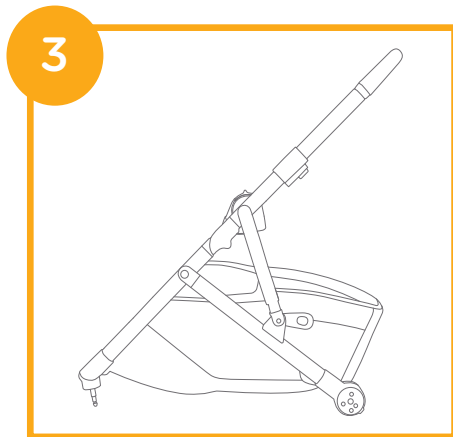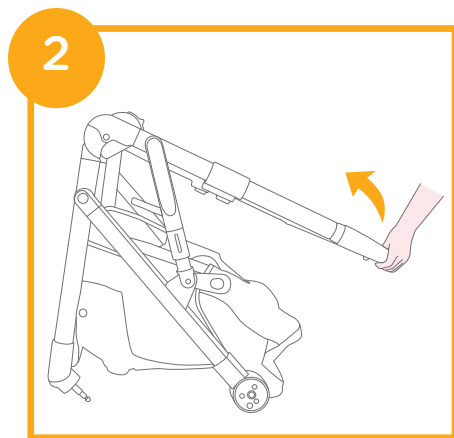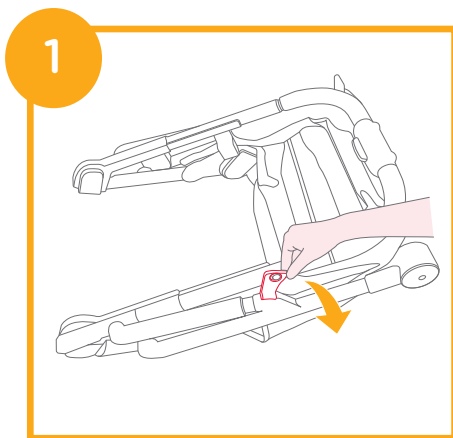


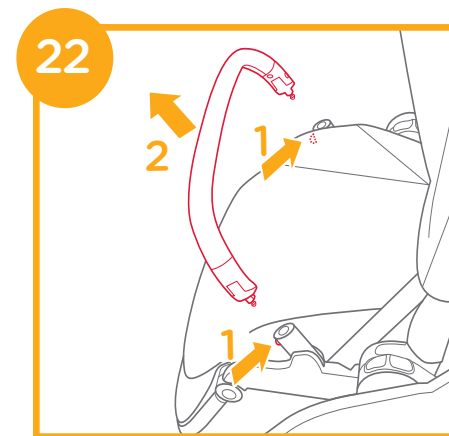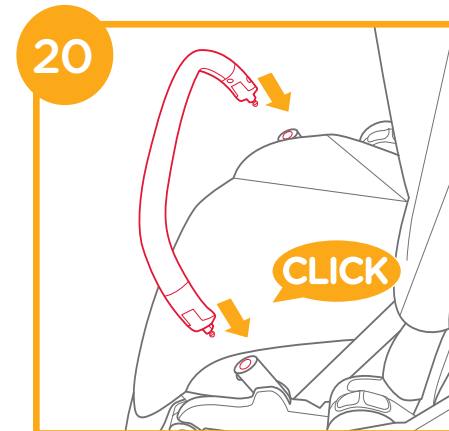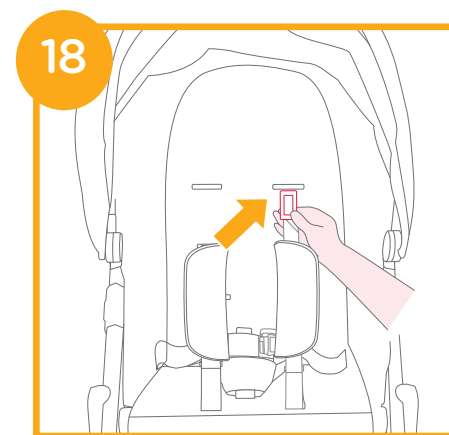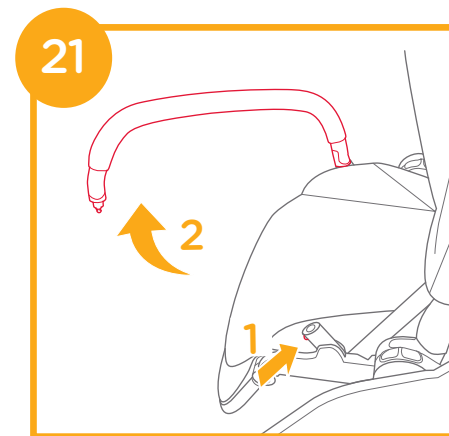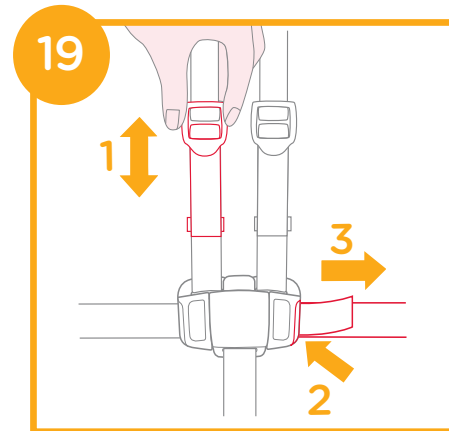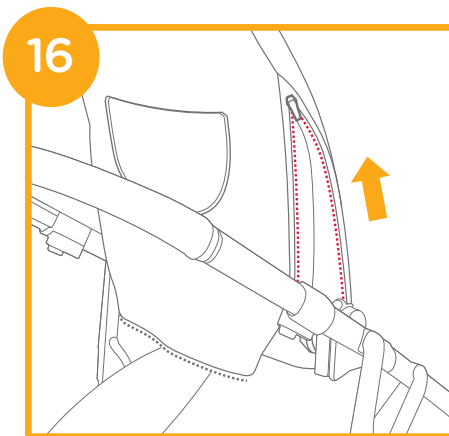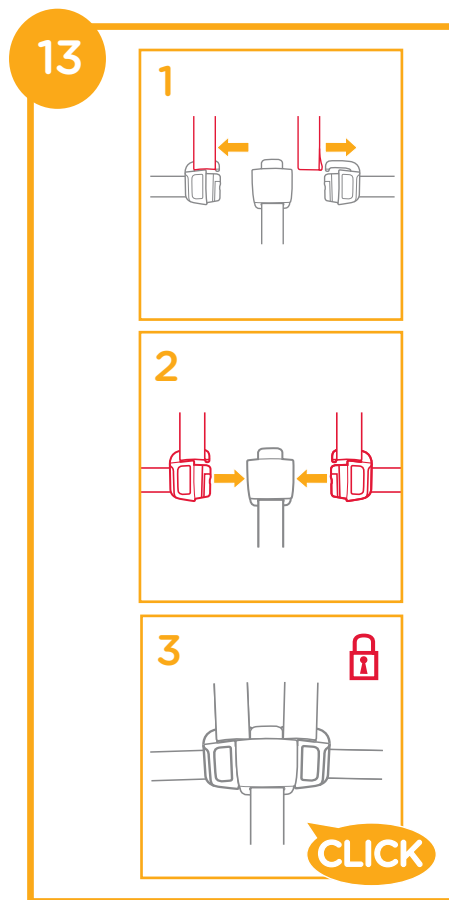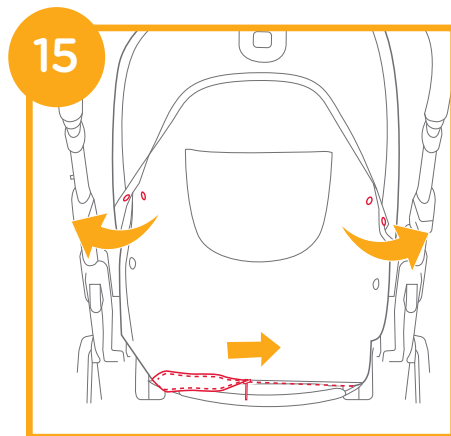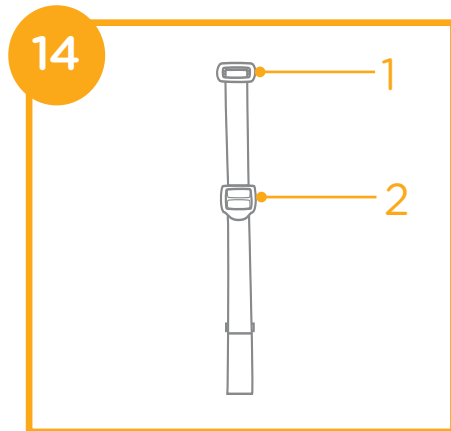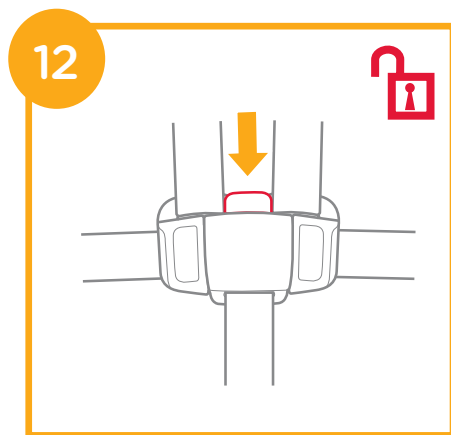

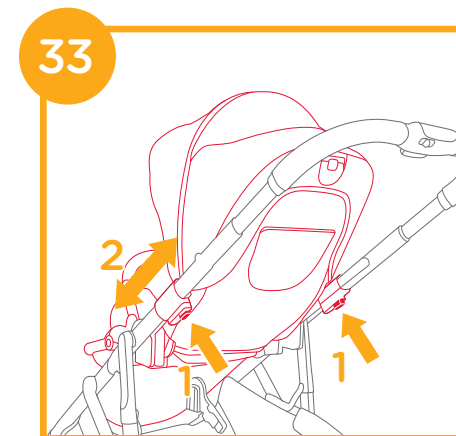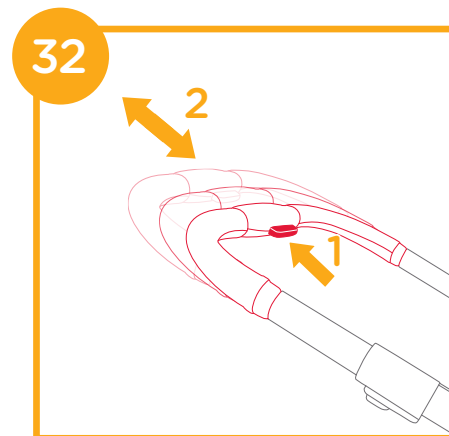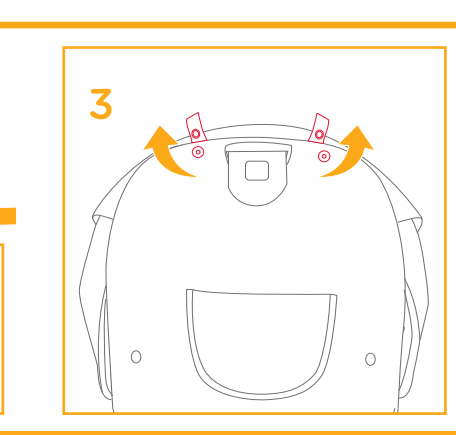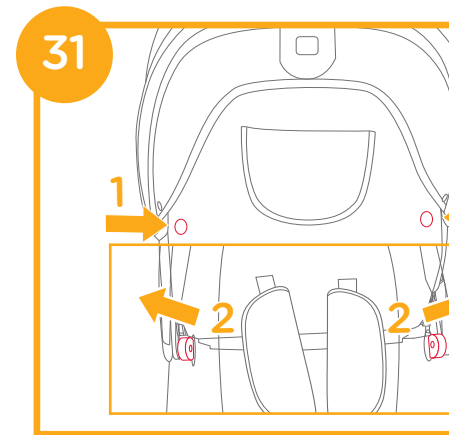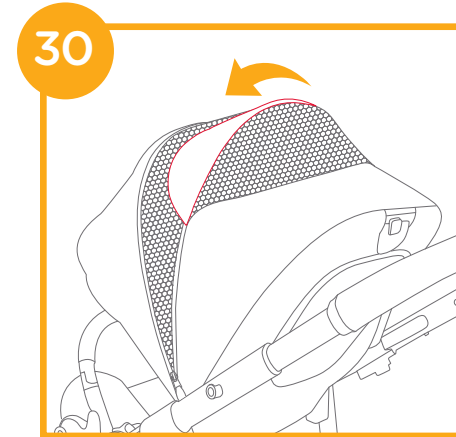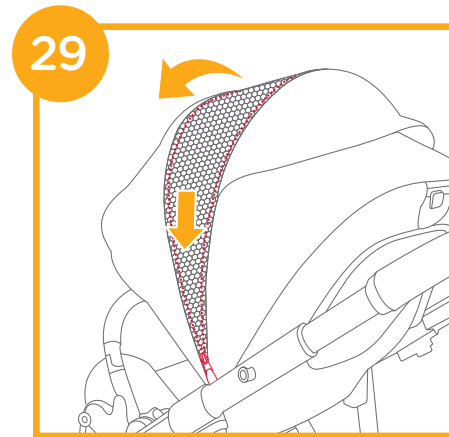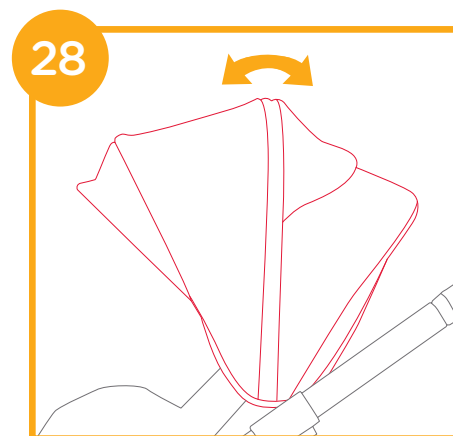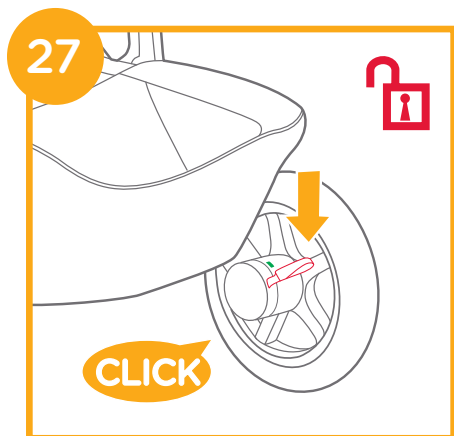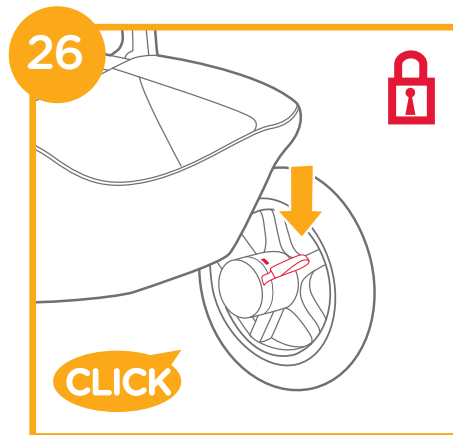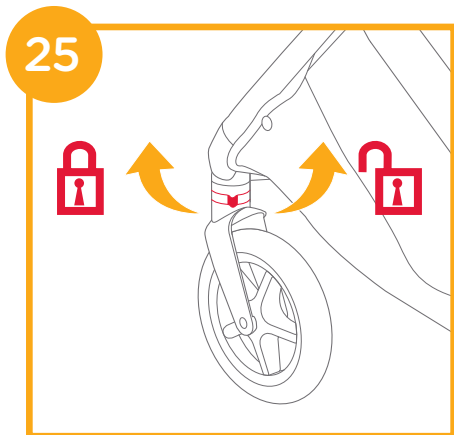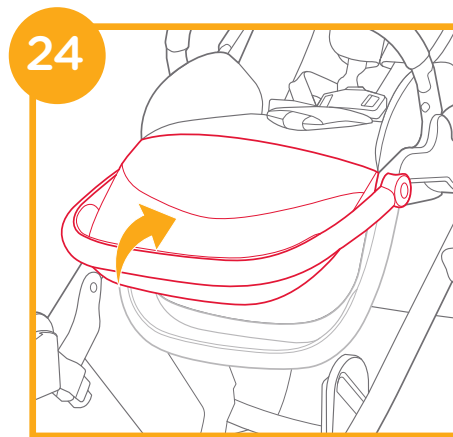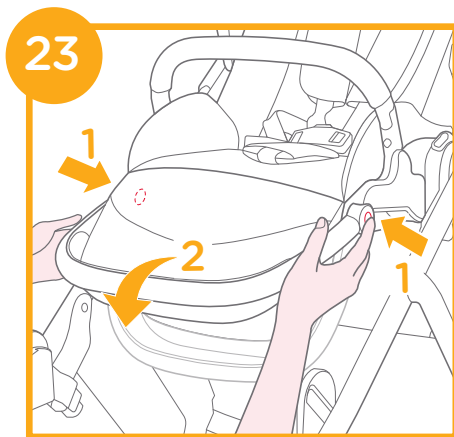


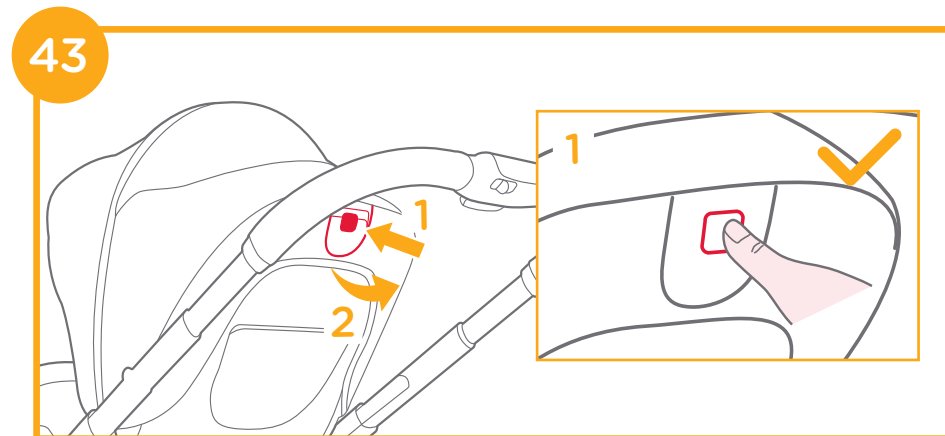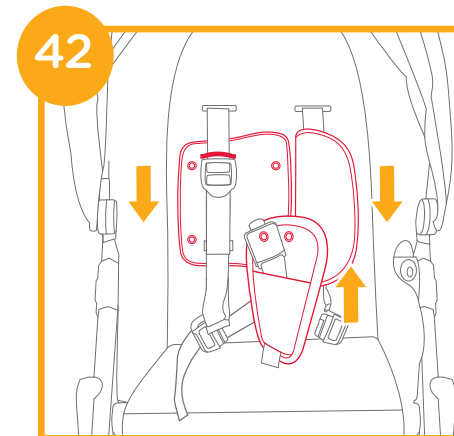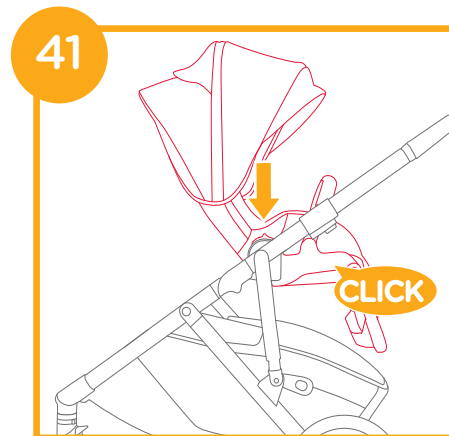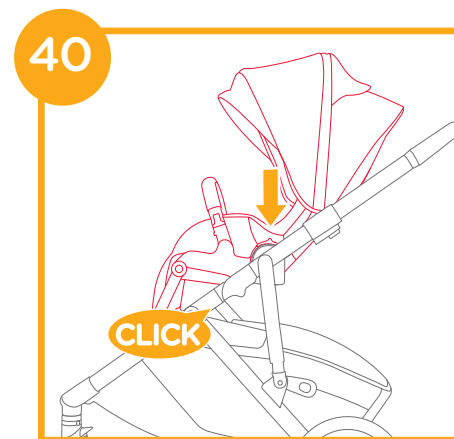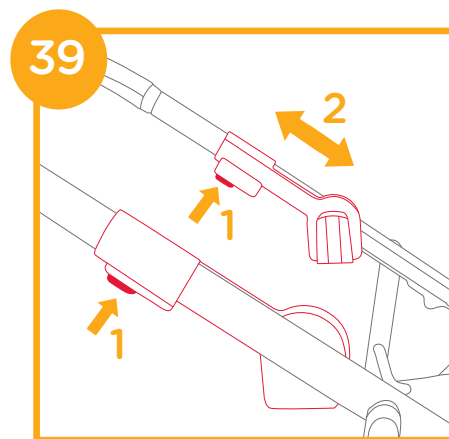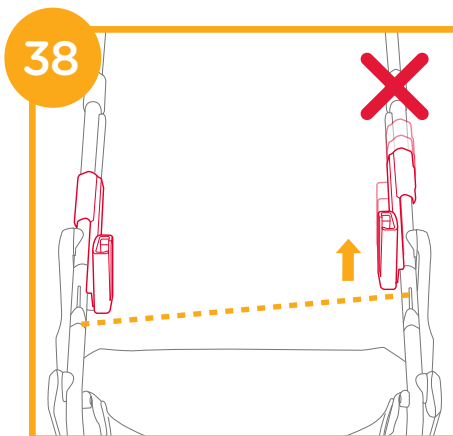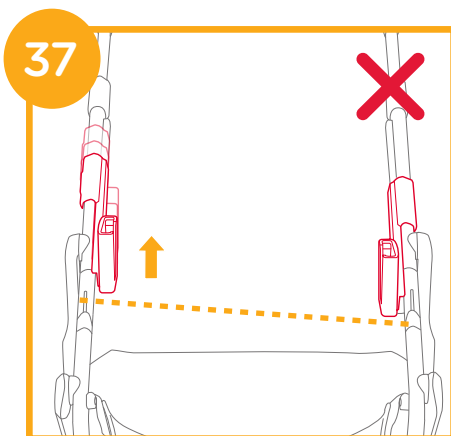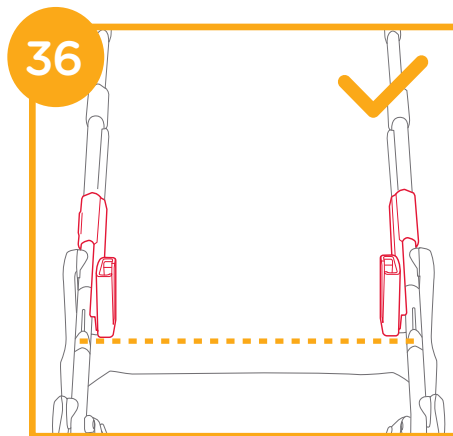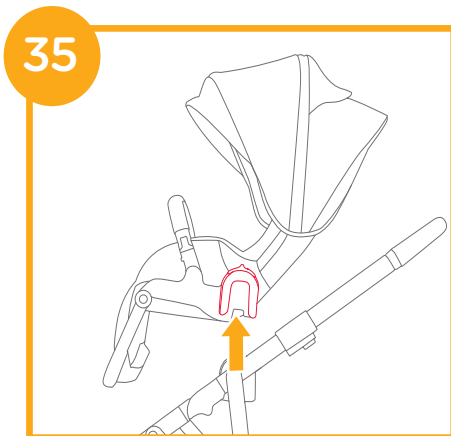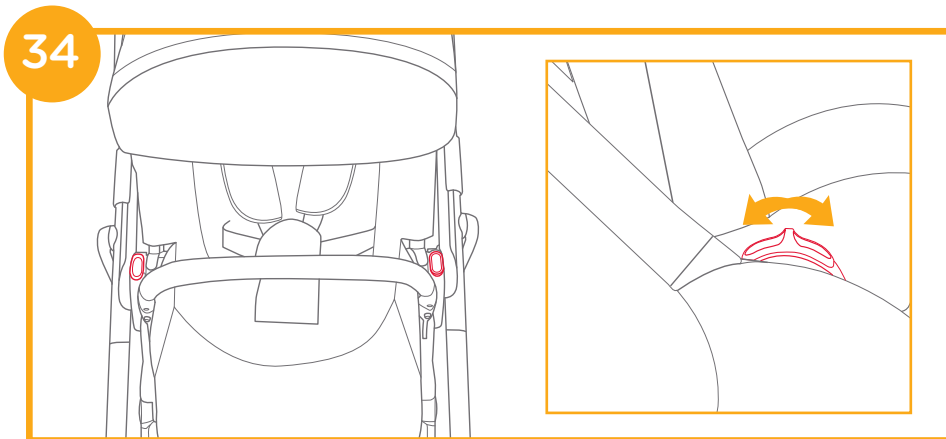


44

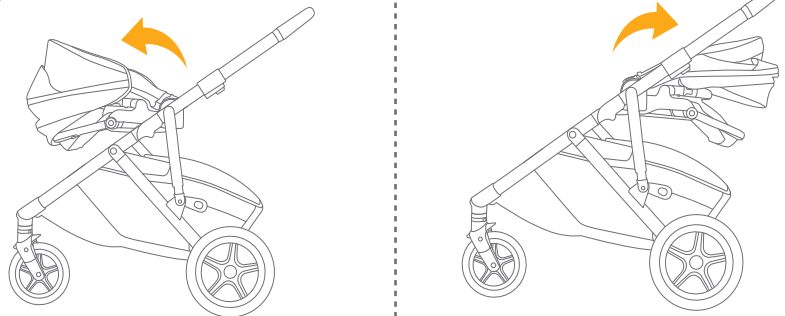 


45

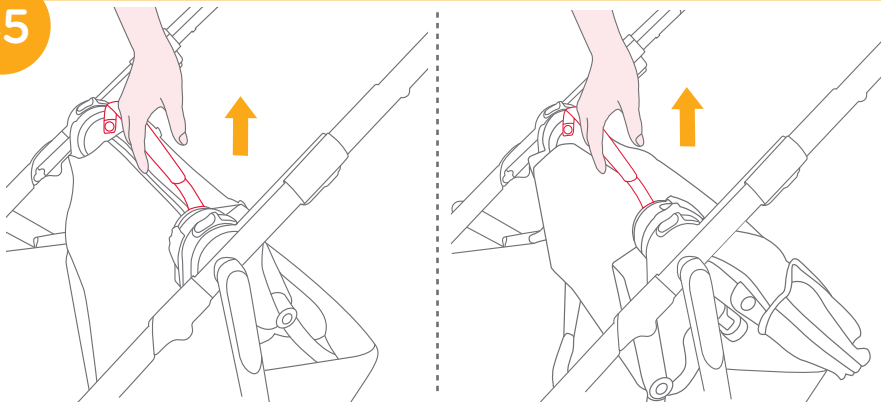 


46

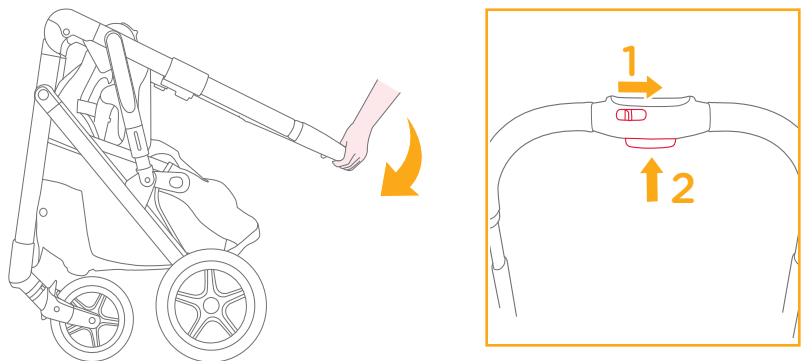 


47

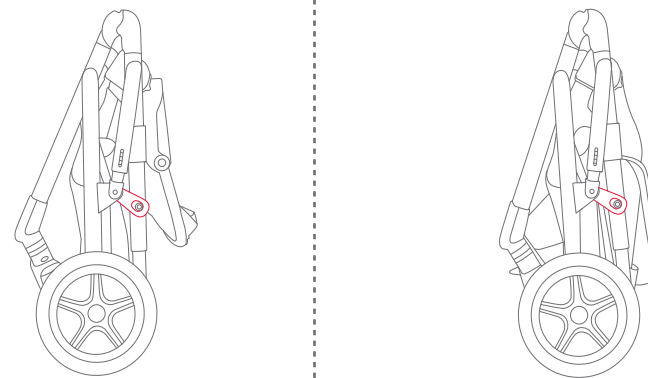 

48

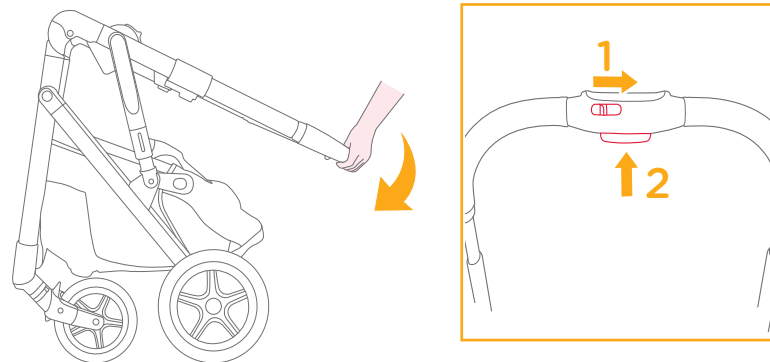 


49

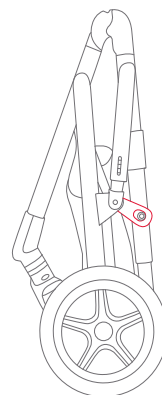 


配件

(為單獨出售，台灣地區無販售睡箱)

 
50

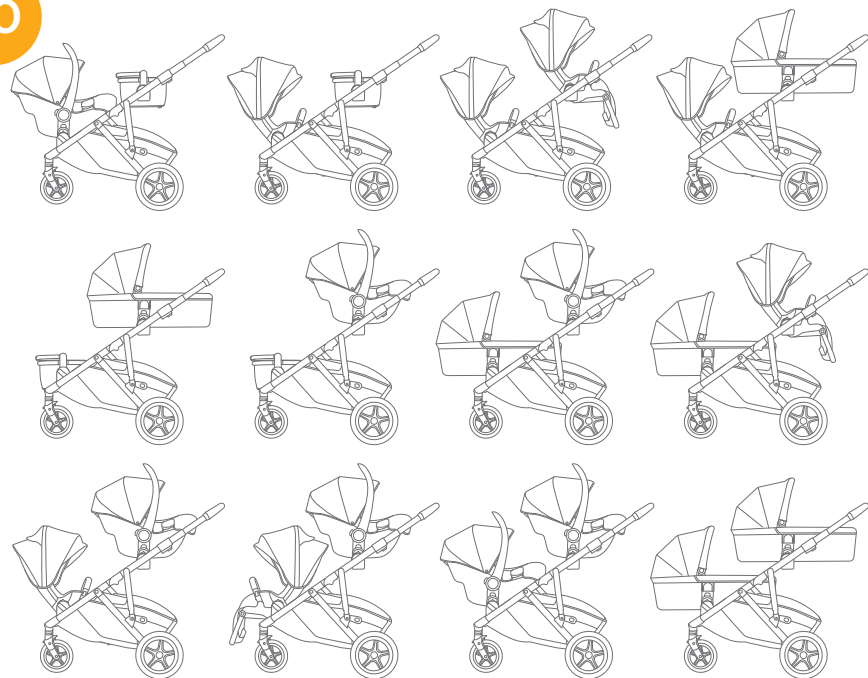

50-1

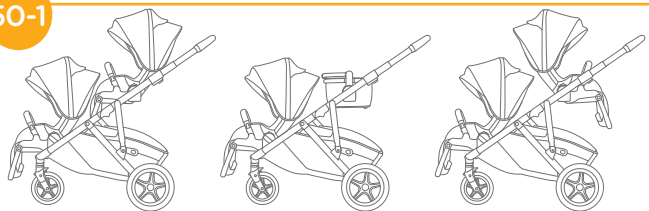 


*上座椅須調整至最高段位

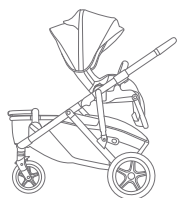 

*下座搭配手提籃時，上座椅須調整到中間位置

 51

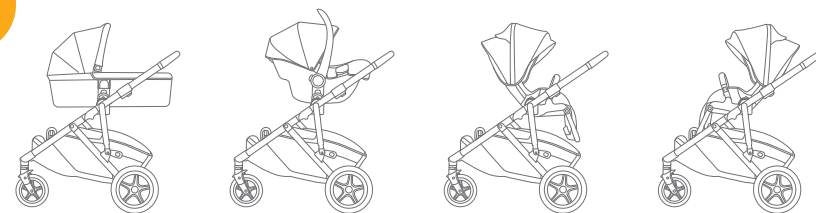


*須調整到中間位置

52





















*須調整到最低位置

 53

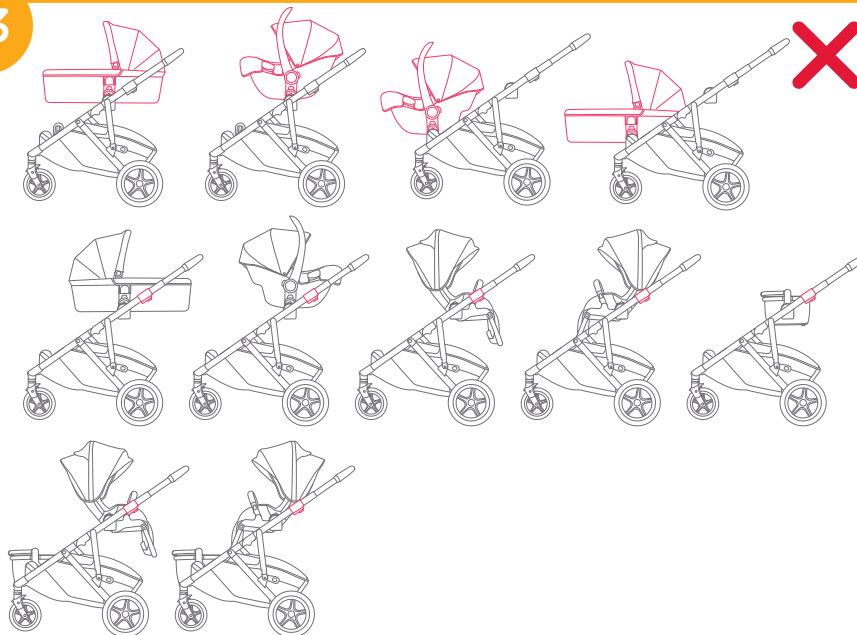

*使用單模式時，上座椅不可調整至最高位置

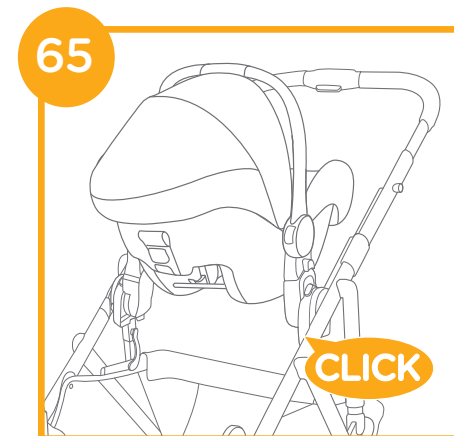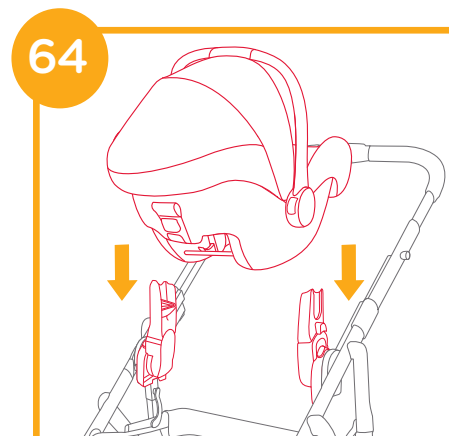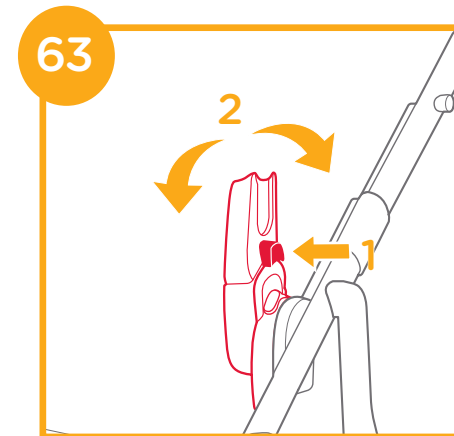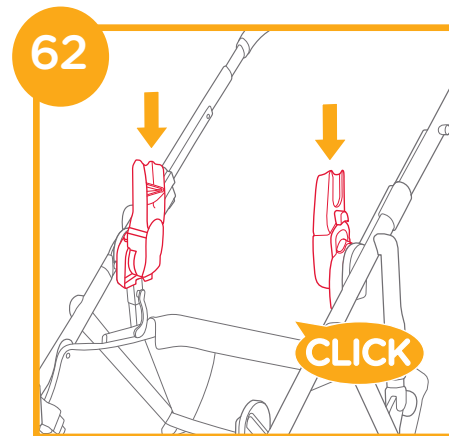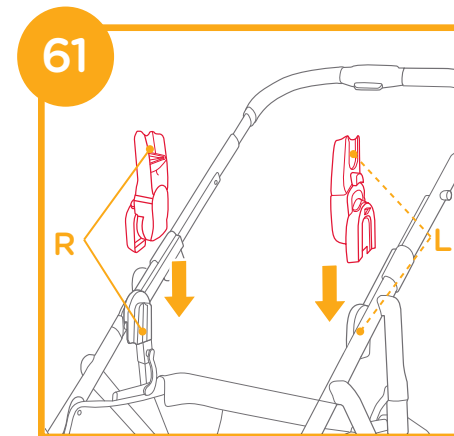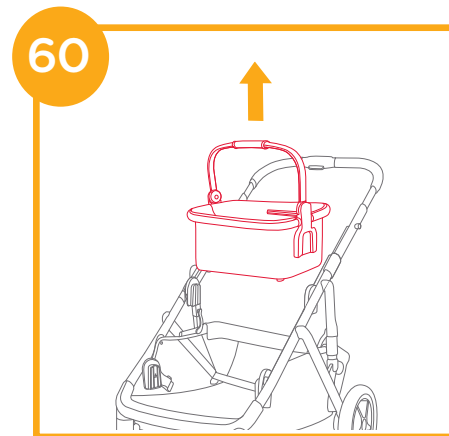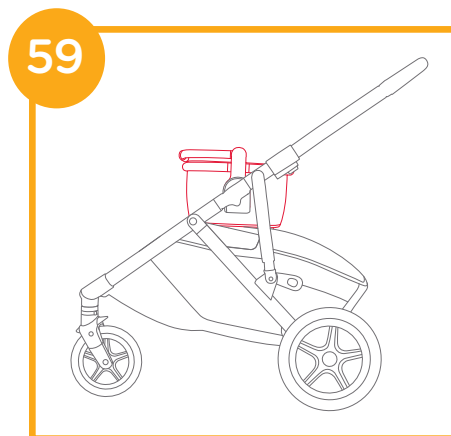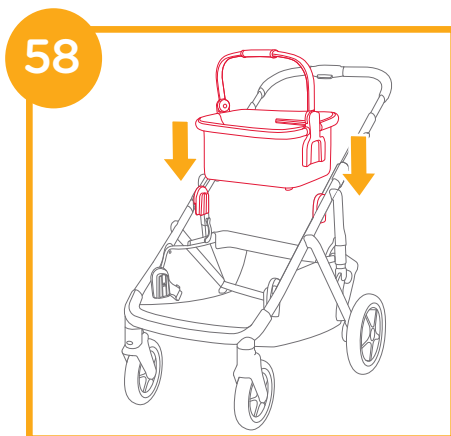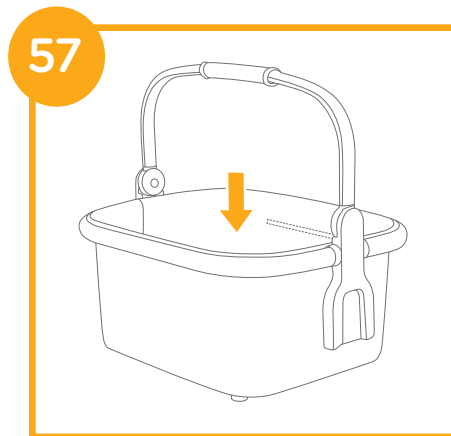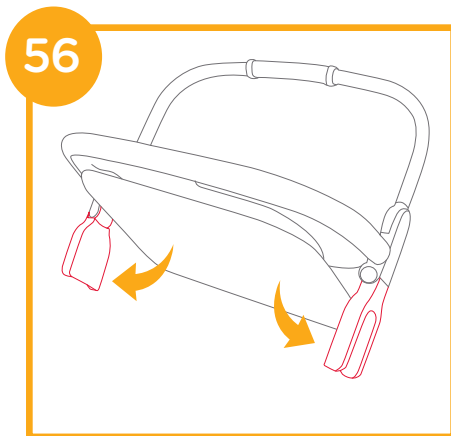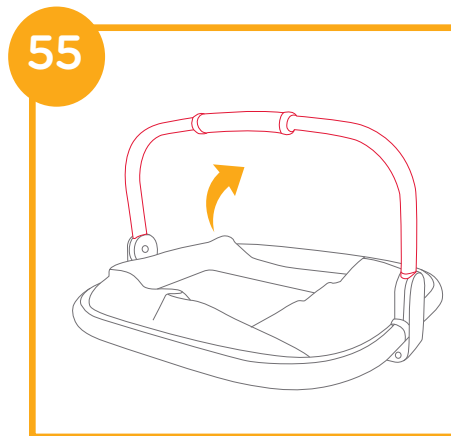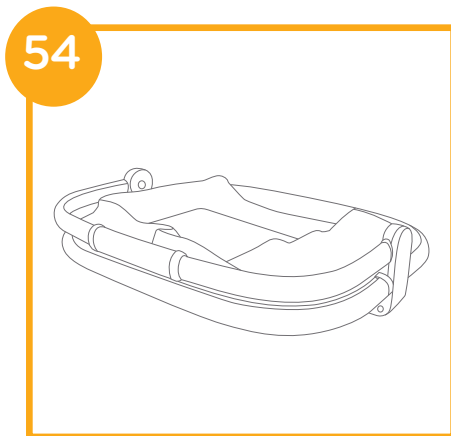            

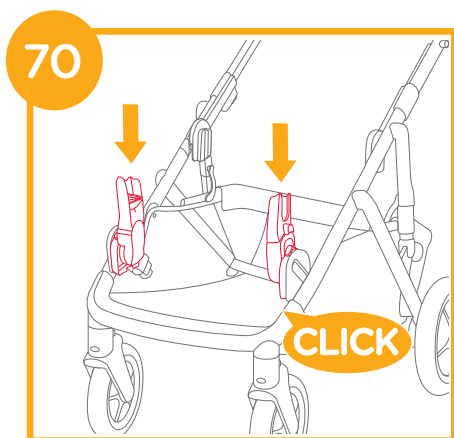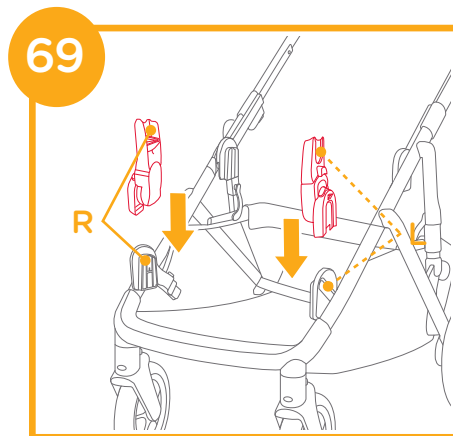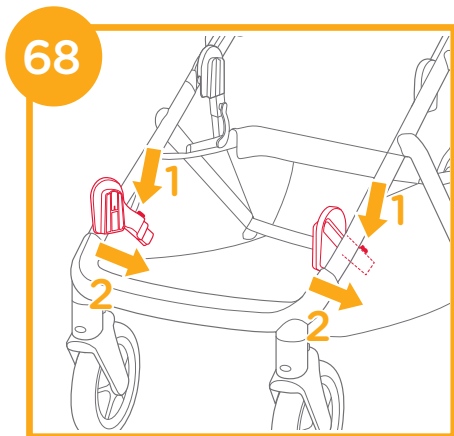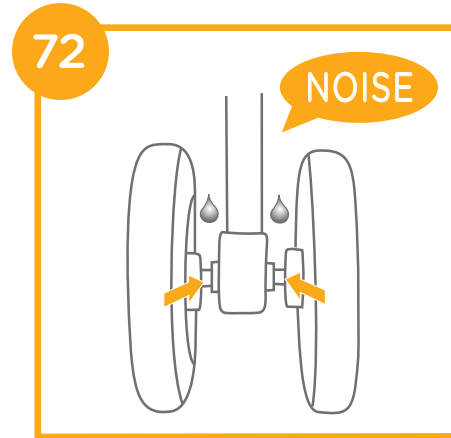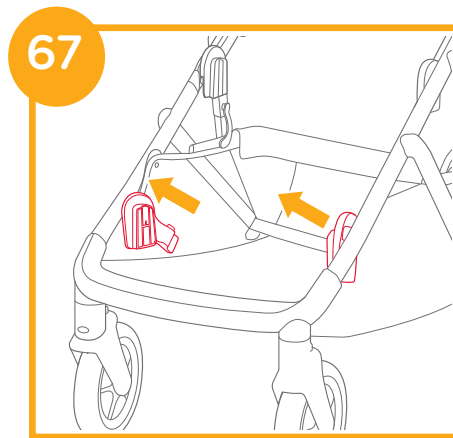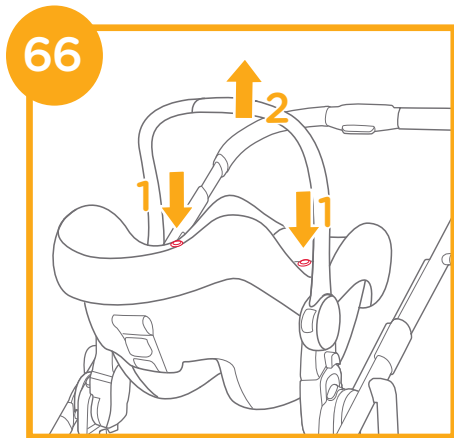      

CH 謝謝您使用本產品

祝賀您加入巧兒宜大家庭! 您剛買了一台符合安全標準CNS 12940-2:2022 和歐洲安全標準EN 1888-2:2018+A1:2022 的高品質手推嬰幼兒車。這台手推車適用於新生兒至15kg(後向模式) 以及新生兒至22kg/0-48 個月(前向模式) 的寶寶。台灣區域使用請依照CNS 標準規範。

請仔細閱讀本說明書並依照指示操作, 這樣才能保障並提供您的寶寶一個安全又舒適的行程。

重要! 請詳細閱讀並保留以備參照

如需要了解更多信息, 請您訪問joiebaby.com 網站下載說明書或查看更多令人激動的Joie 產品!

目錄

參照圖示	1-16
緊急情況處理	18
產品資訊	19
產品組件及各部件名稱	20
警告	21
產品組裝	25
打開手推車	25
組裝&拆卸前輪	25
組裝&拆卸後輪	25
產品操作	26
調整背靠角度	26
使用安全扣	26

使用肩帶和腰帶	27
使用扶手	27
調節小腿靠支撐板	27
前輪定向	28
使用剎車踏板	28
使用遮陽篷	28
調整車手	28
調整座椅高度	29
調整座椅方向	29
使用肩帶護片和胯帶護片	29
收合手推車	29
座椅選擇	30
使用配件	30
使用手提籃	30
在上座椅底座使用汽車椅	31
在下座椅底座使用汽車椅	31
使用雨篷	32
保養常識	33

緊急情況處理

遇緊急事件或事故時, 需迅速急救或送醫治療照顧您的寶寶是非常重要的。

產品資訊

Allison Baby UK Ltd.

Venture Point, Towers Business Park,

Rugeley, Staffordshire, WS15 1UZ

www.joiebaby.com

產品名稱 手推嬰幼兒車
產品型號 S2332
最大體重 22公斤(後向15公斤/前向22公斤)
適用嬰幼兒年齡 後向0-36個月/前向0-48個月
主要材質 塑膠、合金、布
淨重 12.77公斤
產品尺寸 1440 x 660 x 1200mm
製造日期 詳見產品上貼紙日期(年/月/日)
原產地 中國

委製商 巧兒宜國際股份有限公司
進口商 巧兒宜國際股份有限公司
地址 台北市內湖區瑞光路431號2樓
電話 02-27973000
統一編號 52603333


代理商 奇哥股份有限公司Chickabiddy Co., Ltd
地址 台北市南京東路四段186號5樓
服務專線 0800-001-256 / 02-25781188
統一編號 04222671
網址 www.chick.com.tw

使用本產品前請先閱讀說明書全文，如果您對於使用本產品還有任何疑問，請撥服務專線0800-001-256 / 02-25781188

產品組件及各部件名稱


組裝前請確認所有部件已經齊全，如有遺漏，請與代理商聯繫。本產品無需工具進行組裝。

- | | | |
|-------|-------------|--------------------|
| 1 主體 | 9 下座椅底座 | 17 前輪定向拉板 |
| 2 前輪 | 10 前輪 | 18 收合鉤 |
| 3 後輪 | 11 置物籃 | 19 後輪 |
| 4 遮陽篷 | 12 座椅釋鎖按鈕 | 20 剎車踏板 |
| 5 座墊 | 13 肩帶護片 | 21 背靠調整拉桿 |
| 6 扶手 | 14 車手 | 22 車手調整按鈕/
收合按鈕 |
| 7 安全扣 | 15 天窗 | 23 第二道安全鎖 |
| 8 小腿靠 | 16 座椅高度調整按鈕 | |

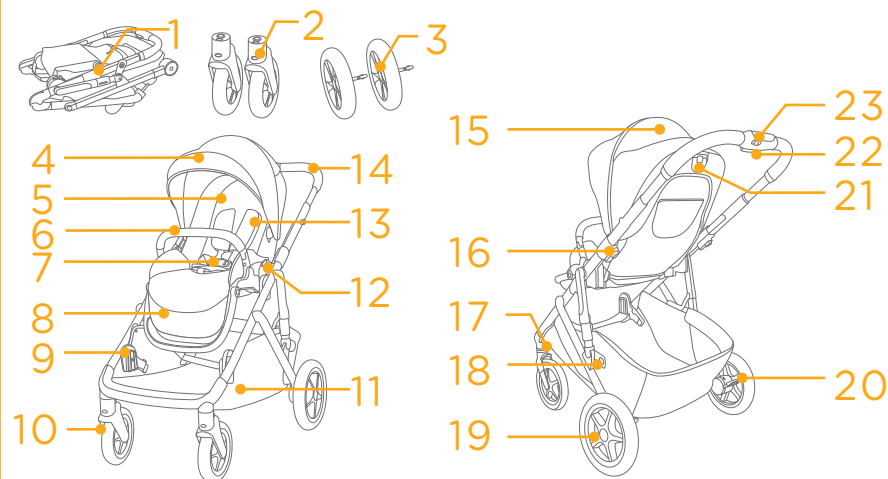 

配件 (可能不包含)

- | | |
|---------|-------|
| 1 連接器 | 2 雨篷 |
| 3 手提籃口袋 | 4 手提籃 |

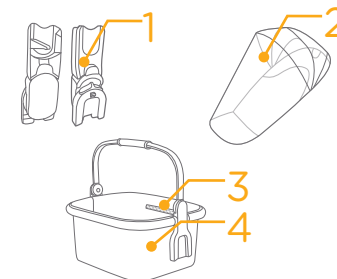 

因產品型號的不同，
並非所有手推車均附以上配件。

警告

重要：請務必依照產品說明書和警告以避免導致嚴重傷害甚至是死亡事件發生。

- ！切勿留置嬰幼兒無人照顧。
- ！使用前，確保所有鎖定裝置皆已嚙合。
- ！為避免傷害，確保展開與折疊本產品時與兒童保持距離。
- ！不要讓兒童玩弄本產品。
- ！務必隨時使用束縛系統。
- ！使用前查核座椅單元或汽車安全座椅之連接裝置是否正確嚙合。
- ！本產品僅設計供步行使用。
- ！為防止事故發生，確保手推嬰幼兒車遠離自動閉合之門(例：在火車或電梯上)。
- ！超過 15 公斤的兒童使用後向模式，或超過 22 公斤的兒童使用前向模式，不符合使用條件的寶寶會對手推車造成損害。
- ！供新生兒使用時，應使用最斜躺位置。
- ！放置與抱起嬰幼兒時，嚙合駐車裝置。
- ！請勿擺放超過10公斤的物件於置物籃，以免導致手推車不穩定而產生危險。
- ！背靠後的儲物口袋最大儲物重量為0.45公斤。
- ！手提籃的最大儲物重量為10公斤
- ！把手及/或靠背後方及/或手推嬰幼兒車側面的任何掛載將會影響手推嬰幼兒車穩定性。
- ！每個座位一次僅能乘坐一位嬰幼兒。
- ！當同時乘坐二位嬰幼兒時，必須坐於指定的位置。
- ！未經製造商認可附件不得使用。
- ！僅限使用製造商/經銷商所提供或建議的替換零件。

- ！雙座椅模式時，前座椅前向不適用6個月以下兒童。
- ！本商品不可放置於機車踏板使用，亦不可以連結器連接其他手推嬰幼兒車使用。
- ！嬰幼兒的安全是您的責任。
- ！為避免手指夾傷問題，收合及展開手推嬰兒車時，請務必小心。
- ！切勿讓嬰幼兒單獨留在手推車內而無人看護。
- ！請保留說明書以便日後使用。
- ！六個月大以下的嬰幼兒應同時使用腰部及胯部的安全帶。
- ！寶寶乘坐時，安全帶或束縛系統必須正確的扣合及使用。
- ！使用前，請確保汽車椅等裝置正確安裝。
- ！請勿允許您的嬰幼兒將手推車當玩具玩耍。
- ！使用前，請確保所有鎖定裝置都已處於鎖定狀態。
- ！本產品不適用於跑步和滑冰。
- ！當調整手推車上之任何可活動配件時，必須確定寶寶與手推車保持安全距離。
- ！保持寶寶遠離遮陽篷/雨篷以免造成窒息。
- ！請使用Joie原廠零配件。
- ！使用前請確定各部件安裝牢固以確保安全。
- ！停止車台時，手推車務必確實使用制動裝置。
- ！Joie不保固使用其它廠商提供的零配件所造成的損害。
- ！任意放置未經製造商核可之物品於車臺上將造成危險。
- ！不得附載其它的嬰幼兒、物品或附件於推車上。
- ！不可將手推車放置於馬路、坡道或危險場所。
- ！寶寶乘坐於手推車內時，不可將整個手推車往上提。
- ！使用時請扣好安全帶，以免寶寶滑入腿部開口外而造成窒息。

- ! 使用時請遠離火源、高溫、水池或電源之附近範圍。
- ! 請勿在遮陽篷上放置任何物品。
- ! 請勿將產品放置潮濕的環境中。請自然風乾手推車上的布料，並避免使用直接熱源烘乾。
- ! 請勿將嬰幼兒放到置物籃內。
- ! 如果有任何零件損壞，磨破或丟失，請停止使用該產品。
- ! 當嬰幼兒需睡眠時，請將之放置於合適的嬰兒床。
- ! 為避免窒息危險，請將小零件存放到嬰幼兒接觸不到的地方。
- ! 請注意在粗糙地面使用時，反復衝擊會損壞手推嬰兒車。
- ! 不可讓嬰幼兒站立。
- ! 座位不得乘坐二位以上嬰幼兒或附載其它物品，附件於推車上。
- ! 禁止在樓梯上使用手推車。
- ! 安全帶或束縛系統必須正確的扣合及使用。且安全帶與束縛系統的使用，不能取代成人的看護。
- ! 嬰幼兒放入或抱出手推車時，務必確認剎車已處於鎖定狀態。
- ! 使用前應確實豎立及固定各機構以確保安全。
- ! 超載、不正確的收合、使用非經核准的零配件都可能造成手推嬰兒車損壞、故障或不安全，請務必閱讀說明書。
- ! 輪胎可能會在某些表面留下黑色痕跡，特別是光滑的表面，像木地板、合層板和亞麻油地板。
- ! 請勿將任何繩索或索帶類物件懸掛於嬰幼兒頸部附近，或扣在產品及玩具上，以免導致嬰幼兒意外窒息。
- ! 使用手推車之前，請務必去掉、銷毀或是將所有附加包裝遠離嬰幼兒，以防嬰幼兒窒息。
- ! 乘載超過的重量，將會導致手推車的重度磨損以及過重的負荷。

- ! 當結合汽車椅使用時，本產品不可代替睡床使用。若您的寶寶需要睡眠時，請讓寶寶睡在合適的睡床上。
- ! 安全帶扣具組含有磁鐵，會影響某些醫療器材的運作。若您的孩子有使用這類醫療器材，禁止磁鐵靠近孩子與醫療器材，請勿使用此推車。請與Joie聯繫進一步討論方案。
- ! 請注意安全帶扣具組中的磁鐵可能與某些電子設備產生作用。

產品組裝 (圖片請參閱說明書 1-16 頁)

組裝及使用手推車前，請先閱讀說明書全文，並按照說明書指示進行操作。

打開手推車

見圖① - ④

推開收合鉤①，然後將車手向上方拉起②③，聽到“咔嚓”聲表示車架已打開到位。

！ 使用手推車前務必確保車架已打開到位。

組裝& 拆卸前輪

見圖⑤ - ⑥

組裝& 拆卸後輪

見圖⑦ - ⑨

手推車組裝完成後如⑩所示

產品操作

調整背靠角度

見圖⑪

依不同使用需求，背靠共有4個段位可供調節。

調高或調低背靠角度，抬起背靠調整拉桿，同時向上或向下調整靠背到合適的角度⑪

！ 調整背靠角度時，請勿按壓⑪ - 3中間的釋鎖按鈕。

！ 確保背靠角度調整到合適角度後，方可使用。

！ 背靠後的儲物口袋最大儲物重量為：0.45kg

使用安全扣

見圖⑫ - ⑬

鬆開安全扣

按下母扣上的按鈕，安全扣會自動鬆開⑫

扣合安全扣

將肩帶扣插入腰帶扣⑬ - 1，再將他們與母扣平齊，便會自動吸附扣合⑬ - 2，聽到“咔嚓”聲表示扣合到位⑬ - 3

！ 為防止寶寶摔跌，寶寶乘坐時必須繫上安全帶。

！ 請牢牢地繫上安全帶，並注意寶寶與安全帶之間須可以放進一個手掌的厚度。

！ 請勿交叉肩帶，以免對寶寶頸部造成壓迫。

使用肩帶和腰帶

見圖 14 - 19

！ 寶寶坐進手推車後，請確認肩帶孔高度和肩帶及腰帶的長度是否合適，以免寶寶於使用時意外跌出。

14 - 1 肩帶固定栓

14 - 2 調整扣

較大的寶寶使用時，請使用肩帶固定栓和最上方的肩帶孔；

較小的寶寶使用時，請使用肩帶固定栓和最下方的肩帶孔。

調整肩帶固定栓位置時，將背靠後方的肩帶固定栓放置水平、短邊朝前，從肩帶孔穿出 17，再從背靠前方將肩帶固定栓穿過最接近寶寶肩膀的肩帶孔 18

將調整扣上下滑動，可調節肩帶長度 19 - 1。按壓按鈕 19 - 2，同時往外拉安全扣內側或外側的腰帶，可調節腰帶長度 19 - 3

使用扶手

見圖 20 - 22

調節小腿靠支撐板

見圖 23 - 24

依不同使用需求，小腿靠共有2個段位可供調節。

段位調低時，按壓小腿靠兩側的調整按鈕 23 - 1，同時向下調節小腿靠支撐板 23 - 2

段位調高時，將小腿靠支撐板由下往上推即可。聽到“咔噠”聲表示小腿靠支撐板卡合到位。

前輪定向

見圖 25

前輪鎖定或釋鎖如圖 25

使用小秘訣

當在碎石路面或不平路面推行時，建議鎖定前車輪，便能更輕鬆地操控手推車。

使用剎車踏板

見圖 26 - 27

準備剎車時，踩下剎車踏板，指示器顯示紅色 26

打開剎車時，再次踩下剎車踏板，指示器顯示綠色 27

使用小秘訣

手推車停止前進時，請踩下剎車踏板。

使用遮陽篷

見圖 28 - 31

打開或者收攏遮陽篷，將遮陽篷往前拉或往後翻即可 28

防止寶寶被陽光直射，可以完全打開遮陽篷，拉開拉鏈 29，將遮陽篷往前拉即可。

透過遮陽篷上的天窗，可以看到寶寶 30

移除遮陽篷如圖 31

調整車手

見圖 32

車手共有5個段位可供調節。

調整座椅高度

見圖 33

座椅共有3個段位可供調節。

按壓座椅高度調整按鈕並向上拉座椅可以使座椅升高或者向下推座椅可以使座椅降低 33

調整座椅方向

見圖 34 - 41

調整座椅方向可以使媽媽與寶寶相互面對面。

按壓座椅兩側釋鎖按鈕，同時提起座椅，改變座椅方向，然後插入座椅底座。

兩個座椅底座必須如圖 36 所示保持水平。如座椅底座未保持水平 37 & 38，請需要調整至水平 39

使用肩帶護片和胯帶護片

見圖 42

肩帶護片和胯帶護片可直接從織帶上取下，反之即可組裝。

收合手推車

見圖 43 - 49

- ！ 收合手推車前，請先收攏遮陽篷。
- ！ 按壓中間的釋鎖按鈕可以收合座椅 43 - 1
- ！ 除了車手調到最高檔位，手推車收合後可站立。
- ！ 當前輪定向鎖定時，請勿收合手推車。
- ！ 手推車收合時收合鉤會自動鎖定 47 49

座椅選擇

見圖 50 - 53

嬰兒車可以雙模式或單模式使用。當車架與座椅(versiti兄弟座椅)、手提籃、Joie汽車椅(i-Sung 2, gemm, i-Gemm 3, i-Level recline, sprint and i-Level Pro)配合使用時，請參考以下警告：

- ！ 並非所有配件都包含在型號內，並非所有模式都能允許。
- ！ 使用雙模式時，必須將上座椅底座調整到最高位置或中間位置。上座椅底座的具體位置請參考圖 50
- ！ 使用雙模式時，下座椅使用前向時，適用範圍為6-48個月；上座椅使用後向時，適用範圍為6-36個月 50 - 1
- ！ 使用單模式時，只能與上座椅底座一起使用。座椅或汽車椅必須調整到中間或最低位置，手持籃只能調整到最低位置 51 52
- ！ 如圖所示 53，請勿將嬰兒車車架與座椅、手提籃或汽車椅一起使用。

使用配件

因產品型號的不同，規格會有所不同。並非所有手推車均附以下配件。

使用手提籃

見圖 54 - 56

當與手提籃配合使用時，請參考以下警告：

- ！ 安裝手提籃前請先打開手提籃兩邊的座椅底座 56
- ！ 請勿收合已安裝手提籃的手推車。

在上座椅底座使用汽車椅

見圖 61 - 66

當與Joie汽車椅配合使用時，請參考以下警告：

- ！ 連接器上的字母需與車架塑膠上的字母一致 61
- ！ 聽到“咔嚓”聲表示連接器卡合到位。
- ！ 調整連接器可以調整汽車椅的角度 63
- ！ 連接器有3個段位可供調節，使用汽車椅時，當寶寶的頭低於腳，請勿使用此產品。
- ！ 請勿收合已安裝汽車椅的手推車。
- ！ 關於使用汽車椅有任何問題，請參考汽車椅說明書。

在下座椅底座使用汽車椅

見圖 67 - 70

當與Joie汽車椅配合使用時，請參考以下警告：

- ！ 使用前請先拉出車架兩邊的下座椅底座 67
- ！ 按壓車架兩邊的按鈕可收合下座椅底座 68
- ！ 連接器上的字母需與車架塑膠上的字母一致 69
- ！ 聽到“咔嚓”聲表示連接器卡合到位。
- ！ 調整連接器3個段位可以調整汽車椅的角度 63
- ！ 使用汽車椅時，當寶寶的頭低於腳，請勿使用此產品。
- ！ 請勿收合已安裝汽車椅的手推車。
- ！ 關於使用汽車椅有任何問題，請參考它們的說明書。

使用雨篷

見圖 71

將雨篷套到車架上。

- ！ 使用雨篷時，請隨時注意並確認雨篷內有良好的通風。
- ！ 不使用雨篷時，請先確認雨篷已清潔並乾燥，再收納。
- ！ 請勿收合已罩上雨篷的手推車。
- ！ 天氣炎熱時，請勿將寶寶放在裝有雨篷的手推車內。

保養常識

見圖 72

- ! 清洗座布時，請使用溫水清洗，請勿漂白。具體請參考手推車上洗滌標版內容。
- ! 清洗車架(包括束縛系統)：僅能使用中性清潔劑及溫水洗滌，請勿使用漂白劑。清洗後用吸水的布擦幹防止生鏽。
- ! 隨時檢查您的手推車，並隨時更換或修理鬆弛磨損的零件、脫落的材料或車縫線。
- ! 隨時檢查束縛系統的日字扣，扣具和整個安全帶(包括任何連接點)是否完好無損。如有任何磨損，裂紋或損壞情況。請停止使用。
- ! 過度曝曬於陽光下，可導致手推車老化或變形。
- ! 手推車潮濕時，請打開手推車及遮陽篷，待干燥後再收合起來。
- ! 如果輪子發出“吱吱”聲，可加油(WD-40，防鏽油或縫紉機油)潤滑。請將潤滑油點入輪軸及軸孔 72 之間，此步驟為重要的保養須知。
- ! 在海邊使用手推車時，務必於使用過後清除沙粒，以做好完善的清洗。

延長保固服務

請於購買起一個月內至奇哥官網進行登錄，登錄成功後即享有商品延長一年保固服務。



 
NOTE

JoieTM signature

versitiTM

Instruction Manual

Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

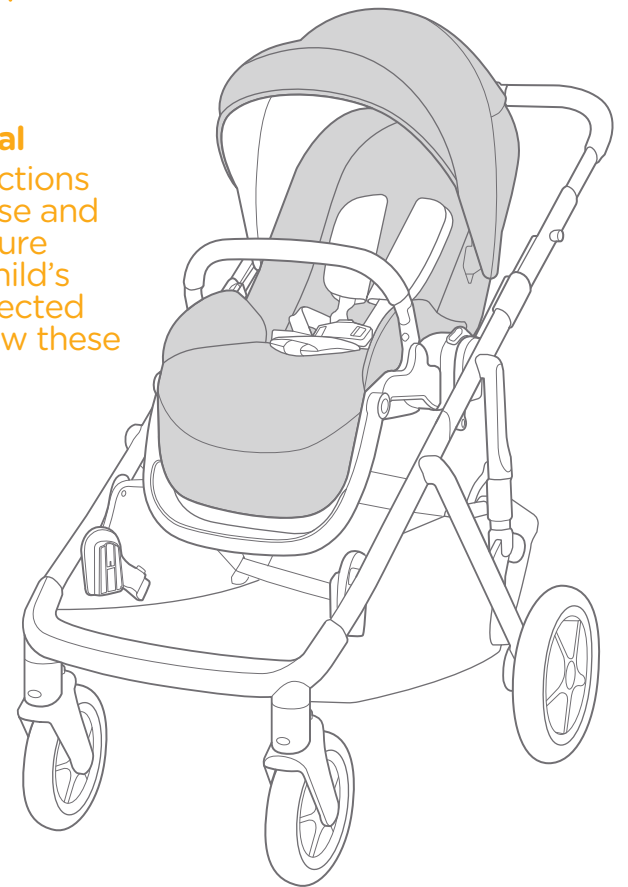

GB Welcome to Joie™

Congratulations on becoming part of the Joie family! We are so excited to be part of your journey with your little one. While traveling with the Joie versiti, you are using a high quality, fully certified stroller, approved to European safety standards EN 1888-2:2018+A1:2022. The stroller is intended for children from birth up to 15 kg with rearward facing mode and from birth up to 22 kg or 4 years whichever comes first with forward facing mode. Please carefully read this manual and follow each step to ensure a comfortable ride and best protection for your child.

IMPORTANT - READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Visit us at joiebaby.com to download manuals and see more exciting Joie products!

For warranty information, please visit our website at joiebaby.com

Contents

Figures	1-16
WARNING	41
Stroller Assembly	43
Open Stroller	43
Assemble & Detach Front Wheel	43
Assemble & Detach Rear Wheel	43
Stroller Operation	43
Adjust Backrest	43
Use Buckle	43

Use Shoulder & Waist Harnesses	43
Assemble & Detach Armbar	44
Adjust Calf Support	44
Use Front Swivel Lock	44
Use Brake	44
Use Canopy	44
Adjust Handle	44
Adjust Seat Height	44
Switch Seat	44
Use Shoulder Harness Cover and Crotch Harness Cover	45
Fold Stroller	45
Seating Option Use	45
Use Accessories	45
Use with Handheld Basket	45
Use with Infant Child Restraint on Upper Mount	45
Use with Infant Child Restraint on Lower Mount	46
Use Rain Cover	46
Cleaning and Maintenance	46

Emergency

In case of emergency or accident, it is most important to have your child taken care of with first aid and medical treatment immediately.

Product Information

Read all the instructions in this manual before using this product. If you have any further questions, please consult the retailer. Some features may vary depending on model.

Product Versiti Stroller

Suitable for

Rearward facing mode: from birth up to 15 kg

Forward facing mode: from birth up to 22 kg or 4 years
whichever comes first

Materials Plastics, metal, fabrics



Patent No. Patents pending

Made in China

Parts List

Make sure all parts are available before assembly. If any part is missing, please contact local retailer. No tools are required for assembly.

- | | | | |
|----|---------------------|----|---|
| 1 | Stroller Frame | 13 | Shoulder Harness |
| 2 | Front Wheels | 14 | Handle |
| 3 | Rear Wheels | 15 | Canopy Window |
| 4 | Canopy | 16 | Seat Height Adjustment Buttons |
| 5 | Seat Pad | 17 | Swivel Lock |
| 6 | Armbar | 18 | Storage Latch |
| 7 | Buckle | 19 | Rear Wheel |
| 8 | Calf Support | 20 | Brake Lever |
| 9 | Lower Mount | 21 | Recline Handle |
| 10 | Front Wheel | 22 | Handle Adjustment Button/One-Hand-Fold Handle |
| 11 | Storage Basket | 23 | Secondary Lock |
| 12 | Seat Release Button | | |

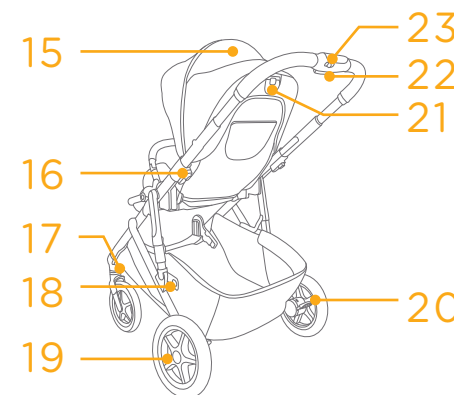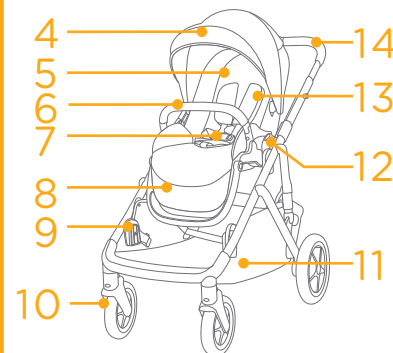  


Accessories

(May not be included)

- | | |
|---|-------------------------------------|
| 1 | Adapter (on certain models) |
| 2 | Rain Cover (on certain models) |
| 3 | Handheld Basket Pocket |
| 4 | Handheld Basket (on certain models) |

 Accessories may be sold separately or may not be available depending on region.

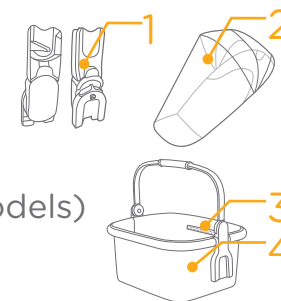

WARNING

- ! Always use the restraint system.
- ! Ensure that all the locking devices are engaged before use.
- ! Do not let the child play with this product.
- ! Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- ! Adult assembly required.
- ! Use the stroller with only one child at a time in the each seat. The stroller is intended for children from birth up to 15 kg with rearward facing mode and from birth up to 22 kg or 4 years whichever comes first with forward facing mode in the each seat.
- ! Use of the stroller with a child weighing more than 15 kg with rearward facing mode or more than 22 kg with forward facing mode will cause excessive wear and stress on this stroller.
- ! To prevent a hazardous, unstable condition, do not place more than 10kg in the storage basket.
- ! Never leave the child unattended.
- ! Never place purses, shopping bags, parcels or accessory items on the handle or canopy.
- ! Accessories which are not approved by the manufacturer shall not be used.
- ! Only replacement parts supplied or recommended by the manufacturer shall be used.
- ! To avoid injury ensure that the child is kept away when unfolding and folding this product.
- ! This product is not suitable for running or skating.
- ! Pushchair designed to be used from birth shall recommend the use of the most reclined position for new born babies.
- ! The parking device shall be engaged when placing and removing the children.

- ! For car seats used in conjunction with a chassis, this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.
- ! Carry cot shall not be used, as soon as the child is able to sit by himself, roll over and can push itself up on its hands and knees. Maximum weight of the child: 9kg.
- ! No additional mattress shall be added unless recommended by the manufacturer.
- ! Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.
- ! The maximum load of storage pocket on the back of backrest is 0.45kg (1lb).
- ! The maximum load of handheld basket is 10kg.

Stroller Assembly

(Please refer to figures on page 1-16)

Please read all the instructions in this manual before assembling and using this product.

Open Stroller

see images ① - ④

Separate storage latch from storage mount ①, then lift the handle upwards ② & ③, a click sound means the stroller is open completely.

! Check that the stroller is completely latched before continuing to use.

Assemble & Detach Front Wheel

see images ⑤ - ⑥

Assemble & Detach Rear Wheel

see images ⑦ - ⑨

The completely assembled stroller is shown as ⑩

Stroller Operation

Adjust Backrest

see image ⑪

There are 4 recline angles for the backrest.

To raise or recline the backrest, rotate the recline handle on the back of the seat, pull down on the backrest. ⑪

! Please do not press the releasing button ⑪ - 3 on the middle of the recline handle when adjusting the angle for the recline.

! Make sure the recline is set properly for use.

! The maximum load of storage pocket on the back of backrest is 0.45kg.

Use Buckle

see images ⑫ - ⑬

Release Buckle

Press the button, the buckle will release automatically. ⑫

Lock Buckle

Match the waist belt buckle with the shoulder buckle ⑬ - 1, and align them with the center buckle, the buckle can lock automatically ⑬ - 2. A "click" sound means the buckle is locked completely. ⑬ - 3

! To avoid serious injury from falling or sliding out, always secure your child with harness.

! Make sure your child is snugly secured. The space between the child and the shoulder harness is about the thickness of one hand.

! Do not cross the shoulder belts. This will cause pressure on a child's neck.

Use Shoulder & Waist Harnesses

see images ⑭ - ⑮

! In order to protect your child from falling out, after your child is placed into the seat, check whether the shoulder and waist harnesses are at proper height and length.

⑭ - 1 Shoulder harness anchor

⑭ - 2 Slide adjuster

For larger child, use shoulder harness anchor and the highest shoulder slots. For smaller child, use shoulder harness anchor and the lowest shoulder slots.

To adjust the position of the shoulder harness anchor, turn the anchor to be level with the side facing forward. Thread it through the shoulder harness slot from back to front ⑰. Rethread it through the slot that is closest to child's shoulder height. ⑱

Use slide adjuster to change the harness length. ⑱ - 1

Press the button ⑱ - 2, while pulling the waist harness to proper length. ⑱ - 3

Assemble & Detach Armbar

see images ⑲ - ⑳

Adjust Calf Support

see images ㉑ - ㉒

The calf support has 2 positions.

To lower calf support, press the adjustment buttons on both sides of the calf support ㉑ - 1, and rotate the calf support downwards. ㉑ - 2

To raise the calf support, push it upwards. A "click" sound means the calf is locked completely.

Use Front Swivel Lock

see image ㉓

Front wheel locked or unlocked status as ㉓.

Tip It is recommended to use swivel locks on uneven surfaces.

Use Brake

see images ㉔ - ㉕

To lock wheels, step the brake lever downwards, the indicator will show red. ㉔

To release wheels, step the brake lever downwards again, the indicator will show green. ㉕

Tip Always set the parking brake when stroller is not moving.

Use Canopy

see images ㉖ - ㉗

The canopy can be opened or folded, pull it toward front or back. ㉖

The canopy can be opened completely to protect your child from the sun uttermostly, just unzip the zip ㉖, and then pull the canopy toward front.

There is a window on the canopy, through which you can view your baby. ㉗

The canopy can be detached show as ㉗

Adjust Handle

see image ㉘

The handle has 5 positions.

Adjust Seat Height

see image ㉙

The seat has 3 positions.

Press the seat height adjustment buttons and pull up to increase or push down to decrease the seat height. ㉙

Switch Seat

see images ㉚ - ㉛

The seat can be switched which makes mother and child can face to face with each.

Slide the seat release buttons while lifting the seat. Turn the seat to reverse direction and then insert the seat to seat mounts.

Both seat mounts need to be level shown as ㉚, if the situations shown as ㉛ & ㉛ happen, please press the seat height adjustment button and pull up or push down to adjust the seat mount to make sure the both seat mounts to be level. ㉚

Use Shoulder Harness Cover and Crotch Harness Cover

see image ⑫

The shoulder harness cover or crotch harness cover can be removed from the webbing.
To assemble shoulder harness cover and crotch harness cover in reverse steps.

Fold Stroller

see images ⑬ - ⑭

- ! Please fold the canopy before folding the stroller.
- ! The button on the middle of the recline handle is used for folding the seat. ⑬ - 1
- ! The folded stroller can stand except the handle is in the highest position.
- ! Please do not fold the frame when front wheel swivel lock is locked.
- ! The storage latch will automatically hook onto the storage mount, then the stroller is folded and locked completely. ⑭ & ⑬

Seating Option Use

see images ⑮ - ⑯

The stroller can be used with double mode or single mode. When using the stroller frame with seat (versiti sibling seat), handheld basket, Joie carry cot (ramble, ramble xl and calmi) or Joie infant child restraint (i-Sung 2, gemm, i-Gemm 3, i-Level recline, sprint and i-Level Pro), please refer to the following instructions.

- ! NOT all accessories are included on some models and not all modes are allowed.
- ! When use the double mode, the upper mount must be adjusted to highest position or middle position. Please refer to fig. ⑮ for specific position for upper mount.
- ! When use the single mode, only be used with the upper mount. Seat, carry cot or infant child restraint must be adjusted to middle or lowest position, handheld basket must be adjusted to lowest position only. ⑮ & ⑯
- ! DO NOT use the stroller frame with the seat, handheld basket, carry cot or infant child restraint shown as ⑯

Use Accessories

Accessories may be sold separately or may not be available depending on region.

Use with Handheld Basket

see images ⑰ - ⑱

When using with handheld basket, please refer to the following instructions.

- ! Please open the mount on both sides before attaching the handheld basket. ⑰
- ! Please do not fold the stroller when the handheld basket is still attached.

Use with Infant Child Restraint on Upper Mount

see images ⑲ - ⑳

When using with Joie infant child restraint, please refer to the following instructions.

- ! The letters on the adaptors are the same as those on the frame plastic. ⑲
- ! A “click” sound means the adaptors is locked completely.
- ! The infant child restraint angle can be adjusted with our adjustable adaptors. ㉑
- ! The adaptors has 3 positions. Please do not use the product when the baby’s head is lower than feet after attached infant child restraint.
- ! Please do not fold the stroller when the infant child restraint is still attached.
- ! If you have any problems about using the infant child restraint, please refer to their own instruction manuals.

Use with Infant Child Restraint on Lower Mount

see images ㉒ - ㉓

When using with Joie infant child restraint, please refer to the following instructions.

- ! Please pull out the lower mount on both sides before used. ㉒
- ! Lower mount can be folded by pressing buttons on both sides. ㉓
- ! The letters on the post adaptors are the same as those on the frame plastic. ㉓
- ! A “click” sound means the adapters is locked completely.
- ! The infant child restraint angle can be adjusted of 3 positions with our adjustable adaptors. ㉓
- ! Please do not use the product when the baby’s head is lower than feet after attached infant child restraint.
- ! Please don’t fold stroller when attaching the infant child restraint.
- ! If you have any problems about using the infant child restraint, please refer to their own instruction manuals.

Use Rain Cover

see image ㉔

To assemble the rain cover, place it over the seat.

- ! When using the rain cover, please always check its ventilation.
- ! When not in use, please check that the rain cover has been cleaned and dried before folding.
- ! Do not fold the stroller after assembling the rain cover.
- ! Do not place your child into the stroller assembled with rain cover during hot weather.

Cleaning and Maintenance

see image ㉕

- ! Removable soft goods can be washed by machine. No bleach. Do not twist the seat cover and inner padding to dry with great force. It may leave the seat cover and inner padding with wrinkles.
- ! To clean stroller frame (Including restraint system), use only household soap and warm water. No bleach or detergent. Please refer to the care label for instructions on cleaning the fabric parts of the stroller.
- ! From time to time, check your stroller for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Periodically wipe clean plastic parts with a soft damp cloth. Always dry the metal parts to prevent the formation of rust if the stroller has come into contact with water.
- ! Check whether the steel plate, buckle and the entire seat belt (including any connection points) of the restraint system are intact and undamaged at any time. If there is any wear, crack or damage please stop using.
- ! Excessive exposure to sun or heat could cause fading or warping of parts.
- ! If stroller becomes wet, open canopy and allow to dry thoroughly before storing.
- ! If wheels squeak, use a light oil (e.g., Silicon Spray, antirust oil, or sewing machine oil). It is important to get the oil into the axle and wheel assembly. ㉕
- ! When using your stroller at the beach or other sandy/dusty environments, completely clean your stroller after use to remove sand and salt from mechanisms and wheel assemblies.



Allison Baby UK Ltd,
Venture Point, Towers Business Park
Rugeley, Staffordshire, WS15 1UZ

NUNA International B.V.
Van der Valk Boumanweg 178 C,
2352 JD Leiderdorp, The Netherlands

view all fine signature selections at
joiebaby.com/signature

IM-001685G