




Instruction Manual

maize mini™

compact highchair

Weight: up to 50 lb. (22.7 kg)

Age: 6 months up to 3 years

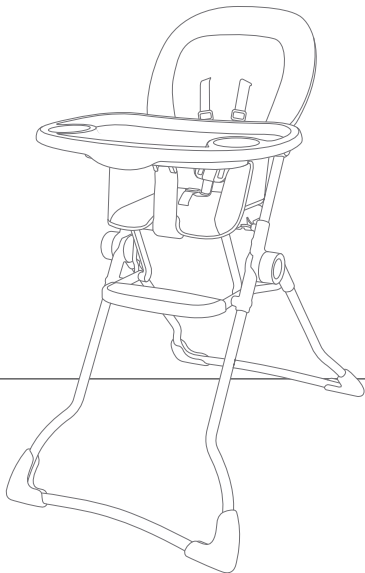

IMPORTANT!

Read the instructions in this manual before use of the product. Keep this manual for future use.

Contents:

- 3 Warranty Information
- 4 Warnings
- 8 Parts List
- 10 Assembling & Unfolding Highchair
- 12 Using Restraint Buckle
- 14 Adjusting Waist & Shoulder Harness Straps
- 16 Using Tray
- 18 Folding Highchair
- 20 Removing Seat Pad
- 22 Care & Maintenance

Child Usage Requirements

This highchair is suitable for use with children who meet the following requirements:

Weight: up to 50 lb. (22.7 kg)

Age: Able to sit up unaided (approx. 6 months), up to 3 years

Warranty Information:

Product Registration

Please fill in the information below. The model number and the date of manufacture are located on a label on the highchair frame. Fill out the pre-paid registration postcard attached to the product and mail it today. To register your product online, please visit: <https://joiebaby.com/us/register-gear>.

Model Name: _____

Model Number: _____

Date of Manufacture: _____

Date of Purchase: _____

register your
product online



Limited Warranty

We have purposely designed our high-quality products so that they can grow with both your child and your family. Because we stand by our product, our gear is covered by a custom limited warranty per product, starting from the day it was purchased. Please have the proof of purchase, model number, and date of manufacture available when you contact us. For warranty information please visit: www.joiebaby.com.

Contact

In the USA:

Joie Baby USA

Consumer Service

70 Thousand Oaks Blvd.
Morgantown, PA 19543

In Canada:

Joie Bébé Canada

Consumer Service

PO Box 96528 RPO
Brunswick, Kirkland
Quebec H9H 5L4

Email: info.us@joiebaby.com • Phone: 1-866-798-7866

WARNING

Failure to follow these warnings and instructions could result in serious injury or death.

- **FALL HAZARD:** Children have suffered **SEVERE** head injuries, including skull fractures, when falling from highchairs. Falls can happen suddenly if child is not restrained properly.
- **ALWAYS** use the restraints, and adjust to fit snugly.
- **The tray is NOT** designed to hold the child in the highchair.
- **Stay near and watch** child during use.
- **NEVER** leave child unattended.
- **Child MUST be secured** in the highchair at **ALL TIMES** by the restraint system.
- **NEVER** allow child to **push away from the table**.
- **Use the highchair ONLY** for children capable of sitting upright unassisted.
- **NEVER lift and carry** child in the highchair.
- **DO NOT** use this product near stairs.
- **Adult assembly is required.**

WARNING

Failure to follow these warnings and instructions could result in serious injury or death.

- **Discontinue use** of the highchair when the child weighs more than 50 lb. (22.7 kg) or is older than 3 years, whichever comes first.
- **DO NOT** allow child to stand in or on the product.
- **DO NOT** allow children to play with or around the highchair.
- **ALWAYS** use on a flat and level floor.
- **DO NOT** place the product close to an open fire, candles, or other heat source such as a stove, heater, fireplace, electric bar fires, gas fires, and other hazards which can cause injury to your child.
- **To avoid strangulation hazard, DO NOT** place the product in any location where there are cords, such as window blinds, drapes, phone cords, etc.
- **DO NOT** use the product unless all components are correctly fitted and adjusted.
- **The seat pad and the backrest board inside MUST** be assembled and attached correctly to the highchair before use.

WARNING

Failure to follow these warnings and instructions could result in serious injury or death.


- **Regularly check** that all pieces are attached and secured properly before use.
- **NEVER** use the product if there are any loose or missing fasteners, loose joints, broken parts, or torn mesh/fabric. Check before assembly and periodically during use. Contact Joie for replacement parts. **NEVER** substitute parts.
- **Avoid Finger Entrapment:** Use care when folding and unfolding the highchair and when attaching and detaching the tray. Keep fingers clear of moving parts.
- **ALWAYS** place your child into the highchair. **DO NOT** allow them to climb into or out of the highchair.
- **DO NOT** allow the child to use the footrest as a step.
- **DO NOT** modify the product or add any attachments or accessories that are not listed in this manual.

Parts List:

Please make sure there are no missing parts. Please contact Joie Consumer Service if anything is missing.

- 1 Seat
- 2 Upper Leg Tube (x4)
- 3 Tray
- 4 Front Lower Leg Tube
- 5 Rear Lower Leg Tube
- 6 Tray Lever (x2)
- 7 Seat Pad
- 8 Footrest
- 9 Foot (x4)
- 10 Shoulder Harness Straps
- 11 Restraint Buckle
- 12 Folding Button (x2)
- 13 Tray Position Slots (x2 sets)
- 14 Seat Pad Snaps (x2 sets)
- 15 Seat Arm (x2)
- 16 Shoulder Harness Strap Anchor (x2)
- 17 Backrest
- 18 Backrest Board
- 19 Backrest Board Pocket
- 20 Seat Pad Strap Anchors
- 21 Crotch Strap Anchor

Parts List:

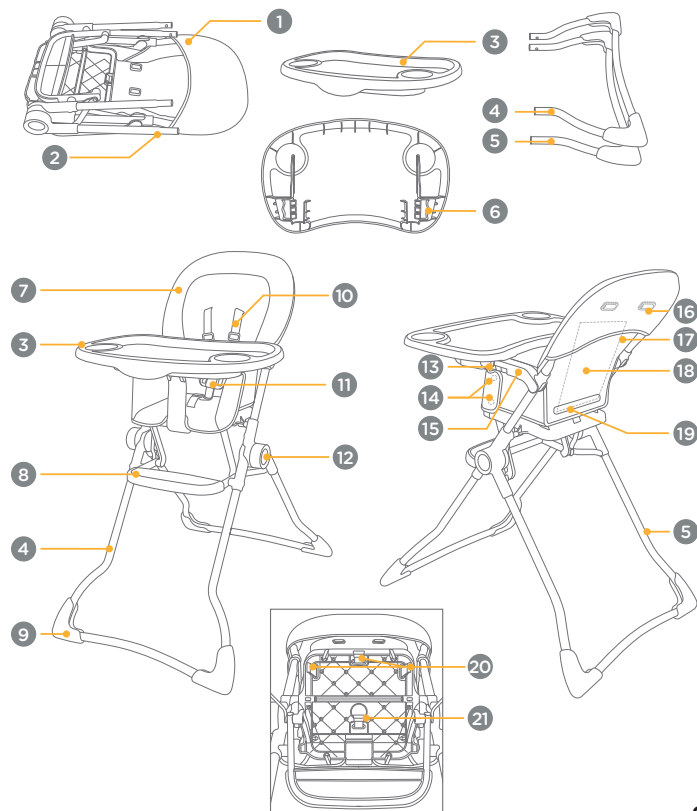

Assembling & Unfolding Highchair:

- 1 - Align the front and rear lower leg tubes with the upper leg tubes. Squeeze the buttons on the upper leg tubes as you push the ends of both lower leg tubes into the upper leg tubes.



The rear lower leg tube is wider than the front lower leg tube at the top end.

- 2 - Hear or feel a **CLICK** to ensure that the legs are fully attached.


IMPORTANT: Safety Check: Pull outward on the legs after attachment to ensure that they are securely fastened.

- 3 - Open the highchair by rotating the backrest upwards.


- 4 - Hear or feel a **CLICK** to ensure that the highchair is fully open.

WARNING! Use care when folding and unfolding the highchair. Keep fingers clear of moving parts. Ensure that the highchair is fully erected and locked before allowing your child near the highchair.


1

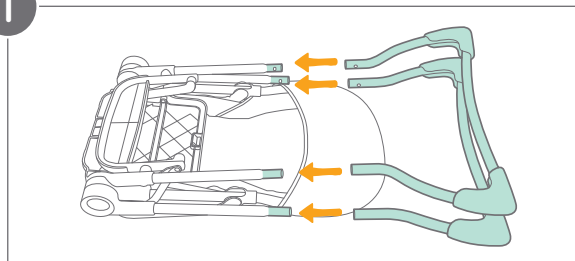

2

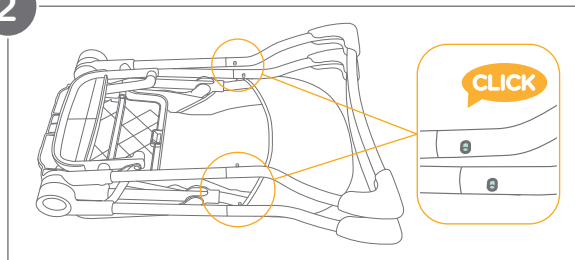

3

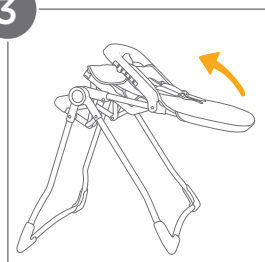

4



Using Restraint Buckle:

1 - Releasing the Restraint Buckle:

Locate the button in the center of the restraint buckle and press it firmly to release the harness straps.


2 - Locking the Restraint Buckle:

Slide the shoulder harness buckle into the waist belt buckle (A). Insert the combined buckles into the center restraint buckle (B). Hear or feel a **CLICK** to confirm that the restraint buckle is properly locked in place (C). Repeat on the other buckle.

IMPORTANT: Secure your child with the harness: **NEVER** leave your child unbuckled in the highchair. A secure harness is essential to prevent them from falling or sliding out.

Proper harness adjustment: Ensure that the harness straps are snug but comfortable. The space between the child and the harness straps should be about a 1/2 inch (1 cm).

Shoulder strap positioning: **NEVER** cross the shoulder straps. **ALWAYS** keep them straight over your child's shoulders to avoid putting pressure on the child's neck.

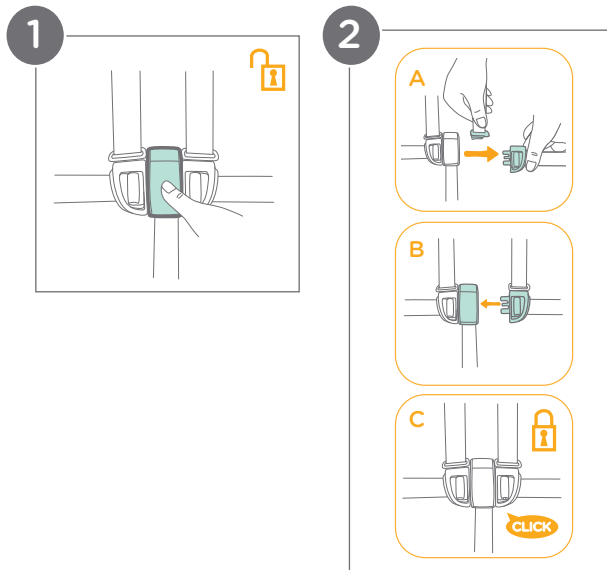


Adjusting Waist & Shoulder Harness Straps:

- 1 - To adjust the position of the shoulder harness straps, turn the harness strap anchor to be in line with the harness strap. Thread it through the shoulder harness slot from back to front.
- 2 - Rethread it through the correct slot from front to back. Ensure that the shoulder harness straps are going through the same slots in both the backrest and the seat pad and that both sides are adjusted to slots at the same height.
- 3 - Use the slide adjuster (A) to adjust the length of the shoulder harness straps. Pull the waist harness strap (B) to tighten the waist harness. Press the button (C) on the waist belt buckle and pull to loosen the waist harness strap (B).

IMPORTANT: The shoulder harness must go into the slot that is even with or slightly above the child's shoulders.

In order to protect your child from falling out after they are placed into the seat, check whether the shoulder and waist harness straps are at the proper height and length.

DO NOT adjust the harness strap anchors with a child in the highchair.

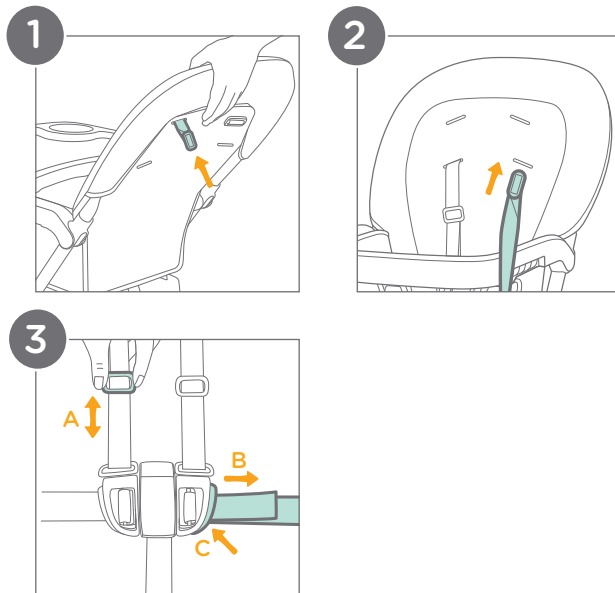

Using Tray:

The tray can be adjusted to 4 positions.

- 1 - To attach the tray, pull the tray levers outward (A) and insert the tray onto both seat arms (B).

Keeping the tray levers pulled outward, move the tray into one of the four possible tray position slots (C), and then release the tray levers.



If the tray is not automatically locked in place, move the tray forward or backward until you hear or feel a **CLICK**.

IMPORTANT: Ensure that both sides of the tray are in matching positions. Pull the tray towards you after attachment to ensure that both sides are secure.

- 2 - To remove the tray, pull the tray levers outward (D) and pull up on the tray (E).

When the tray is not in use, store it where your child cannot access it.

WARNING! Use care when attaching and detaching the tray. Keep fingers clear of moving parts.

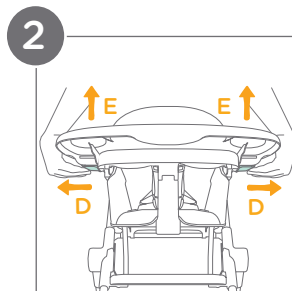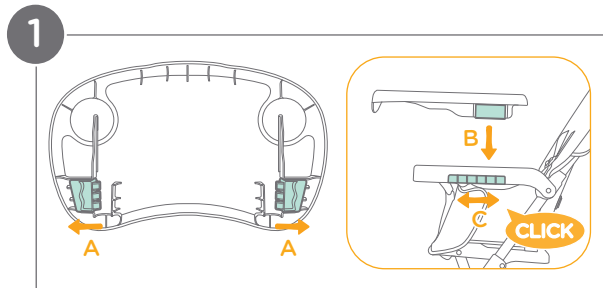


Folding Highchair:

IMPORTANT: DO NOT fold the highchair with the child in it.

- 1 - The tray may remain attached for folding. Push the folding button on both sides of highchair (A). Push the backrest down to fold (B).
- 2 - The folded highchair can stand upright.
- 3 - For more compact storage, detach the tray from the seat arms and then reattach the tray onto the front leg tubes, just under the footrest.

WARNING! Use care when folding and unfolding the highchair and when attaching and detaching the tray. Keep fingers clear of moving parts. Ensure that your child is not near the highchair during or after folding.

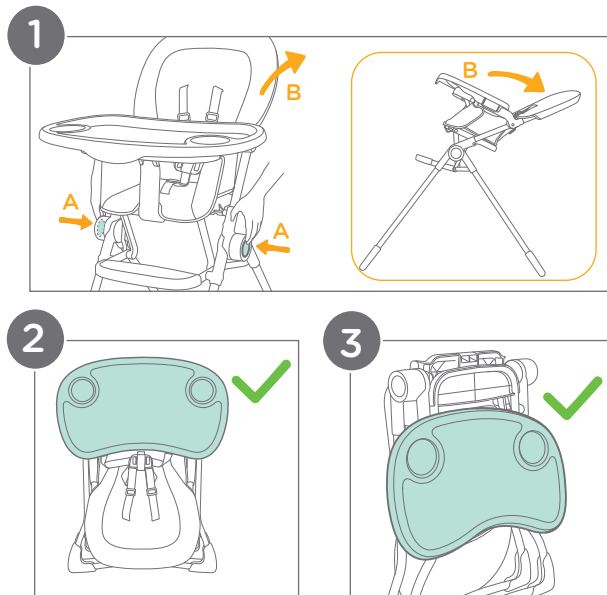

Removing Seat Pad:

IMPORTANT: Remove the tray before removing the seat pad.


- 1 - Detach the 3 seat pad strap anchors, the crotch strap anchor, and the 4 elastic bands from the bottom of the seat.
- 2 - Unfasten the 4 pairs of seat pad snaps on the sides of the seat pad.
- 3 - Detach the fabric loops from inside the seat arms.
- 4 - Pull up to remove the seat pad from the seatback.

To reattach the seat pad, follow these steps in reverse order.

Prior to washing:

- 5 - Unbuckle the harness straps and slide the shoulder harness buckles out of the waist buckles. Unthread the shoulder harness straps and the crotch strap from the openings in the seat pad.
- 6 - Open the hook and loop fasteners on the backrest board pocket and remove the backrest board. Reinsert the backrest board and close the hook and loop fasteners before reattaching the seat pad.

WARNING! The seat pad and the backrest board inside **MUST** be assembled and attached correctly to the highchair before use.

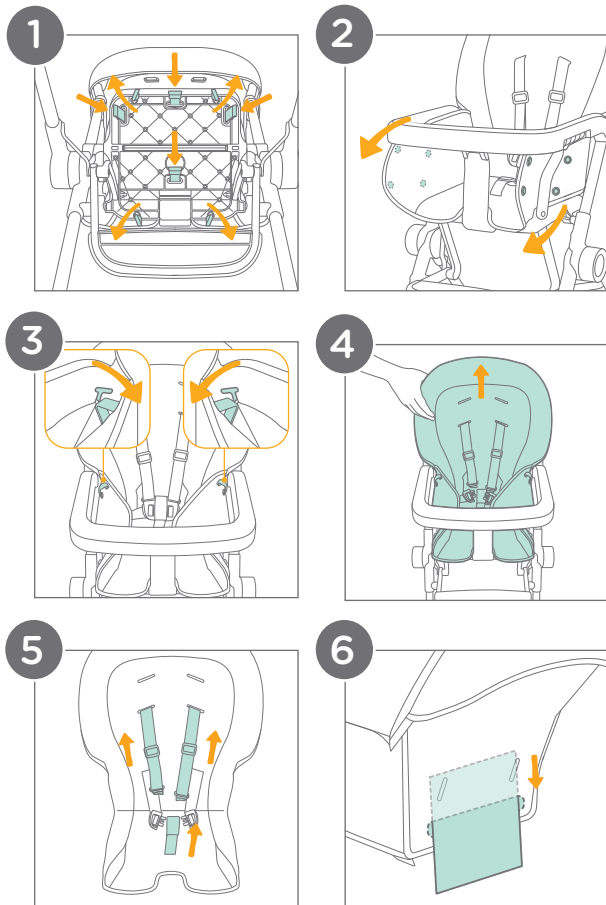

Care & Maintenance:

Cleaning:

Tray: **NOT** dishwasher safe. Wipe with a damp cloth and mild soap.

Seat pad: To wash the seat pad, refer to the care tags on the product. **DO NOT** tumble dry.

Prior to washing the seat pad, open the hook and loop fasteners on the backrest board pocket and remove the backrest board. Reinsert the backrest board and close the hook and loop fasteners before reattaching the seat pad.

Harness straps: Spot clean with a damp cloth and mild soap.

Plastic & metal parts: Wipe with a damp cloth and mild soap. Wipe off any traces of moisture with a dry cloth.

DO NOT use undiluted detergent, alcohol, bleach, or any other organic solvent to wash the product. It may cause damage to the product.

Care & Maintenance:

Maintenance:

Worn parts: Replace any worn or damaged parts. Use only Joie replacement parts.

Contact Joie Consumer Service at:

Email: info.us@joiebaby.com

Phone: 1-866-798-7866

Storage:

If the product is not in use for a long period of time, store it where your child cannot access it.



Effortlessly happy.

Helping parents be their best
with worry-free baby gear.