




Instruction Manual

pecan™

portable playard

Weight: up to 30 lb. (14 kg)

Height: up to 35 in. (89 cm)

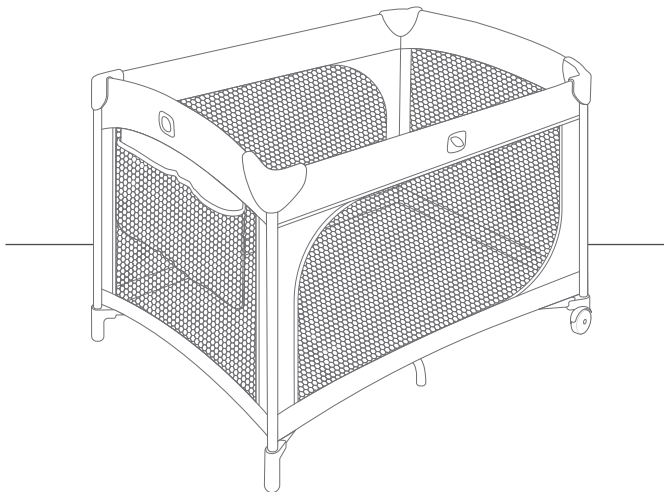

IMPORTANT!

Read all instructions before assembling and using the product. Keep instructions for future use.

Contents:

- 3 Warranty Information
- 4 Warnings
- 8 Parts List
- 10 Assembling Playard Frame
- 12 Attaching Playard Mattress
- 14 Using Wheels
- 14 Using Side Pocket
- 16 Folding Playard
- 18 Using Carry Bag
- 20 Care & Maintenance

Child Usage Requirements

This playard is suitable for use with children who meet the following requirements:

Weight: up to 30 lb. (14 kg)

Height: up to 35 in. (89 cm)

Discontinue use of the playard when the child is able to climb out, reaches the height of 35 in. (89 cm), or weighs more than 30 lb. (14 kg), whichever comes first.

Warranty Information:

Product Registration

Please fill in the information below. The model number and the date of manufacture are located on a label on the playard frame. Fill out the prepaid registration postcard attached to the product and mail it today. To register your product online, please visit: <https://joiebaby.com/us/register-gear>.

Model Name: _____

Model Number: _____

Date of Manufacture: _____

Date of Purchase: _____

register your
product online



Limited Warranty

We have purposely designed our high-quality products so that they can grow with both your child and your family. Because we stand by our product, our gear is covered by a custom limited warranty per product, starting from the day it was purchased. Please have the proof of purchase, model number, and date of manufacture available when you contact us. For warranty information, please visit: www.joiebaby.com/us.

Contact

Joie Baby USA Consumer Service Contact Info.

Address: 70 Thousand Oaks Blvd., Morgantown, PA 19543

Email: info.us@joiebaby.com

Phone: 1-866-798-7866

WARNING

Failure to follow these warnings and the instructions could result in death or serious injury.

- **Be sure the product is completely set up** before use, including the top side rails fully erected and locked in position.
- **Be sure the mattress is flat and secured** by the snaps before using the playard.
- **Ensure that the top side rails are fully erect and locked** in position whenever the child is in the product.
- **Strings can cause strangulation! NEVER** place items with a string around a child's neck such as hood strings or pacifier cords. **NEVER** suspend strings on or over the product or attach strings to toys.
- **NEVER** place the product near a window where cords from blinds or drapes can strangle a child.
- **Child can become entrapped and die** when improvised netting or covers are placed on top of the product. **NEVER** add such items to confine the child in the product.
- **When child is able to pull to a standing position**, remove large toys and other objects that could serve as steps for climbing out.

WARNING

Failure to follow these warnings and the instructions could result in death or serious injury.

- **Discontinue use of the playard** when the child is able to climb out, reaches the height of 35 in. (89 cm), or weighs more than 30 lb. (14 kg), whichever comes first.
- The playard is for playing or sleeping. When used for playing, **NEVER** leave the child unattended and **ALWAYS** keep the child in view. When used for sleeping, you must still provide the supervision necessary for the continued safety of your child.
- **ALWAYS** place baby on back to sleep to reduce the risks of SIDS and suffocation.
- **NEVER** use the product if there are any loose or missing fasteners, loose joints, broken parts, or torn mesh/fabric. Check before assembly and periodically during use. Contact Joie for replacement parts. **NEVER** substitute parts.
- Use **ONLY** the mattress provided by Joie. Using a thicker or a different sized mattress may allow a child's head to get between the mattress and side of the playard, causing suffocation. Contact Joie for a replacement mattress.

WARNING

Failure to follow these warnings and the instructions could result in death or serious injury.

SUFFOCATION HAZARD:

Babies have suffocated:

- on pillows, comforters, and extra padding.
- in gaps between product sides and a wrong-size mattress, or extra padding.
- **NEVER** add pillows, comforters, soft bedding, padding, or an extra mattress.
- **ONLY** use the mattress as described in the warnings on the product.

FALL HAZARD:

- This playard is not designed for use with topper accessories. **NEVER** add anything to the top or sides of the playard.

WARNING

Failure to follow these warnings and the instructions could result in death or serious injury.


- **NEVER** use plastic shipping bags or other plastic film as mattress covers. They can cause suffocation.
- **NEVER** use a water mattress with this product.
- **If a sheet is used with the mattress, ONLY** use one specifically designed to fit the dimensions of the mattress – 37.5 in. (95.3 cm) long x 27 in. (68.6 cm) wide. Ensure that the sheet fits securely on the mattress with at least 2 in. (5 cm) under all sides of the mattress and allows the mattress snap straps to be properly secured in playard mode.
- **ONLY** use this product on a flat floor/ground.
- **DO NOT** modify the product or add any attachments or accessories that are not listed in this manual.
- **NEVER** use this product in any configuration for more than one child at a time.
- **USE CARE** when folding and unfolding the playard. Ensure that the playard is fully erected and locked before allowing your child near the playard.

Parts List:

Please make sure there are no missing parts. Please contact Joie Consumer Service if anything is missing.

- 1 Playard
- 2 Short Top Rail (x2)
- 3 Long Top Rail (x2)
- 4 Top Rail Release Button (x4)
- 5 Storage Pocket
- 6 Wheel (x2)
- 7 Center Hub Folding Strap
- 8 Stabilizing Foot (x2)
- 9 Center Hub
- 10 Foot (x4)
- 11 Carry Bag
- 12 Carry Handle
- 13 Mattress
- 14 Mattress Storage Ring (x3)
- 15 Mattress Storage Strap (x3)
- 16 Instruction Manual Storage Pocket
- 17 Playard Mattress Strap (x4)

Parts List:

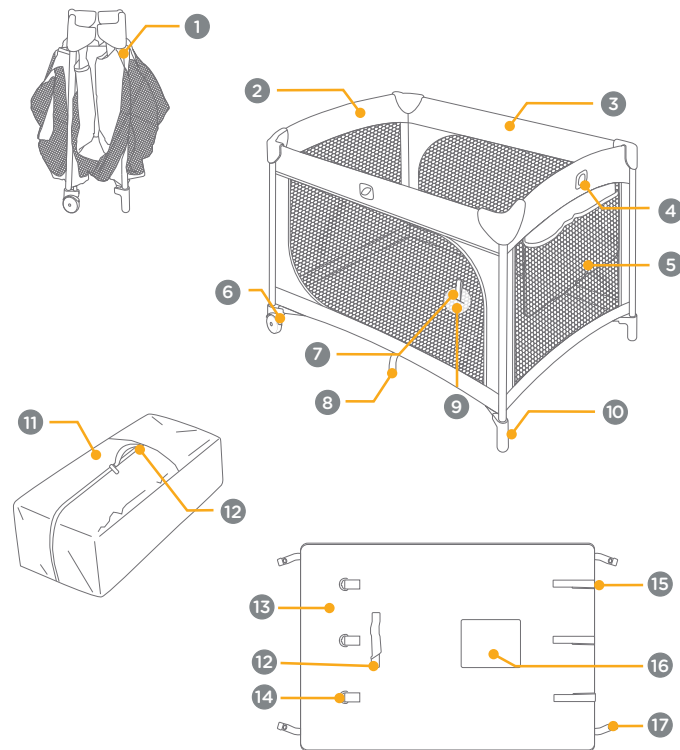

Assembling Playard Frame:

- 1 - Undo the hook and loop fasteners on the mattress storage straps. Remove the mattress from around the playard.
- 2 - Keep the center hub raised at least halfway. Pull the short top rails up until both are locked in place.
- 3 - Pull the long top rails up until both are locked in place.


 If the sides are not locking in place, pull up on the center hub folding strap while pulling up on one side at a time.

- 4 - Ensure that all top rails are locked in position, then push the center hub down to the floor.

- 5 - Push down on all top rails of the playard to ensure that they are fully erected and locked.

 Keep the mattress storage straps flat against the mattress underside while not in use, by attaching the hook and loop fasteners to each other.

WARNING! USE CARE when folding and unfolding the playard. Ensure that the playard is fully erected and locked before allowing your child near the playard.


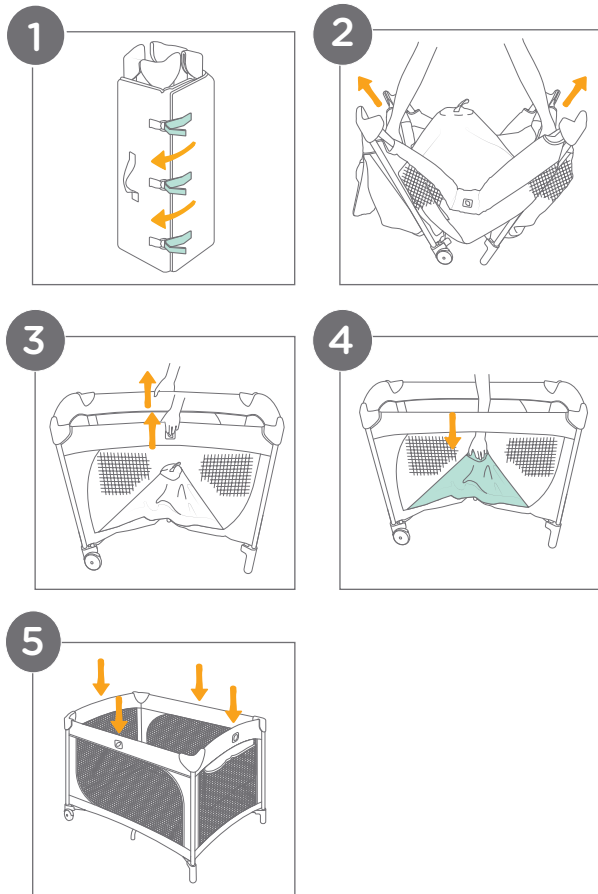


Attaching Playard Mattress:

- 1 - Place the mattress into the playard. Make sure the soft side of the mattress is facing up.
- 2 - Secure the mattress by pushing each playard mattress strap through the matching slot in the playard floor. Pull the playard mattress strap through and snap it onto the playard frame. Repeat on all the corners.

IMPORTANT: Pull up on all four corners of the mattress to ensure that the mattress is secured to the bottom of the playard.

WARNING! Discontinue use of the playard when the child is able to climb out, reaches the height of 35 in. (89 cm), or weighs more than 30 lb. (14 kg), whichever comes first.

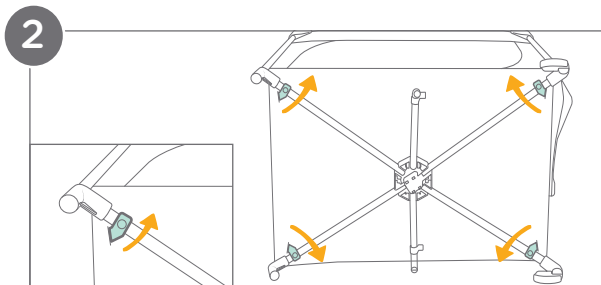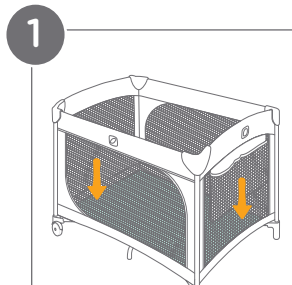


Using Wheels:

- 1 - Tilt the playard so it is resting on the wheels (A). Pull the playard to move it (B).

WARNING! DO NOT move the playard with a child in it.

Using Side Pocket:


- 2 - Store your essentials in the side pocket.

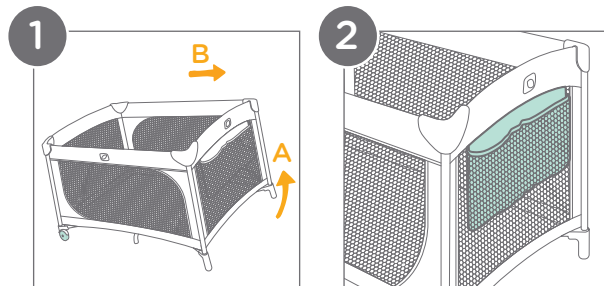

Folding Playard:

- 1 - Unsnap the playard mattress straps from the underside of the playard frame in all four corners.
 - 2 - Remove the mattress from the playard.
 - 3 - Pull up on the center hub folding strap until the center hub is raised at least halfway. **DO NOT** force fold.
 - 4 - Lift each top rail slightly (A), then squeeze each top rail release button (B) and push down to collapse each top rail (C). **BOTH** tubes on each top rail side must be released for the top rail to fold. If the top rail does not fold completely, push the top rail release button again and ensure that the center hub is high enough.
 - 5 - Fold the top rails towards the center of the playard, but **DO NOT** force. If the playard will not fold, look for a partially latched top rail. Lift the top rail slightly, then squeeze the top rail release button to release the top rail.
 - 6 - Wrap and secure the mattress around the playard. Thread the mattress storage straps through the mattress storage rings and attach the hook and loop fasteners to secure the mattress.
-  Store the instruction manual on the underside of the mattress in the storage pocket.


WARNING! USE CARE when folding and unfolding the playard. Ensure that your child is not near the playard during or after folding.

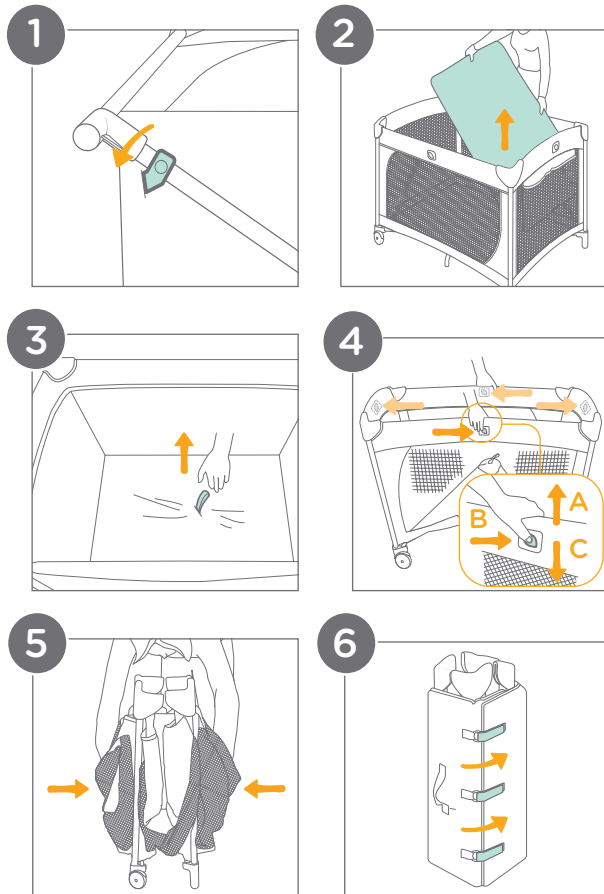

Using Carry Bag:

- 1 - Cover the folded playard with the carry bag. Ensure that the carry handle aligns with the zipper side.
- 2 - Fully zip the carry bag.
- 3 - The playard is ready to travel with you!

When not in use, store the carry bag where your child cannot access it.

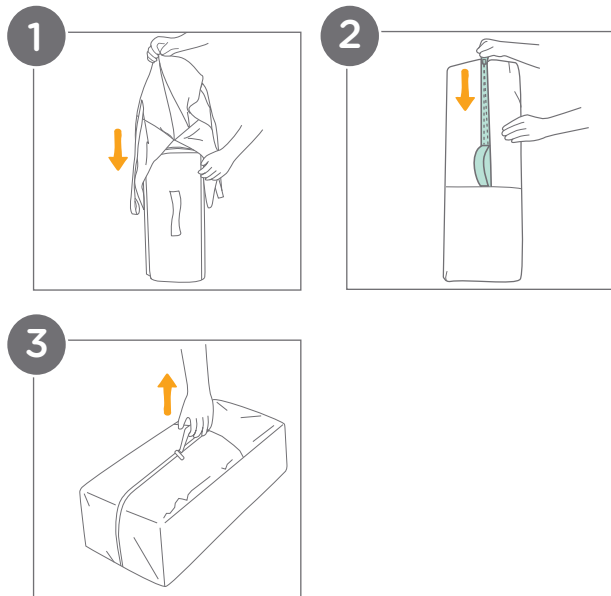

Care & Maintenance:

Cleaning:

The playard fabric is not removable.

The fabric can be spot cleaned with a sponge and soapy water.

Frame: wipe clean with a solution of warm water and mild household soap. Avoid bleach and harsh detergents.

DO NOT fully submerge in water.

Plastic parts: Periodically wipe clean with a damp cloth.

Metal parts: after contact with water, thoroughly dry the metal frame to prevent rust.

To wash the carry bag, machine wash in cold water and drip-dry.
DO NOT use bleach.

If used at the beach or outdoors, clean sand and dirt off of your playard. Sand or dirt in the top rail locks may cause damage.

Care & Maintenance:

Maintenance:

Regular inspection: Check the playard regularly for loose or missing parts. Discontinue use if parts are loose, missing, or broken.

Worn parts: Replace any worn or damaged parts. Use only Joie replacement parts.

Torn material or stitching: Repair or replace torn fabric or stitching. Use only Joie replacement fabrics.

Contact Joie Consumer Service at

Email: info.us@joiebaby.com • Phone: 1-866-798-7866

Storage:

Extreme weather exposure: Avoid excessive sun or heat exposure to prevent fading or warping of parts. Avoid storing outside or in cold conditions.

If the playard is not in use for a long period of time, store it where your child cannot access it.



Effortlessly happy.

Helping parents be their best
with worry-free baby gear.