

Joie™

signature

elipto™












stroller






EN Instruction Manual








IMPORTANT - READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.












Stroller Assembly


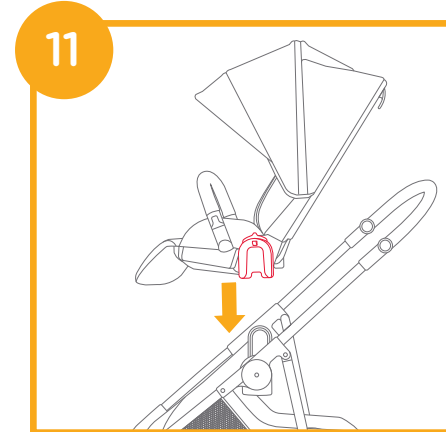
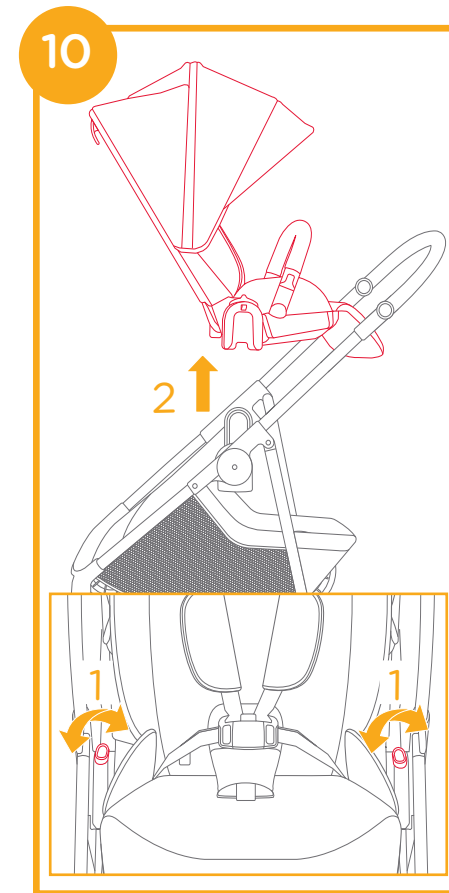
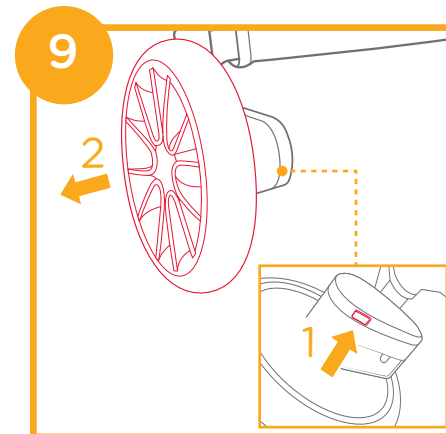
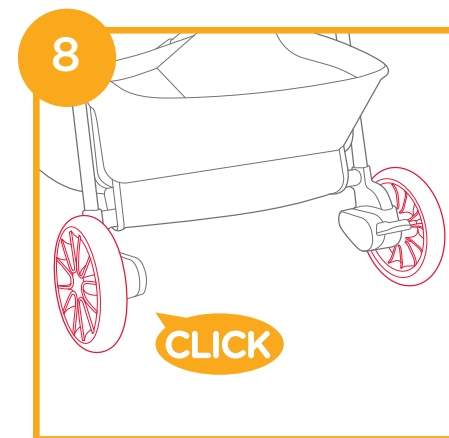
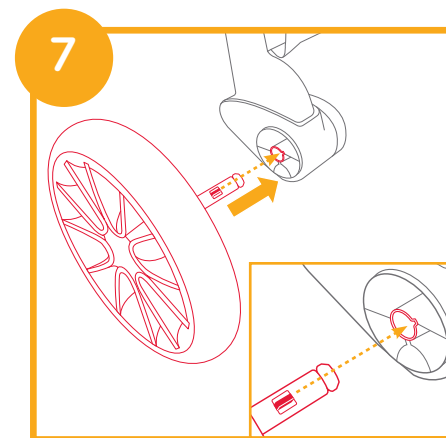
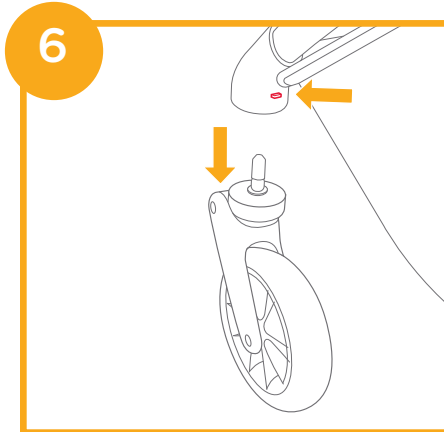
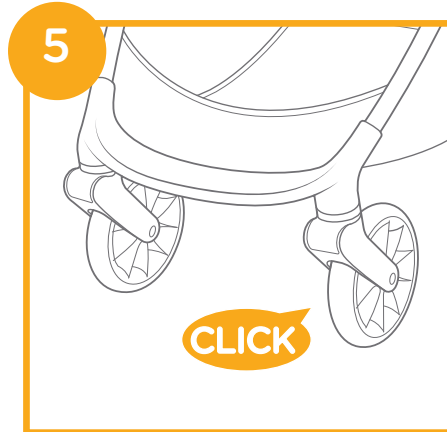
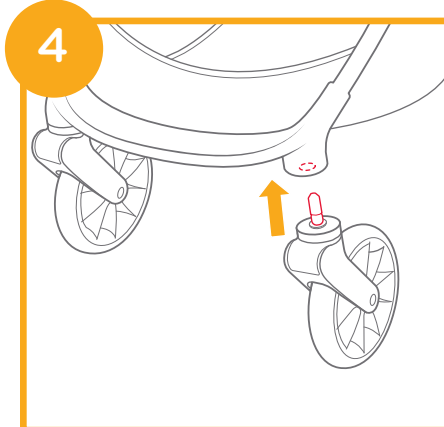
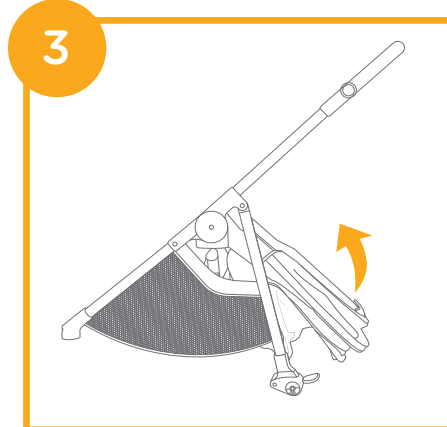
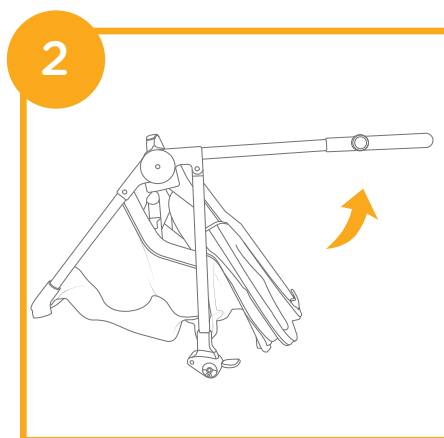
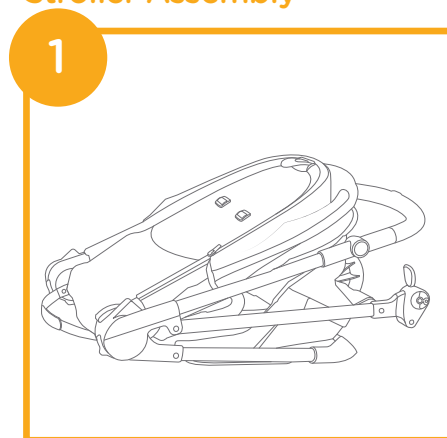


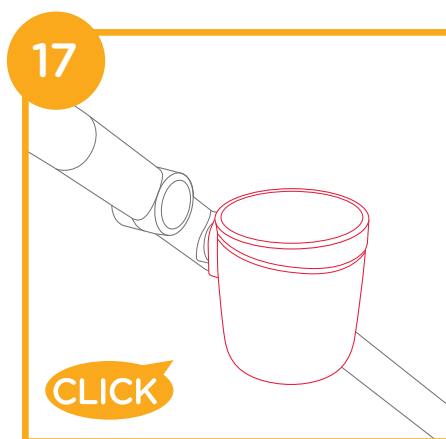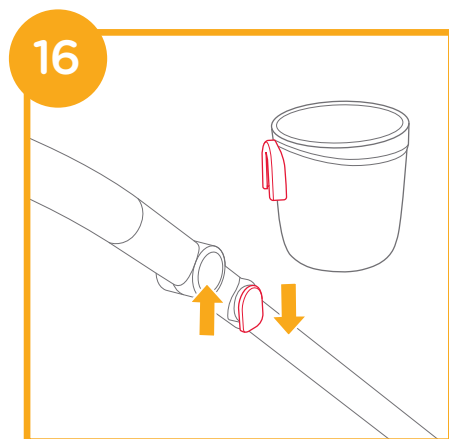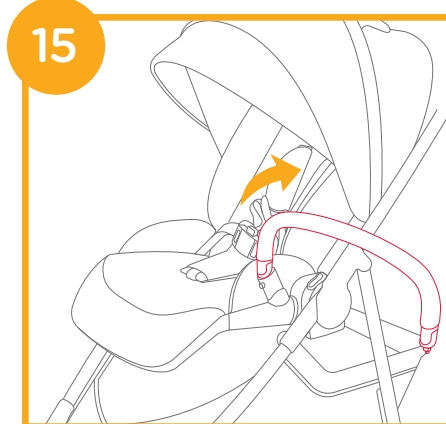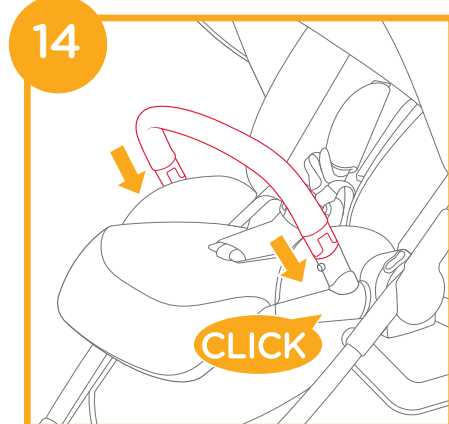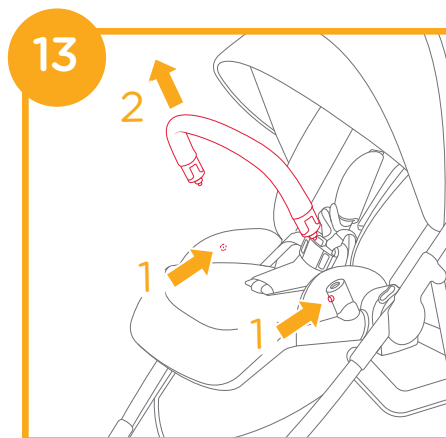

Stroller Operation







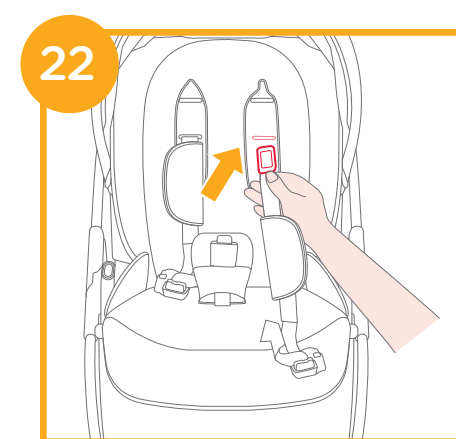
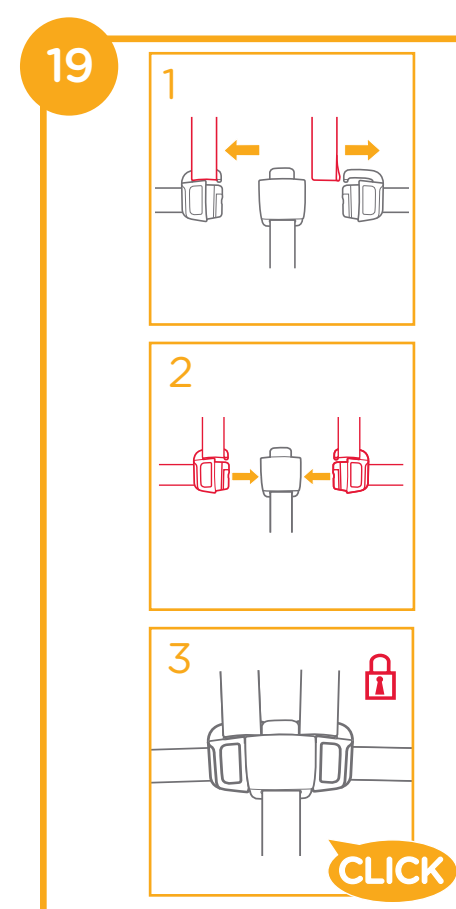
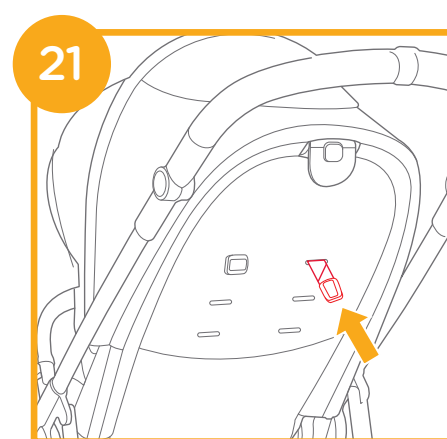
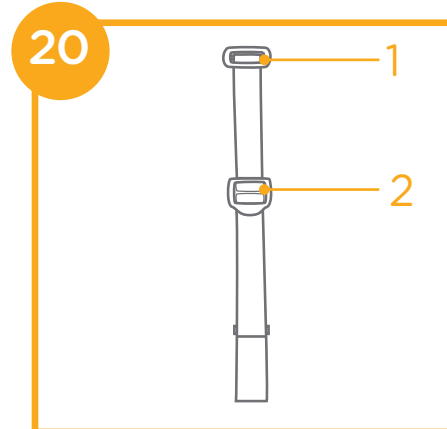
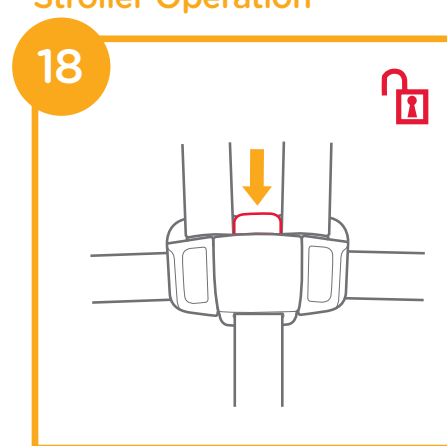


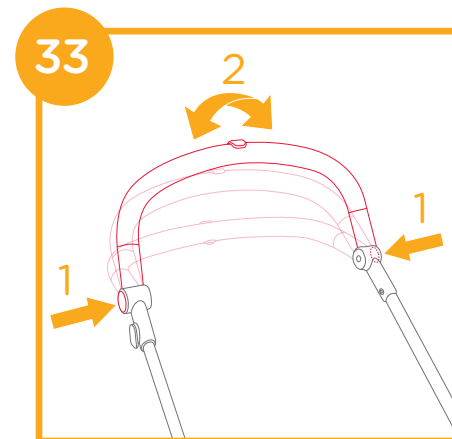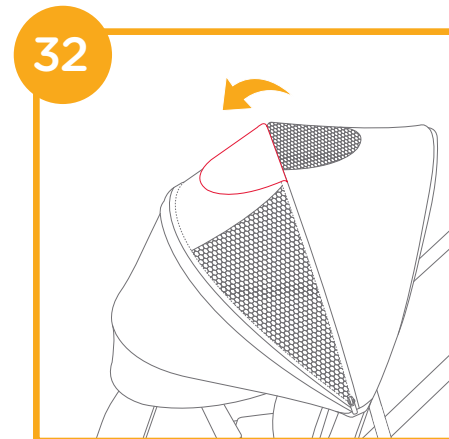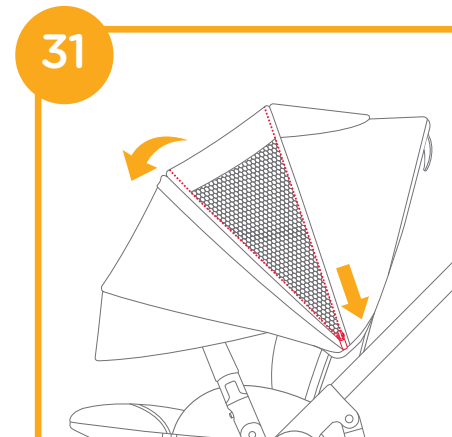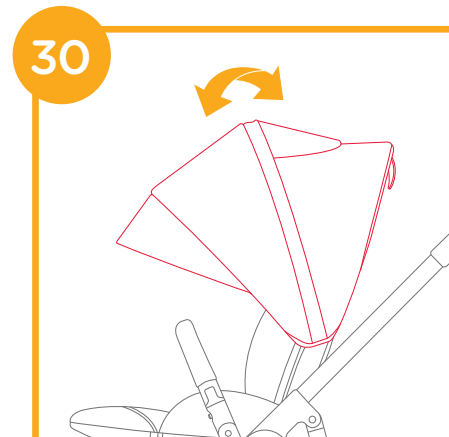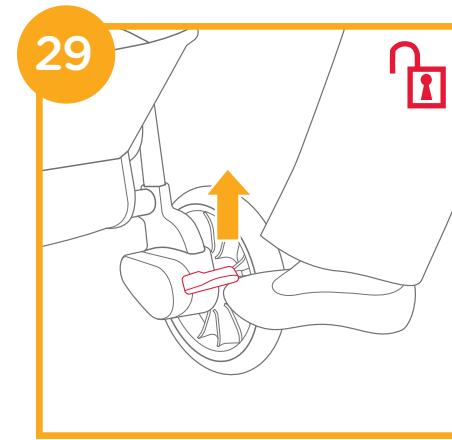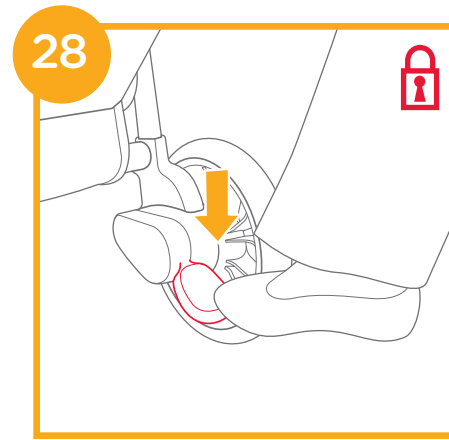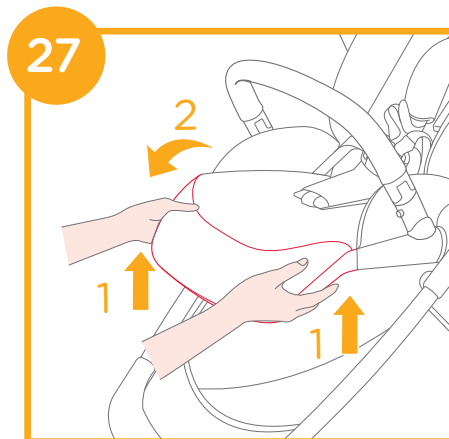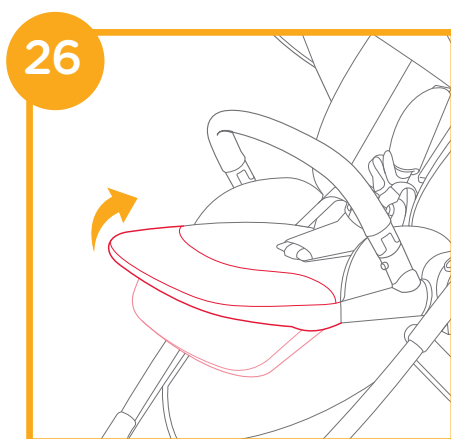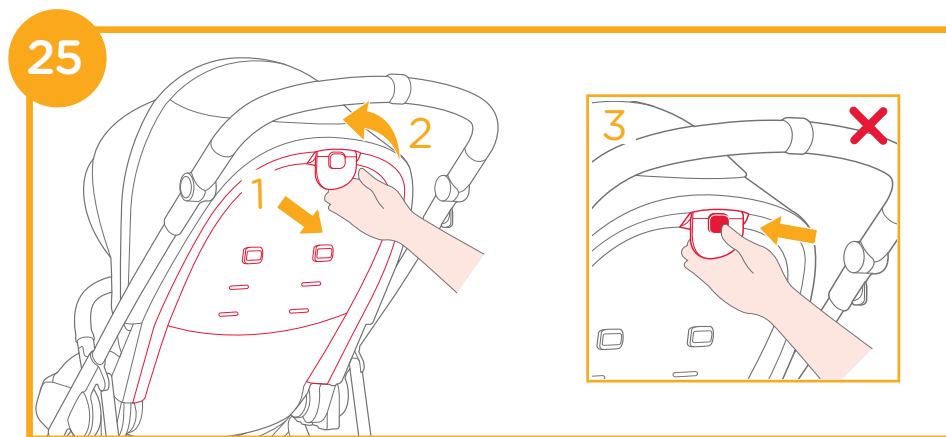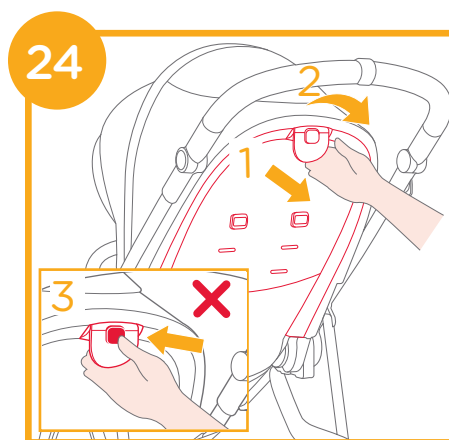
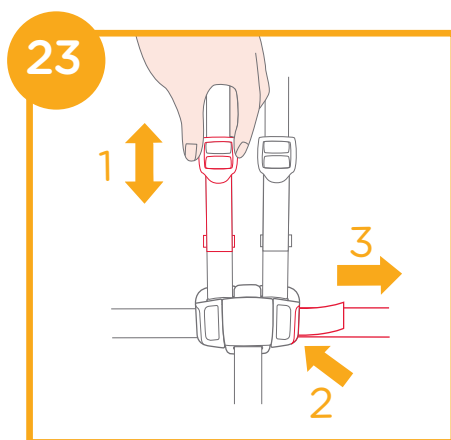


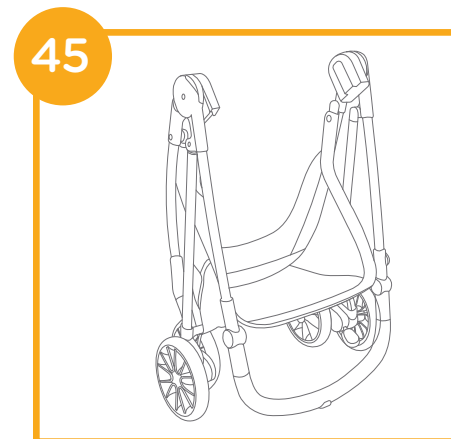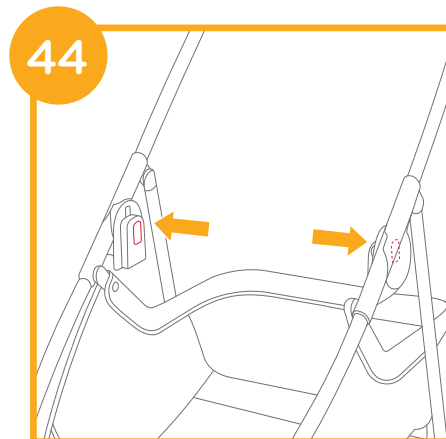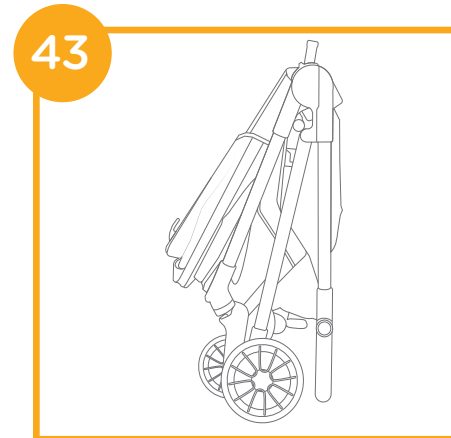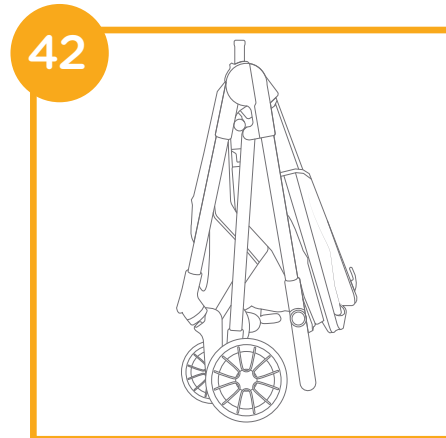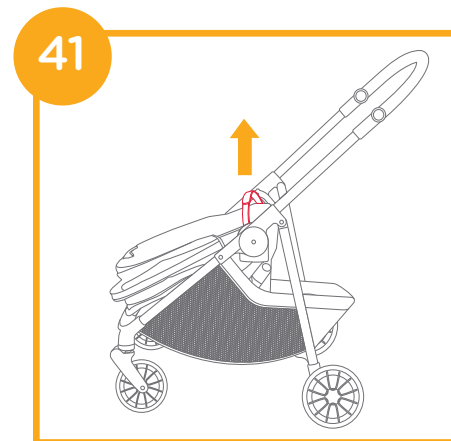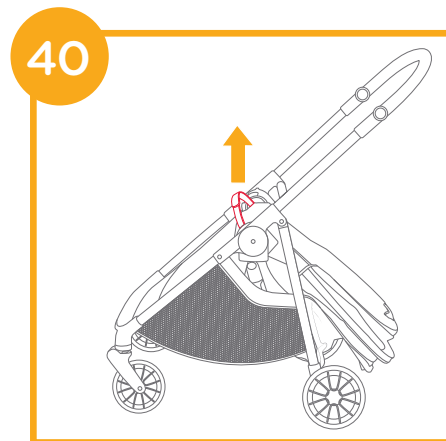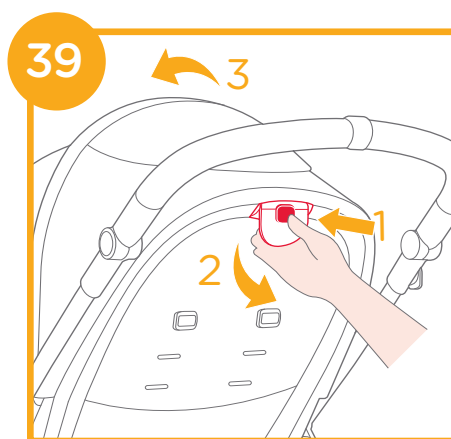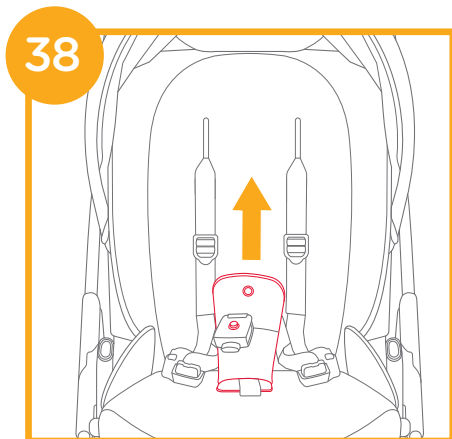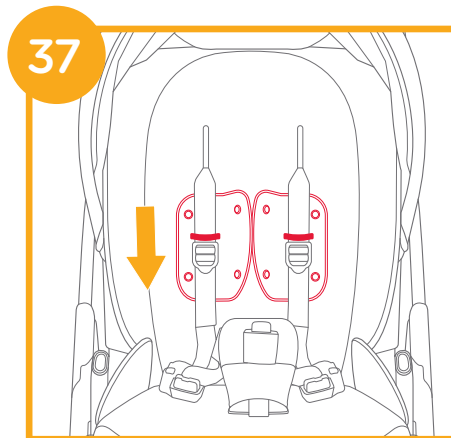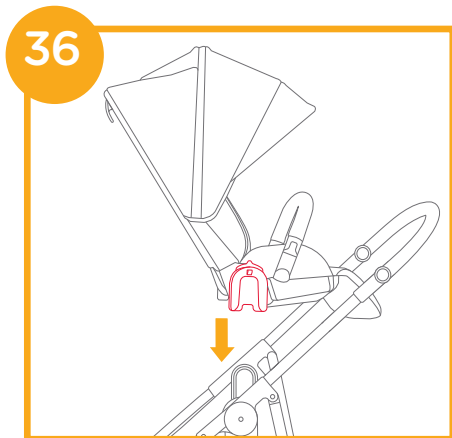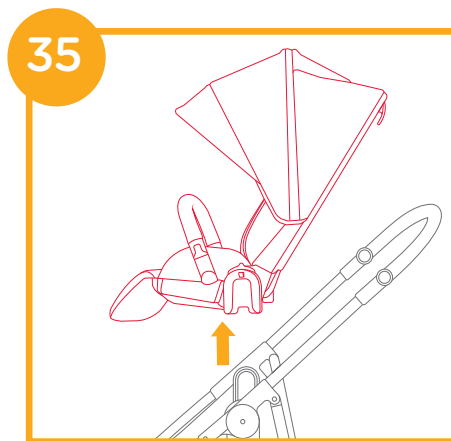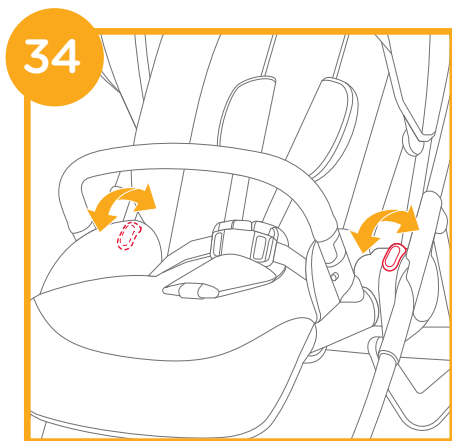









Accessories (May not be included in purchase)

Accessories may be sold separately or may not be available depending on region.

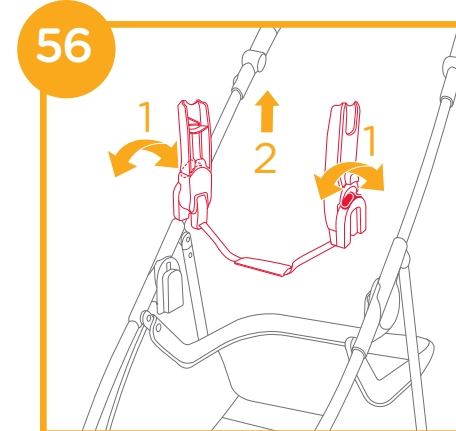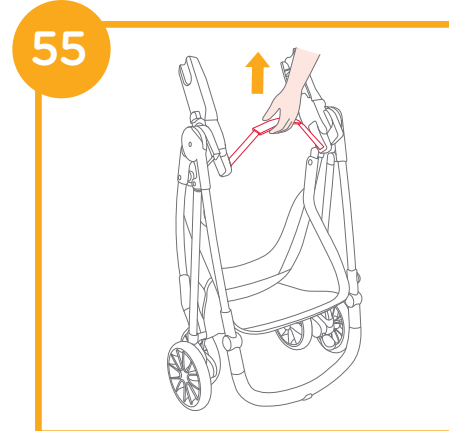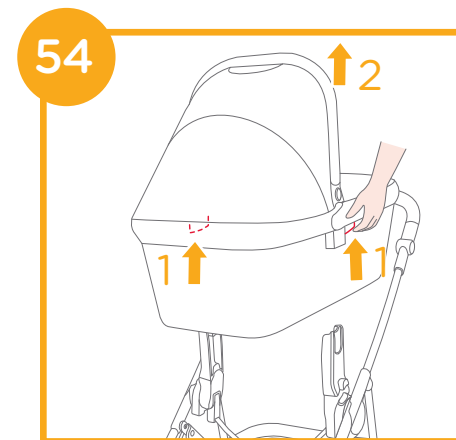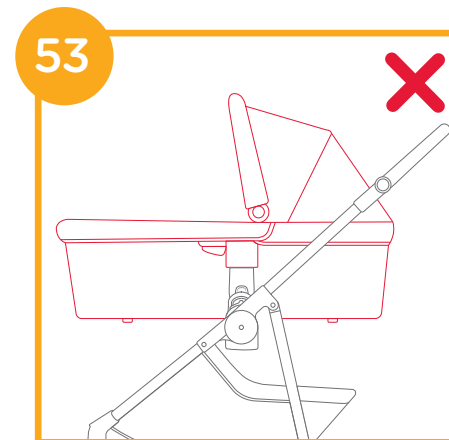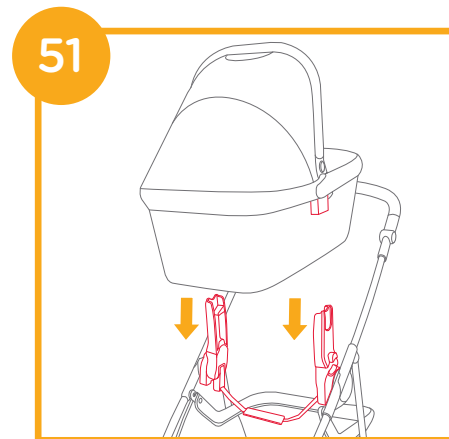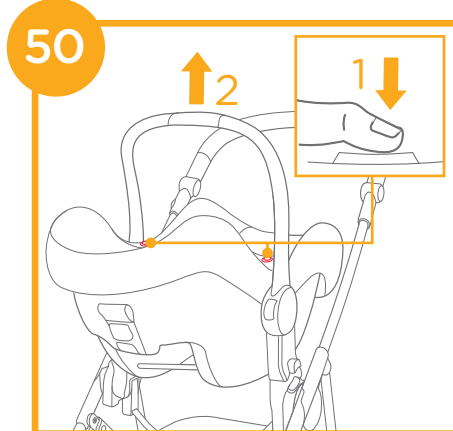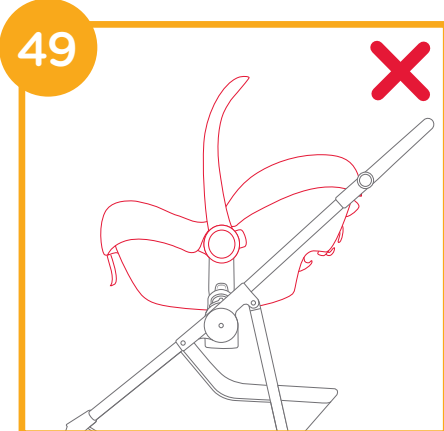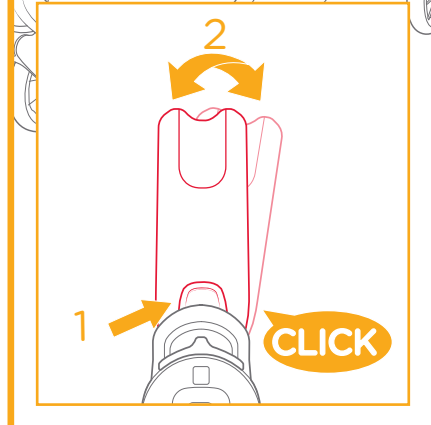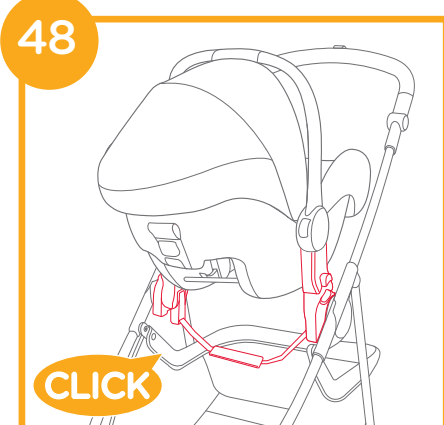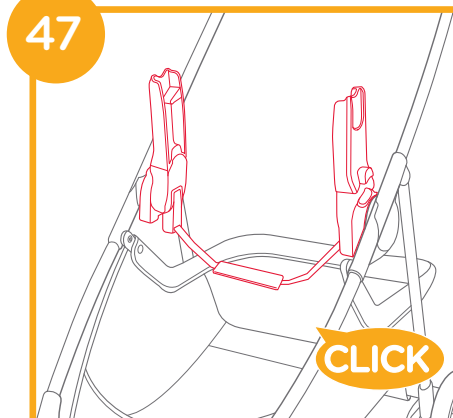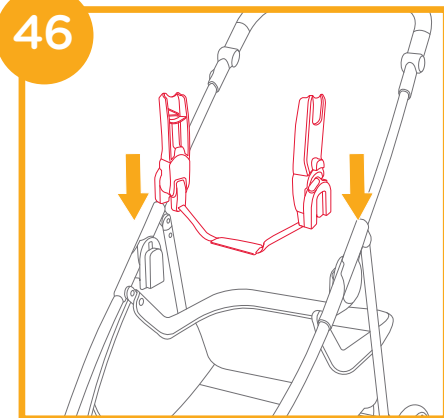


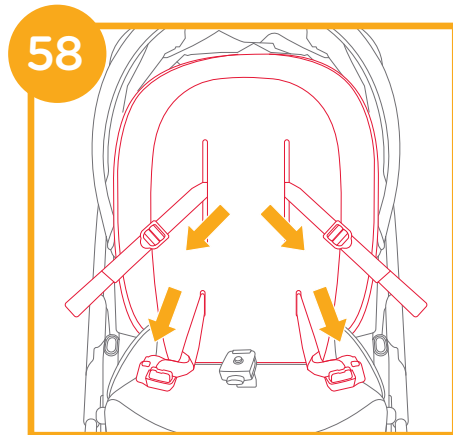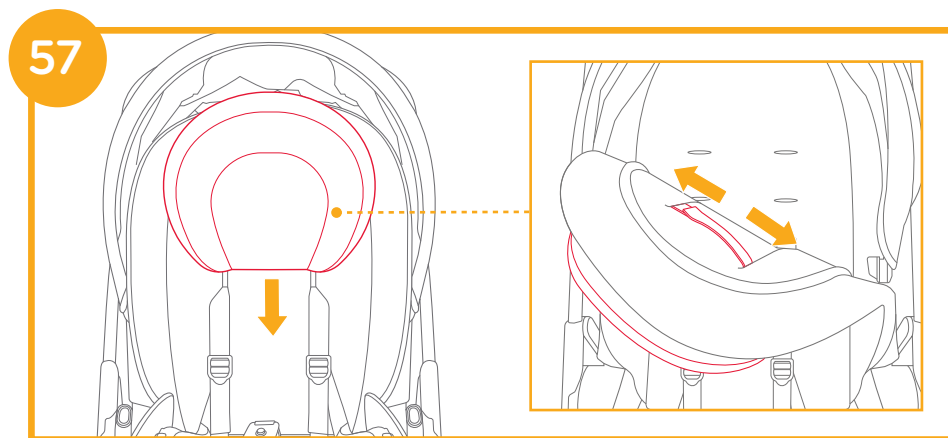


Detach & Assemble
Soft Goods

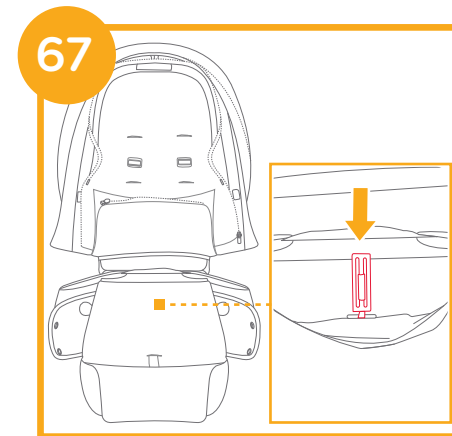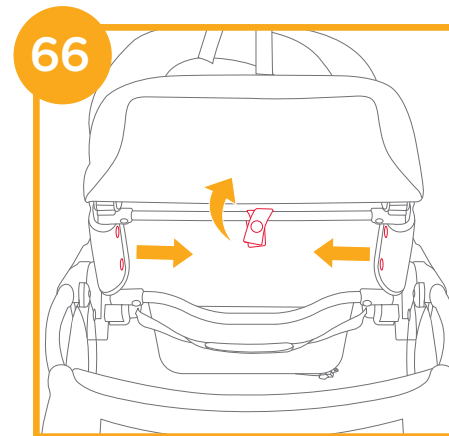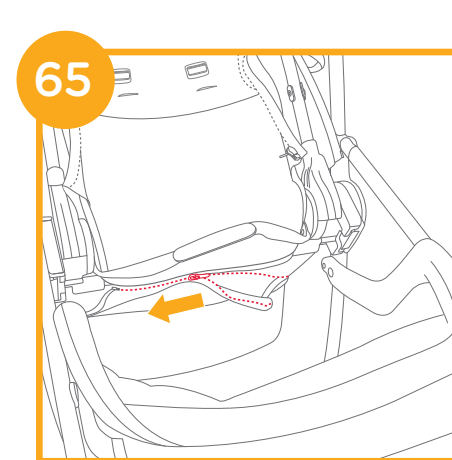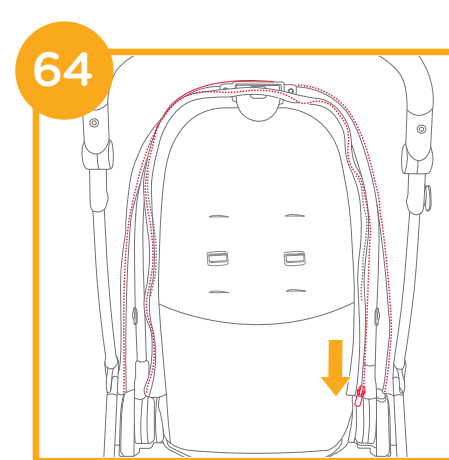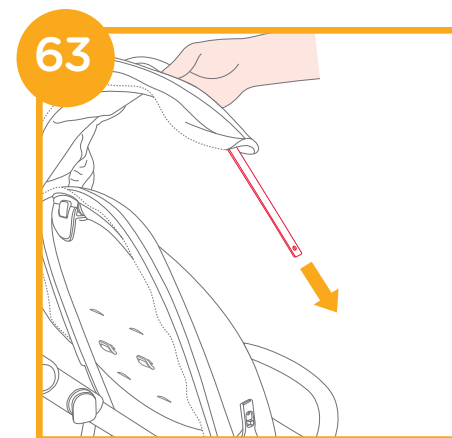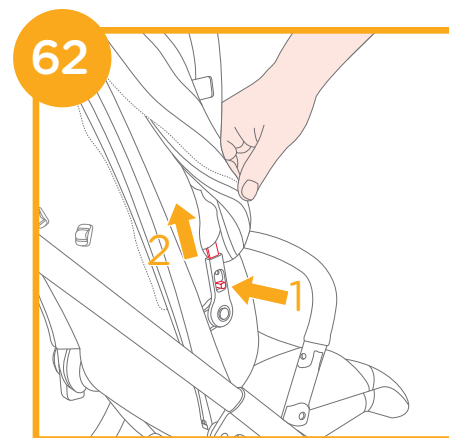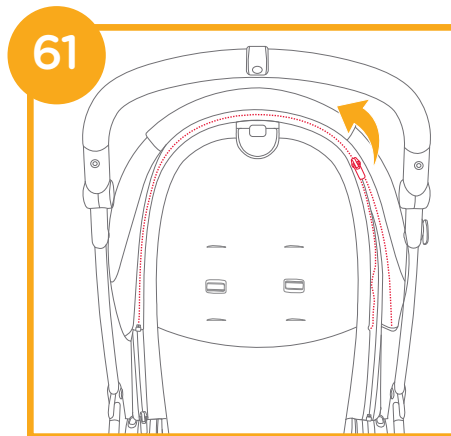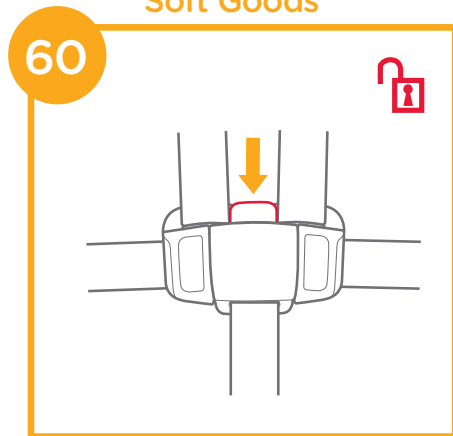

68

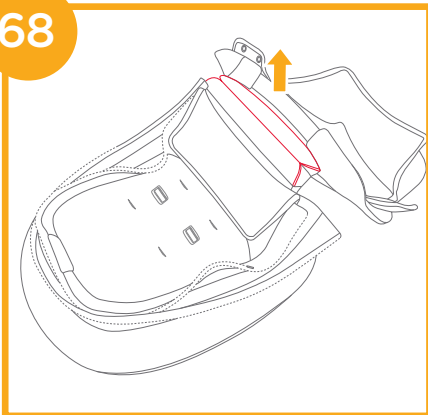

69

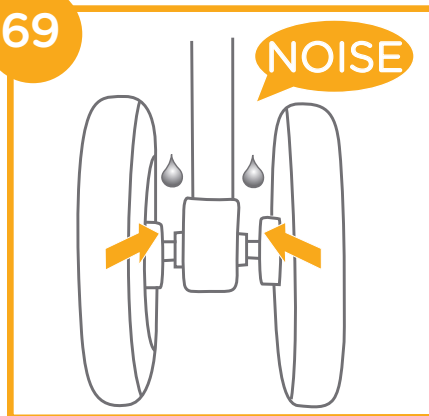

Care and Maintenance

NOTE

GB Welcome to Joie™

Congratulations on becoming part of the Joie family! We are so excited to be part of your journey with your little one. While traveling with the Joie elipto, you are using a high quality, fully certified stroller, approved to European safety standards EN 1888-2:2018+A1:2022. The stroller is intended for children from birth up to 15 kg with rearward facing mode and from birth up to 22 kg or 4 years whichever comes first with forward facing mode. Please carefully read this manual and follow each step to ensure a comfortable ride and best protection for your child.

IMPORTANT - READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Visit us at joiebaby.com to download manuals and see more exciting Joie products!

For warranty information, please visit our website at joiebaby.com


Emergency

In case of emergency or accident, it is most important to have your child taken care of with first aid and medical treatment immediately.

Parts List


Make sure all parts are available before assembly. If any part is missing, please contact local retailer. No tools are required for assembly.

- | | |
|--------------------------|---|
| 1 Stroller Frame | 12 Rear Wheel |
| 2 Cupholder | 13 Armbar Release Button |
| 3 Canopy | 14 Seat Release Button |
| 4 Head Support | 15 Handle Adjustment Button |
| 5 Insert | 16 Front Wheel |
| 6 Shoulder Harness Cover | 17 Rear Wheel |
| 7 Armbar | 18 Handle |
| 8 Buckle | 19 Recline Adjustment Button/
Folding Release Button |
| 9 Calf Support | 20 Folding Webbing |
| 10 Footrest | 21 Storage Basket |
| 11 Front Wheel | 22 Brake Lever |

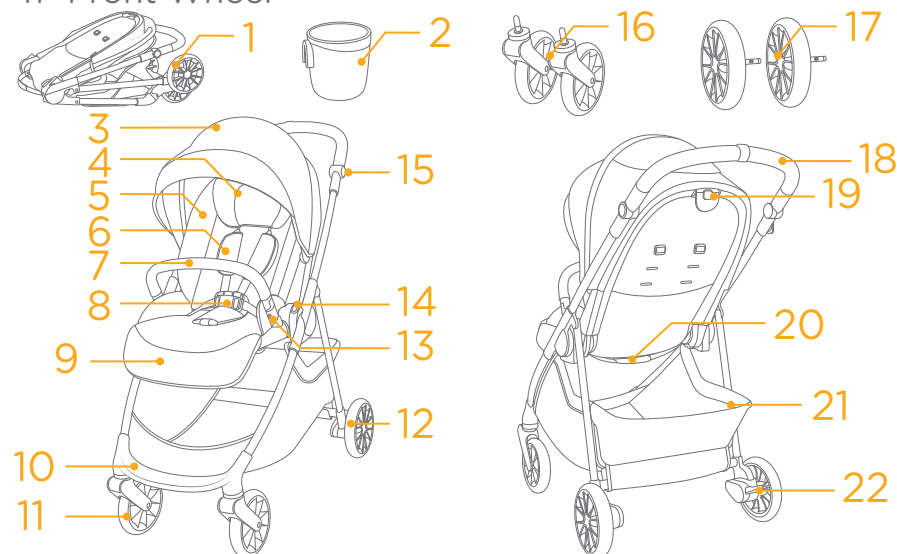

Accessories (May not be included)

- 1 Adapter
- 2 Rain Cover

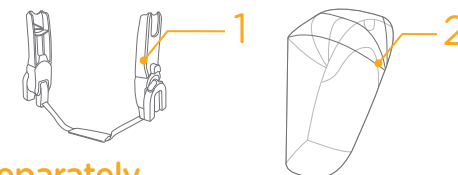

Accessories may be sold separately or may not be available depending on region.

WARNING

- ! Always use the restraint system.
- ! Ensure that all the locking devices are engaged before use.
- ! Do not let the child play with this product.
- ! Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- ! Adult assembly required.
- ! Use the stroller with only one child at a time. The stroller is intended for children from birth up to 15 kg with rearward facing mode and from birth up to 22 kg or 4 years whichever comes first with forward facing mode.
- ! Use of the stroller with a child weighing more than 15 kg with rearward facing mode or more than 22 kg with forward facing mode will cause excessive wear and stress on this stroller.
- ! To prevent a hazardous, unstable condition, do not place more than 4.5kg in the storage basket.
- ! Never leave the child unattended.
- ! Never place purses, shopping bags, parcels or accessory items on the handle or canopy.
- ! Accessories which are not approved by the manufacturer shall not be used.
- ! Only replacement parts supplied or recommended by the manufacturer shall be used.
- ! To avoid injury ensure that the child is kept away when unfolding and folding this product.
- ! This product is not suitable for running or skating.
- ! Pushchair designed to be used from birth shall recommend the use of the most reclined position for new born babies.
- ! The parking device shall be engaged when placing and removing the children.
- ! For car seats used in conjunction with a chassis, this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.
- ! Carry cot shall not be used, as soon as the child is able to sit by himself, roll over and can push itself up on its hands and knees. Maximum weight of the child: 9kg.
- ! No additional mattress shall be added unless recommended by the manufacturer.
- ! Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.
- ! To avoid burns, never put hot liquids in your cupholder.
- ! The maximum recommended weight in the cupholder is 1lbs (0.5kg).

Stroller Assembly

(Please refer to figures on page 1-13)

Please read all the instructions in this manual before assembling and using this product.

Open Stroller

see images 1 - 3

A click sound means the stroller is open completely.

! Check that the stroller is completely latched before continuing to use.

Assemble & Detach Front Wheel

see images 4 - 6

Assemble & Detach Rear Wheel

see images 7 - 9

Assemble Seat

see images 10 - 11

The seat is reversible. 10 & 11

The completely assembled stroller is shown as 12.

Stroller Operation

Use Armbar

see images 13 - 15

Armbar can be opened one side for easy seating and unseating of child. 15

! Always secure the child with the harness. The armbar is not a restraint device.

Use Cupholder

see images 16 - 17

Use Buckle

see images 18 - 19

Release Buckle

Press the button, the buckle will release automatically. 18

Lock Buckle

Match the waist belt buckle with the shoulder buckle 19 - 1, and align them with the center buckle, the buckle can lock automatically. 19 - 2 A "click" sound means the buckle is locked completely. 19 - 3

! Always secure the child with the harness. The armbar is not a restraint device.

! Make sure your child is snugly secured. The space between the child and the shoulder harness is about the thickness of one hand.

! Do not cross the shoulder belts. This will cause pressure on a child's neck.

Use Shoulder & Waist Harnesses

see images 20 - 23

! In order to protect your child from falling out, after your child is placed into the seat, check whether the shoulder and waist harnesses are at proper height and length.

20 - 1 Shoulder harness anchor

20 - 2 Slide adjuster

For larger child, use shoulder harness anchor and the highest shoulder slots. For smaller child, use shoulder harness anchor and the lowest shoulder slots.

To adjust the position of the shoulder harness anchor, turn the anchor to be level with the side facing forward. Thread it through the shoulder harness slot from back to front. 21

Rethread it through the slot that is closest to child's shoulder height. 22

Use slide adjuster to change the harness length. 23 - 1

Press the button 23 - 2, while pulling the waist harness to proper length. 23 - 3

Adjust Backrest

see images 24 - 25

There are 4 recline positions for the backrest.

To raise or recline the backrest, rotate the recline handle on the back of the seat, and pull the backrest up or down. 24 & 25

Please do not press the button 24 - 3 & 25 - 3 on the middle of the recline adjustment button when adjusting the angle for the recline.

Make sure the recline is adjusted properly for use.

Adjust Calf Support

see images 26 - 27

The calf support has 2 positions.

To raise the calf support, push it upwards. A "click" sound means the calf is locked completely. 26

To lower calf support, press the adjustment buttons on both sides of the calf support 27 - 1, and rotate the calf support downwards. 27 - 2

Use Brake

see images 28 - 29

To lock the rear wheels, step down on the brake lever. 28

To unlock the rear wheels, just lift the brake lever upwards. 29

Always apply the brake when the stroller is stopped. Push the stroller slightly to ensure the brake is engaged.

Use Canopy

see images 30 - 32

The canopy can be opened completely to protect your child from the sun uttermostly, just unzip the zip 31, and then pull the canopy toward front.

Adjust Handle

see image 33

Switch Seat

see images 34 - 35

Removing Harness Covers

see image 37

Removing Buckle Covers

see image 38

Fold Stroller

see images  - 

The stroller can be folded with forward facing seat or rear facing seat or without the seat.

Fold the canopy. The button on the middle of the recline handle is used for folding the seat.  - 1

When the handle is adjusted to the middle position, the folded stroller can stand on its own for easy storage.  &  & 

Use Accessories

Accessories may be sold separately or may not be available depending on region.

Use with Infant Child Restraint or Carry Cot

see images  - 

When using with Joie child restraint i-Jemini, i-Snug 2, Sprint, i-Gemm 3, i-Starter, Ramble XL, i-Level Pro, Calmi, please refer to the following instructions.

! The adapter has 2 positions. Do not use this product if, after installing the infant child restraint or carry cot, the baby's head is lower than their feet.

! Do not install the infant child restraint or carry cot in a forward-facing position.  & 

! If you have any problems about using the infant child restraint or carry cot, please refer to their own instruction manuals.

! Please do not fold the stroller when the infant child restraint or carry cot are still attached.

Use Head Support

see image 

Use Insert

see image 

Use Rain Cover

see image 

To assemble the rain cover, place it over the seat.

! When using the rain cover, please always check its ventilation.

! When not in use, please check that the rain cover has been cleaned and dried before folding.

! Do not fold the stroller after assembling the rain cover.

! Do not place your child into the stroller assembled with rain cover during hot weather.

Detach & Assemble Soft Goods

see images  - 

To re-assemble seat soft goods, follow the steps above in reverse  - .

Care and Maintenance

see image 

! To clean stroller frame, use only household soap and warm water. No bleach or detergent. Please refer to the care label for instructions on cleaning the fabric parts of the stroller.

! All removable fabric parts may be washed in cold water and drip-dried. No bleach. Please refer to the care label for instructions on cleaning the fabric parts of the stroller.

! Any fabric parts which are not removable should be spot-cleaned using a soft cloth and warm soapy water.

! From time to time, check your stroller for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Periodically wipe clean plastic parts with a soft damp cloth. Always dry the metal parts to prevent the formation of rust if the stroller has come into contact with water.

! Excessive exposure to sun or heat could cause fading or warping of parts.

! If stroller becomes wet, open hood and allow to dry thoroughly before storing.

! If wheels squeak, use a light oil (e.g., Silicon Spray, antirust oil, or sewing machine oil). It is important to get the oil into the axle and wheel assembly. 

! When using your stroller at the beach, completely clean your stroller after use to remove sand and salt from mechanisms and wheel assemblies.



Allison Baby UK Ltd,
Venture Point, Towers Business Park
Rugeley, Staffordshire, WS15 1UZ
info.gl@joiebaby.com

Bright Children's Products GmbH
Barthstr. 4, 80339 Munich Germany
info@brightchildrensproducts.com

view all fine signature selections at
joiebaby.com/signature