

basil[®] 2-in-1

belt-positioning booster Height: 43 - 60 in. (110 - 152 cm) Weight: 40 - 120 lb. (18 - 54 kg)



IMPORTANT!

Read all instructions before assembling and using the car seat. Keep instructions for future use.

Contents:

3 Important

Welcome to the Joie Family! If You Need Help Register Your Child Restraint

- 5 Child Requirements
- 6 Warnings
- 12 Best Practices
- 13 Vehicle Compatibility
- 14 Vehicle Belts
- 16 LATCH and Vehicle Belt Overview
- 18 Install Requirements
- 20 Parts List
- 22 Booster Assembly
- 24 Head Support Adjustment
- 26 Install Highback Booster
- 30 Install Backless Booster
- 34 Removing/Storing Lower Anchors
- 36 Cup Holders
- 38 Removing Softgoods
- 40 Care and Maintenance

Important:

Welcome to the Joie Family!

Ensure your child's safety – **READ THIS MANUAL CAREFULLY!** Although no child restraint can promise to protect in every situation, using it correctly reduces the chance of serious injury. Even if the child restraint seems easy, follow the step-by-step instructions in this book.

Store this instruction manual in the compartment located on the bottom of the child restraint.

If You Need Help

If you have questions in the U.S.A. about parts, use, or maintaining your child restraint, contact our Consumer Service Department for assistance. To ensure a speedy response, please have your child restraint's model number and date of manufacture ready. You can find the information on the manufacturer label on the child restraint.

Joie Baby USA Consumer Service Contact Info. Address: 70 Thousand Oaks Blvd., Morgantown, PA 19543 Email: info.us@joiebaby.com Phone: 1-866-798-7866

(Important information continued on pg. 4)

Important:

Register this Child Restraint

Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, e-mail address if available, and the restraint's model number and manufacturing date to **70 Thousand Oaks Blvd., Morgantown, PA 19543**, call **1-866-798-7866**, or register online at:

www.joiebaby.com/us/register-car-seat

For recall information, call the U.S. Government's Vehicle Safety Hotline at **1-888-327-4236 (TTY: 1-800-424-9153)** or go to **www.NHTSA.gov.**

For future reference, record the following information about your child restraint in case you move, lose your registration card, or need to reference it for any reason. You can find this information on the registration card or on the manufacturer label located on the child restraint:

Model Name:

Model Number:

Date of Manufacture:

Date of Purchase:

Child Requirements:

This child restraint is for a child that meets the following requirements:

Highback Booster

Weight: 40 - 110 lb. (18 - 50 kg) Height: 43 - 57 in. (110 - 145 cm) At least 4 years old

Backless Booster

Weight: 50 - 120 lb. (22.7 - 54 kg) Height: 43 - 60 in. (110 - 152 cm) At least 4 years old

For additional information or to have your child restraint inspected by a certified professional, you can visit the Safe Kids Worldwide website at www.safekids.org

AWARNING!

DEATH OR SERIOUS INJURY can occur if you fail to follow the warnings, instructions, and labels on the child restraint.

- Read ALL INSTRUCTIONS before use of the child restraint.
- Read the vehicle owner's manual for information on child restraint installation.
- KEEP INSTRUCTIONS FOR FUTURE USE.
- DO NOT allow anyone who has not read the instruction manual to install or use this child restraint.
- Your child's safety is your responsibility.
- **DO NOT** use the child restraint if it is damaged or broken or if parts are missing.
- Use only with a child that is at least 4 years old, weighs between 40 - 120 lb. (18 - 54 kg), and whose height is between 43 - 60 in. (110 - 152 cm).
- According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions.
- If your vehicle does not have a back seat, review your vehicle owner's manual.

A WARNING!

DEATH OR SERIOUS INJURY can occur if you fail to follow the warnings, instructions, and labels on the child restraint.

 This restraint is certified for use only in passenger vehicles. This restraint is not certified for aircraft use, as aircraft belts will not accommodate proper installation of this restraint.



- Failure to follow these instructions and the child restraint's labels can result in the child striking the vehicle's interior during a sudden stop or crash.
- If your vehicle does not have a back seat, review your vehicle owner's manual.
- If an air bag inflates, it can hit the child and the child restraint with great force and cause serious injury or death to your child. Review your vehicle owner's manual for more information about air bags and child restraint use.

AWARNING!

DEATH OR SERIOUS INJURY can occur if you fail to follow the warnings, instructions, and labels on the child restraint.

- DO NOT remove lower anchor system from the child restraint.
- When forward-facing, children should use a belt-positioning highback booster seat as long as possible until they reach the maximum weight or height. At that point, children should ride in a belt-positioning backless booster seat. A booster is no longer needed once the vehicle seat belt fits properly, typically when they reach 60 in. (152 cm) tall. Be sure to check your local and state laws, as well as AAP and NHTSA recommendations, for child restraint usage.
- NEVER leave child unattended.
- NEVER modify any part of the child restraint.

A WARNING!

DEATH OR SERIOUS INJURY can occur if you fail to follow the warnings, instructions, and labels on the child restraint.

- DO NOT use the child restraint if it is damaged in any way. To find out if damaged parts are replaceable, call 1-866-798-7866.
- **NEVER** attach two lower anchor connectors to one vehicle lower anchor point unless specifically allowed by the vehicle manufacturer.
- DO NOT attach additional padding, toys, or other devices unless made by Joie and described in these instructions. Use only approved accessories. Unapproved items can injure your child and may void the warranty.
- **NEVER** leave child restraint unsecured in your vehicle, even when it is unoccupied. In a crash, it could become a projectile and injure other vehicle occupants.

AWARNING!

DEATH OR SERIOUS INJURY can occur if you fail to follow the warnings, instructions, and labels on the child restraint.

• **NEVER** use clothing or blankets that interfere with providing a properly tightened seat belt. An unsecured or improperly harnessed child can come out of the restraint during a crash.

This child restraint system conforms to all applicable Federal Motor Vehicle Safety Standards.

A WARNING!

NEVER use a child restraint that has been involved in a MODERATE or SEVERE crash.

Even if there is no visible damage, the child restraint's internal structure may be compromised and may not protect your child in a future crash.

Child restraint is still usable after a minor incident which includes all of the following situations:

- 1) The vehicle was able to be driven away from the crash site.
- 2) The vehicle door nearest the child restraint was **NOT** damaged.
- **3)** None of the passengers in the vehicle sustained any injuries in the crash.
- **4)** If the vehicle has air bags, the air bags did not deploy during the crash; and
- **5)** There is no visible damage to the child restraint.

Contact Joie Consumer Service with any questions or concerns.

Best Practices:

Expiration:

DO NOT USE THIS CHILD RESTRAINT 7 YEARS AFTER ORIGINAL PURCHASE.

Stop using it after that date and dispose of it. Check the label on the child restraint for the manufacture date.

Hot Weather Warning:

Child restraints can become extremely hot in the sun or warm weather. Always check the seat temperature before placing your child inside to avoid burns.

Clothing:

For proper seat belt and child safety, avoid bulky clothing like heavy jackets or snowsuits when using the child restraint. Ensure the seat belt is snug and comfortable on your child.

Vehicle Compatibility:

You MUST read and understand ALL child restraint-related instructions and warnings in your vehicle owner's manual to correctly and safely use this child restraint in your vehicle.



This child restraint can **ONLY** be installed on vehicle seats that face forward. **DO NOT** install on seats that face to the sides or rear of the vehicle.



NEVER attach two lower anchor connectors to one vehicle lower anchor point unless specifically allowed by the vehicle manufacturer.

If your vehicle is equipped with front passenger side air bags, check your vehicle owner's manual for child restraint installation instructions.

Vehicle Belts:


These vehicle belts CANNOT BE USED with your child restraint.

1 - Motorized Belts (Automatic)

These should not be used unless the shoulder belt can be removed, the lap belt is locked, and use is allowed by the vehicle manufacturer.

2 - Airbag/Inflatable Belts


- 3 Door Mounted Belts
- 4 Lap Belt ONLY

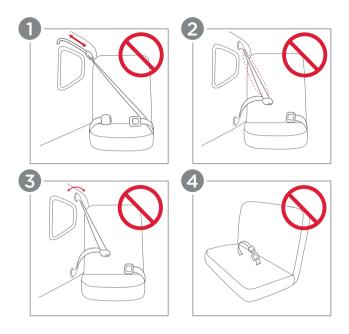

LATCH Overview:

LATCH (Lower Anchors and Tethers for CHildren):

The LATCH system allows you to securely attach your child restraint in your car. All 2003 and newer model year vehicles are required to have a LATCH system, although some manufacturers began including LATCH earlier. Some vehicle owner's manuals use the term ISOFIX to identify the LATCH system.



Review your vehicle owner's manual for exact location and use.


Vehicle Belt Overview:

Vehicle Seat Belt:

Refer to your vehicle owner's manual to determine if the belts in your vehicle lock by switching the seat belt's retractor OR have a locking latch plate that locks the vehicle's seat belt.

Vehicle Seat Belt Terms

Retractor

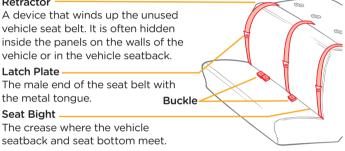

Review your vehicle owner's manual for exact location and use.

Identify Your Seat Belt Type:

The vehicle seat belt types that can be used with this child restraint.



Lap/Shoulder Belt 3 connection points.

Highback Booster Requirements:

Lap/Shoulder Belt Install pg. 26	
	Height 43 - 57 in. (110 - 145 cm)
LATCH with	Weight 40 - 110 lb. (18 - 50 kg)
Lap/Shoulder Belt	
Install pg. 26	At least 4 years old

Backless Booster Requirements:

Installation Method	Suitable For
Lap/Shoulder Belt	
Install pg. 30	
	Height 43 - 60 in. (110 - 152 cm)
LATCH with	Weight 50 - 120 lb. (22.7 - 54 kg)
Lap/Shoulder Belt Install pg. 30	At least 4 years old

Parts List:


Please make sure there are no missing parts. Please contact Joie Consumer Service if anything is missing.

- 1 Head Support
- 2 Back Support
- 3 Armrest
- 4 Base
- 5 Lower Anchor Release Button
- 6 Cup Holder
- 7 Head Support Adjustment Lever
- 8 Shoulder Belt Guide
- 9 Lower Anchor Adjustment Strap
- 10 Lower Anchor Connector
- 11 Instruction Manual Storage
- 12 Shoulder Belt Positioning Strap Slot
- 13 Shoulder Belt Positioning Strap (Butterfly End)
- 14 Shoulder Belt Positioning Strap (Loop End)
- 15 Shoulder Belt Positioning Clip


Parts List:





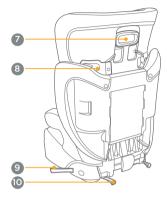

Optional Use




Booster Assembly:

1 - Place the base down and line the hooks on the bottom of the back support up with the bars on the base. Press the hooks down firmly onto the bars. A "clicking" sound will confirm that the back is properly attached.

2 - Rotate the back support up to lock it onto the base.


3 - While squeezing the head support adjustment lever, slide the head support into the slot on the top of the back support.

4 - Tuck the fabric on the head support behind the fabric on the back support, as shown.

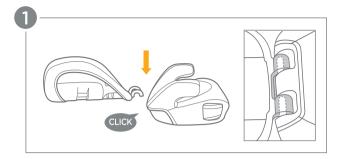





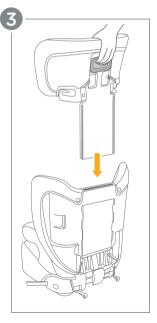

Head Support Adjustment:

The head support MUST be adjusted so that the bottom of the head support is EVEN with or JUST ABOVE the top of the child's shoulders.

1 - To adjust the head support, squeeze the head support adjustment lever and slide the head support up or down to the correct position.



Install Highback Booster:

WARNING! Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.

Lower anchors are only available on certain models. If your booster does NOT have lower anchors, please skip ahead to step 4.

1 - Press the lower anchor release button and pull both of the lower anchor connectors out.


2 - Attach **BOTH** lower anchor connectors to the correct lower anchor points in your vehicle.

3 - Tighten the lower anchor straps by pulling the lower anchor adjustment strap. Push the child restraint down firmly while tightening to remove any slack in the straps.

4 - Place the child in the child restraint and buckle them in (a). Make sure **BOTH** the lap and shoulder belt are **UNDER** the armrest (b).

5 - Thread the shoulder belt correctly through the shoulder belt guide on the head support.

(Install Highback Booster continued on pg. 28)

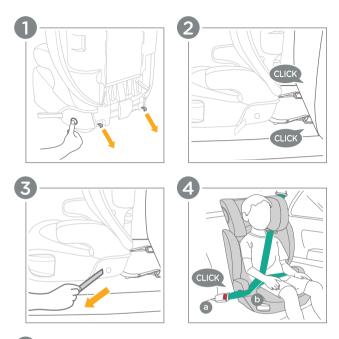



Install Highback Booster: (cont.)

6 - The bottom of the head support MUST be EVEN WITH or JUST ABOVE the top of your child's shoulders. If NOT please refer to Head Support Adjustment on pg. 24.

7 - The shoulder belt should be positioned in the blue zone when properly adjusted. Make sure the shoulder belt lays flat against your child's chest and is not twisted.





Install Backless Booster:

WARNING! Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat.

1 - Rotate the back support completely horizontal to detach it from the base.


Shoulder belt positioning clip (optional):

Use the shoulder belt positioning clip if the seatbelt does not naturally fall in the blue zone on the child's shoulder on pg. 29.

2 - To install the shoulder belt positioning clip, insert the shoulder belt positioning strap (butterfly end) into the slot on the bottom of the base. Pull on the strap to ensure that it is secured in place.

3 - Thread the shoulder belt positioning clip up through the correct slot for either right or left shoulder install.

(Install Backless Booster continued on pg. 32)

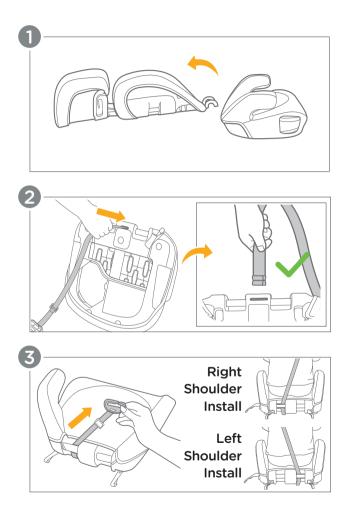

Install Backless Booster: (cont.)

Lower anchors are only available on certain models. If your booster does NOT have lower anchors please skip ahead to step 7.


4 - Press the lower anchor release button and pull both of the lower anchor connectors out.


5 - Attach **BOTH** lower anchor connectors to the correct lower anchor points in your vehicle.

6 - Tighten the lower anchor straps by pulling the lower anchor adjustment strap. Push the child restraint down firmly while tightening to remove any slack in the straps.

7 - Place the child in the child restraint and buckle them in (a). Make sure **BOTH** the lap and shoulder belt are **UNDER** the armrest (b). Make sure the shoulder belt lays flat against your child's chest and is not twisted.

8 - Thread the shoulder belt through the shoulder belt positioning clip. Tighten or loosen the shoulder belt positioning strap so that the clip sits just above the shoulder, with the bottom of the clip at the child's shoulders, as shown.

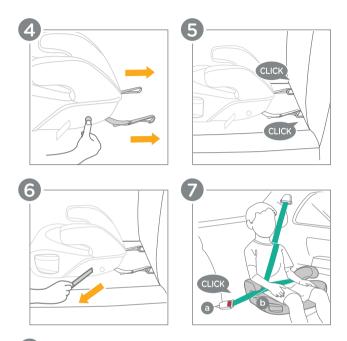

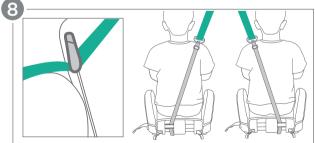



Removing/Storing Lower Anchors:

1 - Press the lower anchor release button and pull the base away from the seat bight to loosen the lower anchor straps.

2 - Unclip both lower anchor connectors from the lower anchor points.

3 - Pull the lower anchor adjustment strap to pull the lower anchor connectors into the storage position.

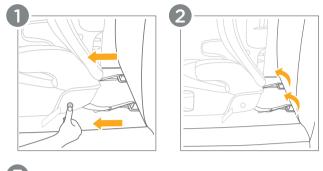

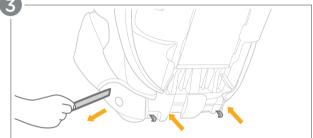

Cup Holders:

1 - Pull the cup holders out of the base on either side to use.

IMPORTANT: The maximum recommended weight in each cup holder is 1 lb. (0.5 kg).

IMPORTANT: DO NOT use the cup holders for hot beverages.



Removing Softgoods:


WARNING! NEVER use this child restraint without the softgoods in place.

1 - To remove the softgoods, unhook the six elastic straps on the back of the child restraint.

2 - Unfasten the two hooks on the back of the back support by sliding them down. Then, remove the covers from the head support, back support, and base.

3 - Remove the foam located on the underside of the backless booster cover. **DO NOT** wash the foam.

To reassemble, follow these steps in reverse order.

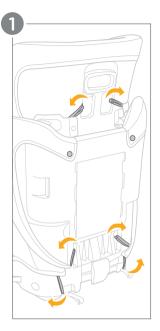





Care and Maintenance:

Washing:

Refer to the care label attached to the fabrics for washing and drying instructions. Remove the seat pad foam from inside the backless booster fabric before washing (see pg. 38).

Cleaning:

Use only mild detergent, water, and a soft cloth to clean the shell and straps. Air dry after cleaning. **DO NOT** iron the straps. **NEVER** use bleach or any other harsh chemicals anywhere on the child restraint.

Storage:

When not in use for a long period, remove the child restraint from the vehicle seat. Store the child restraint in a cool, dry place that your child does not have access to.

Care and Maintenance:

Normal Wear and Tear:

It is normal for the fabric to fade from sunlight and show wear and tear over time, even when used normally.

Regular Checks:

Regularly check that everything functions properly. If any parts are torn, broken, or missing, stop using immediately and contact Joie Consumer Service for replacement parts.

Joie Baby USA Consumer Service Contact Info. Address: 70 Thousand Oaks Blvd., Morgantown, PA 19543 Email: info.us@joiebaby.com Phone: 1-866-798-7866



Effortlessly happy.

Helping parents be their best with worry-free baby gear.

IM-001547E