




Instruction Manual

cilantro™ 2-in-1 cilantro™ fx 2-in-1

belt-positioning booster

Weight: 40 - 120 lb. (18 - 54 kg)

Height: 43 - 60 in. (110 - 152 cm)

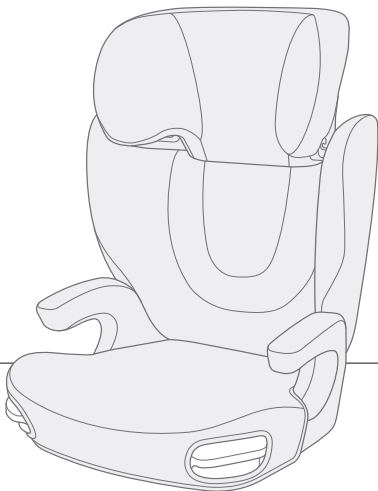

watch my



install videos

IMPORTANT!

Read all instructions before assembling and using the car seat.
Keep instructions for future use.

Contents:

- 3 Important
 - Welcome to the Joie Family!
 - If You Need Help
 - Register Your Child Restraint
- 5 Child Requirements
- 6 Warnings
- 12 Best Practices
- 13 Vehicle Compatibility
- 14 Vehicle Belts
- 16 LATCH Overview
- 17 Vehicle Belt Overview
- 18 Highback Booster Requirements
- 19 Backless Booster Requirements
- 20 Parts List
- 22 Assembling Highback Booster
- 24 Adjusting Headrest Height
- 26 Highback Booster – Install
- 30 Highback Booster – Securing Child in Seat
- 32 Backless Booster – Install
- 38 Backless Booster – Securing Child in Seat
- 44 Detaching & Storing Lower Anchor Attachments
- 46 Using Cup Holders
- 48 Removing Softgoods
- 52 Care & Maintenance

Important:

Welcome to the Joie Family!

Ensure your child's safety – **READ THIS MANUAL CAREFULLY!**

Although no child restraint can promise to protect in every situation, using it correctly reduces the chance of serious injury. Even if the child restraint seems easy, follow the step-by-step instructions in this book.

Store this instruction manual in the compartment located on the bottom of the child restraint.

If You Need Help

If you have questions in the U.S.A. about parts, use, or maintaining your child restraint, contact our Consumer Service Department for assistance. To ensure a speedy response, please have your child restraint's model number and date of manufacture ready. You can find the information on a sticker located on the underside of the child restraint base.

Joie Baby USA Consumer Service Contact Info.

Address: 70 Thousand Oaks Blvd., Morgantown, PA 19543

Email: info.us@joiebaby.com

Phone: 1-866-798-7866

Important:

Register Your Child Restraint

Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, e-mail address if available, and the restraint's model number and manufacturing date to **70 Thousand Oaks Blvd., Morgantown, PA 19543** or call **1-866-798-7866** or register online at:

www.joiebaby.com/us/register-car-seat

For recall information, call the U.S. Government's Vehicle Safety Hotline at **1-888-327-4236 (TTY: 1-800-424-9153)** or go to **www.NHTSA.gov**.

For future reference, record the following information about your child restraint in case you move, lose your registration card, or need to reference it for any reason. You can find this information on the registration card or on the label located on the bottom of the child restraint:

Model Name: _____

Model Number: _____

Date of Manufacture: _____

Date of Purchase: _____

Child Requirements:

This child restraint is for a child that meets **BOTH** of the following requirements:

Highback Booster

Weight: 40 - 110 lb. (18 - 50 kg)

Height: 43 - 57 in. (110 - 145 cm)

At least 4 years old

Backless Booster

Weight: 40 - 120 lb. (18 - 54 kg)

Height: 43 - 60 in. (110 - 152 cm)

At least 4 years old

STOP using this child restraint as soon as the child reaches the max. weight OR the max. height.

According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions.

WARNING

DEATH OR SERIOUS INJURY can occur if you fail to follow the warnings, instructions, and labels on the child restraint.

- Read **ALL INSTRUCTIONS** before use of the child restraint.
- Read the vehicle owner's manual for information on child restraint installation.
- **KEEP INSTRUCTIONS FOR FUTURE USE.**
- Failure to follow these instructions and the child restraint's labels can result in the child striking the vehicle's interior during a sudden stop or crash.
- **DO NOT** allow anyone who has not read the instruction manual to install or use this child restraint.
- Your child's safety is your responsibility. **NEVER** leave your child unattended.
- If an air bag inflates, it can hit the child and the child restraint with great force and cause serious injury or death to your child. Review your vehicle owner's manual for more information about air bags and child restraint use.

WARNING

DEATH OR SERIOUS INJURY can occur if you fail to follow the warnings, instructions, and labels on the child restraint.

- Use this child restraint **ONLY** with a child that weighs between 40 - 120 lb. (18 - 54 kg) and whose height is 43 - 60 in. (110 - 145 cm).
- Stop using this child restraint as soon as the child reaches the max. weight **OR** the max. height.
- This restraint is certified for use only in passenger vehicles. This restraint is **NOT** certified for aircraft use, as aircraft belts will not accommodate proper installation of this child restraint.
- **NEVER** secure this child restraint using an inflatable seat belt. Move it to a vehicle seat that does not have an inflatable seat belt or install using lower anchors if available.
- **DO NOT** remove the lower anchor attachments from the child restraint (only available on some models).
- The vehicle seat belt system **MUST** hold the child restraint securely. Not all vehicle seat belts can be used with this child restraint.



WARNING

DEATH OR SERIOUS INJURY can occur if you fail to follow the warnings, instructions, and labels on the child restraint.

- This child restraint may be secured with the lower anchor attachments. Some models do not include lower anchor attachments. Their use is optional. The child **MUST ALWAYS** be secured with the vehicle's lap/shoulder seat belt.

Verify the following before using the lower anchor attachments:

- The lower anchor attachments **DO NOT** interfere with any vehicle seat belts or buckles.
- If the lower anchor attachments interfere with the vehicle seat belts or if the chosen seating position does not have lower anchors, you **MUST** store the lower anchor attachments. **ALWAYS** secure the child restraint with the lower anchor attachments or a vehicle seat belt, even when unoccupied. In a crash, an unsecured child restraint can injure passengers.

WARNING

DEATH OR SERIOUS INJURY can occur if you fail to follow the warnings, instructions, and labels on the child restraint.

- Before each use, **ALWAYS** check the child restraint to ensure that it is tightly secured to the vehicle seat.
- **NEVER** modify any part of the child restraint.
- Select a suitable location for the child restraint in your vehicle. Secure the child restraint with the lower anchor attachments or a vehicle seat belt that is properly routed as shown in this manual.
- **NEVER** attach two lower anchor attachments to one vehicle lower anchor point unless specifically allowed by the vehicle manufacturer.
- **DO NOT** allow the child restraint to contact the vehicle interior (the side of the car door or the seat in the front).
- **DO NOT** use the child restraint if it is damaged or broken or if parts are missing. To find out whether damaged parts can be replaced, call 1-866-798-7866.

WARNING

DEATH OR SERIOUS INJURY can occur if you fail to follow the warnings, instructions, and labels on the child restraint.

- **DO NOT** use the child restraint if it is damaged or broken or if parts are missing.
- According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.
- If your vehicle does not have a back seat, review your vehicle owner's manual.
- Use **ONLY** approved accessories. Unapproved items can injure your child and may void the warranty.
- **NEVER** leave the child restraint unsecured in your vehicle, even when it is unoccupied. In a crash, it could become a projectile and injure other vehicle occupants.

This child restraint system conforms to all applicable Federal motor vehicle safety standards.

WARNING

NEVER use a child restraint that has been involved in a **MODERATE** or **SEVERE** crash.

Even if there is no visible damage, the child restraint's internal structure may be compromised and may not protect your child in a future crash.

The child restraint is still usable after a minor incident in which all of the following apply:

- 1) The vehicle was able to be driven away from the crash site.
- 2) The vehicle door nearest the child restraint was **NOT** damaged.
- 3) None of the passengers in the vehicle sustained any injuries in the crash.
- 4) If the vehicle has air bags, the air bags did not deploy during the crash; and
- 5) There is no visible damage to the child restraint.

Contact Joie Consumer Service with any questions or concerns.

Best Practices:

Expiration:

DO NOT USE THIS CHILD RESTRAINT 10 YEARS AFTER ORIGINAL PURCHASE.

Stop using it after that date and dispose of it. If the original purchase date is unknown, the manufacture date located on the child restraint should be used.

Hot Weather Warning:

Child restraints can become extremely hot in the sun or warm weather. Always check the seat temperature before placing your child inside to avoid burns.

Clothing:

For proper harness fit and child safety, avoid bulky clothing like heavy jackets or snowsuits when using the child restraint. Ensure that the harness is snug but comfortable on your child.

Vehicle Compatibility:

You MUST read and understand ALL child restraint-related instructions and warnings in your vehicle owner's manual to correctly and safely use this child restraint in your vehicle.



This child restraint can **ONLY** be installed on vehicle seats that face forward. **DO NOT** install on seats that face to the sides or the rear of the vehicle.

According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions.



NEVER attach two lower anchor attachments to one vehicle lower anchor point unless specifically allowed by the vehicle manufacturer.

Lower anchor attachments may be used to secure the seat in place (only included on some models).

Vehicle Belts:

These vehicle belts **CANNOT BE USED** with your child restraint.

1 - Motorized Belts (Automatic)

These should not be used unless the shoulder belt can be removed, the lap belt is locked, and use is allowed by the vehicle manufacturer.


2 - Lap Belts

DO NOT install this booster on vehicle seats with only a lap belt.

3 - Airbag/Inflatable Belts

4 - Door Mounted Belts

DO NOT install this booster on vehicle seats with belts that are attached to the door or that move along a track.

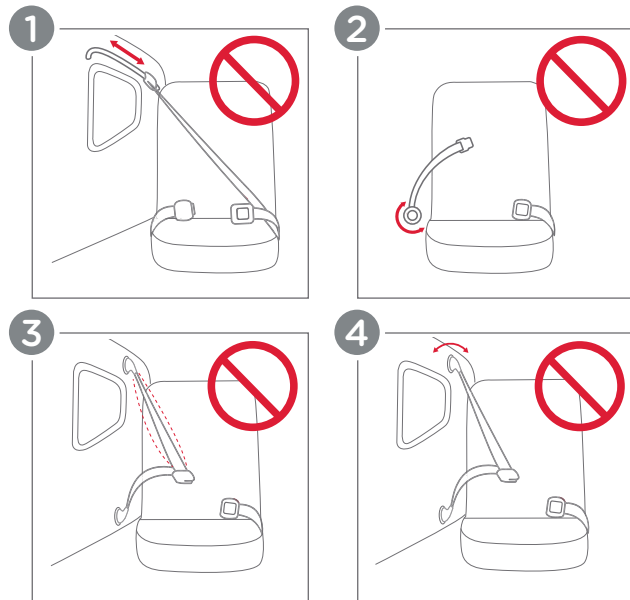

LATCH Overview:


LATCH (Lower Anchors and Tethers for Children):

The LATCH system, or lower anchor attachment and top tether, allows you to securely attach your child restraint in your car without using the vehicle seat belt. All 2003 and newer model year vehicles are required to have a LATCH system, although some manufacturers began including LATCH earlier. Some vehicle owner's manuals use the term ISOFIX to identify the LATCH system.

Vehicle's Tether Anchor



Vehicle Seat Bight

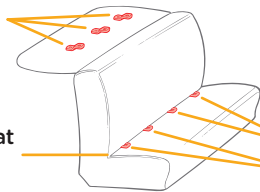

Typical seat in a passenger vehicle. Other vehicle types may have different LATCH locations.

LATCH Lower Anchors



Review your vehicle owner's manual for exact location and use.

Note: This child restraint only includes lower anchor use and does not include a tether. The lower anchor attachments are only included on some models

Vehicle Belt Overview:

Vehicle Seat Belt:

Refer to your vehicle owner's manual to determine if the belts in your vehicle lock by switching the seat belt's retractor **OR** have a locking latch plate that locks the vehicle's seat belt.

Vehicle Seat Belt Terms:

Retractor

A device that winds up the unused vehicle seat belt. It is often hidden inside the panels on the walls of the vehicle or in the vehicle seatback.


Latch Plate

The male end of the seat belt with the metal tongue.

Seat Bight

The crease where the vehicle seatback and seat bottom meet.


Buckle

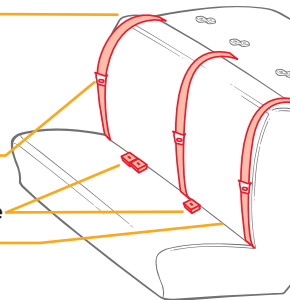

Review your vehicle owner's manual for exact location and use.


Identify Your Seat Belt Type:

The vehicle seat belt types that can be used with this child restraint.

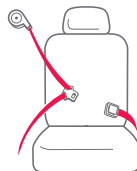


Lap/Shoulder Belt
3 connection points

Highback Booster Requirements:

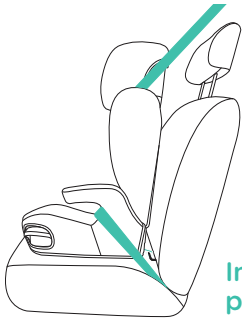Installation Method	Suitable For
Lap/Shoulder Belt with optional Lower Anchor Attachments*  Install pg. 26 * lower anchor attachments only included on some models	Weight: 40 - 110 lb. (18 - 50 kg) Height: 43 - 57 in. (110 - 145 cm) At least 4 years old Check your local and state laws and the AAP/NHTSA recommendations.

Backless Booster Requirements:

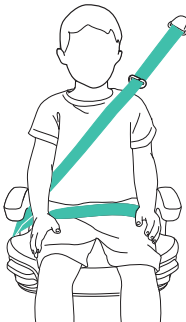Installation Method	Suitable For
Lap/Shoulder Belt with optional Lower Anchor Attachments*  Install pg. 32 * lower anchor attachments only included on some models	Weight: 40 - 120 lb. (18 - 54 kg) Height: 43 - 60 in. (110 - 152 cm) At least 4 years old Check your local and state laws and the AAP/NHTSA recommendations.


Parts List:

Please make sure there are no missing parts. Please contact Joie Consumer Service if anything is missing.

- 1 Headrest
- 2 Shoulder Belt Guides
- 3 Seat Pad
- 4 Armrest (x2)
- 5 Lower Anchor Attachment Adjustment Button*
- 6 Lower Anchor Attachment Adjustment Straps*
- 7 Cup Holder (x2)
- 8 Shoulder Belt Positioning Clip
- 9 Shoulder Belt Positioning Strap Adjuster
- 10 Shoulder Belt Positioning Strap
- 11 Loop End
- 12 Headrest Adjustment Lever
- 13 Seat Back
- 14 Base
- 15 Lower Anchor Attachments*
- 16 Instruction Manual Storage

** only included on some models*

Parts List:

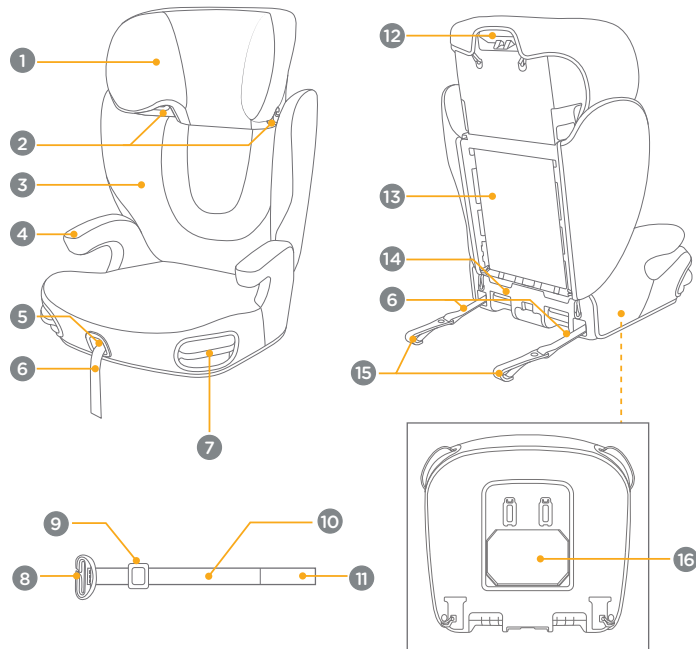


Assembling Highback Booster:

1 - Squeeze and hold the headrest adjustment lever (a). Slide the headrest into the seat back (b) until you hear or feel it **CLICK** into place. Once the headrest is attached to the seat, it cannot be removed.

2 - Insert the fabric from the headrest underneath the fabric on the seat back.

3 - The hooks on the bottom of the seat back will interlock with the bars on the base. Push down firmly on the hooks, while keeping the seat back slightly angled and off the ground. Hear or feel a **CLICK** to ensure that the hooks are fully attached.


4 - Once the seat back is securely attached to the base, rotate the seat back up (c) while holding the base in place (d). Hear or feel a **CLICK** to ensure that the seat back is fully attached.

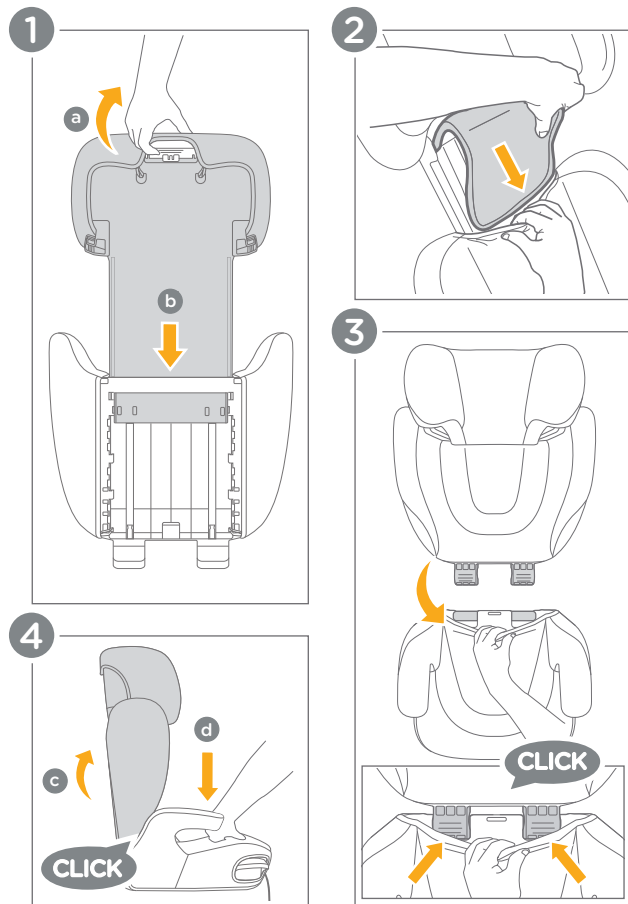

Adjusting Headrest Height:

1 - Squeeze the headrest adjustment lever (a) while moving the headrest up or down until you hear or feel a **CLICK** (b), indicating that the headrest is locked into one of the 10 available positions.

2 - Place your child in the child restraint and adjust the headrest according to your child's height. The shoulder belt guides **MUST** be **ABOVE** the child's shoulders.

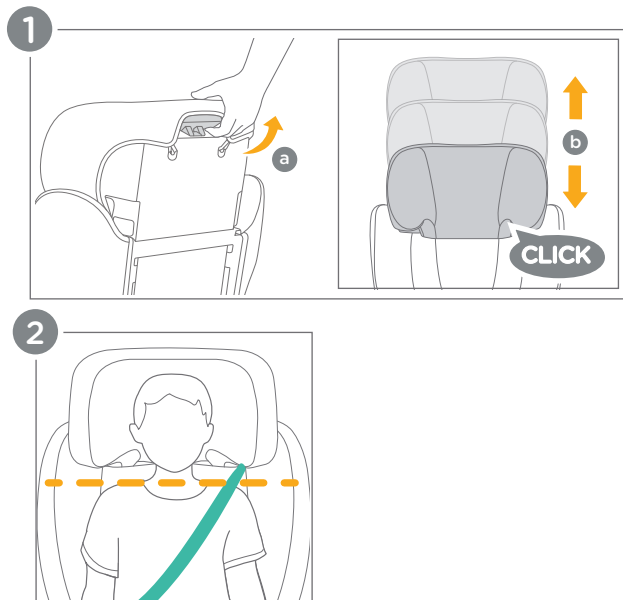

Highback Booster – Install:

If your model includes lower anchor attachments, see below for install.

If your model does not include lower anchor attachments, continue on to pg. 30 for [Highback Booster – Securing Child in Seat](#).

WARNING! This child restraint may be secured with the lower anchor attachments. Some models do not include lower anchor attachments. Their use is optional. The child **MUST ALWAYS** be secured with the vehicle's lap/shoulder seat belt.

Verify the following before using the lower anchor attachments:

The lower anchor attachments **DO NOT** interfere with any vehicle seat belts or buckles.

If the lower anchor attachments interfere with the vehicle seat belts or if the chosen seating position does not have lower anchors, you **MUST** store the lower anchor attachments (see pg. 44). Always secure the child restraint with the lower anchor attachments or a vehicle seat belt, even when unoccupied. In a crash, an unsecured child restraint can injure passengers.

(Highback Booster – Install continued on pg. 28)

Highback Booster – Install: (cont.)

1 - For easier installation, extend the lower anchor attachment straps to their maximum length by squeezing the lower anchor attachment adjustment button (a) while pulling out on the straps (b).


2 - Attach the lower anchor attachments to the vehicle's lower anchor points by sliding the hook over the anchor point, pushing down firmly, then pulling the hook away from the anchor point. Hear or feel a **CLICK** indicating that the lower anchor attachments are fully attached. Ensure that the lower anchor attachment straps are not twisted.

3 - Remove all the slack from the lower anchor attachment straps by pushing on the child restraint (c) while pulling the lower anchor attachment straps on the front of the booster (d).

4 - Depending on your vehicle, you may need to manually align the lower anchor attachments with the slots in the base so they can retract inside to get a proper install.

5 - Pull out lightly on the child restraint after install. If the lower anchor attachment adjustment straps loosen, clean the lower anchor attachment adjustment button and straps (see pg. 53).

IMPORTANT: The bottom of the child restraint should sit as flat as possible on the vehicle seat.

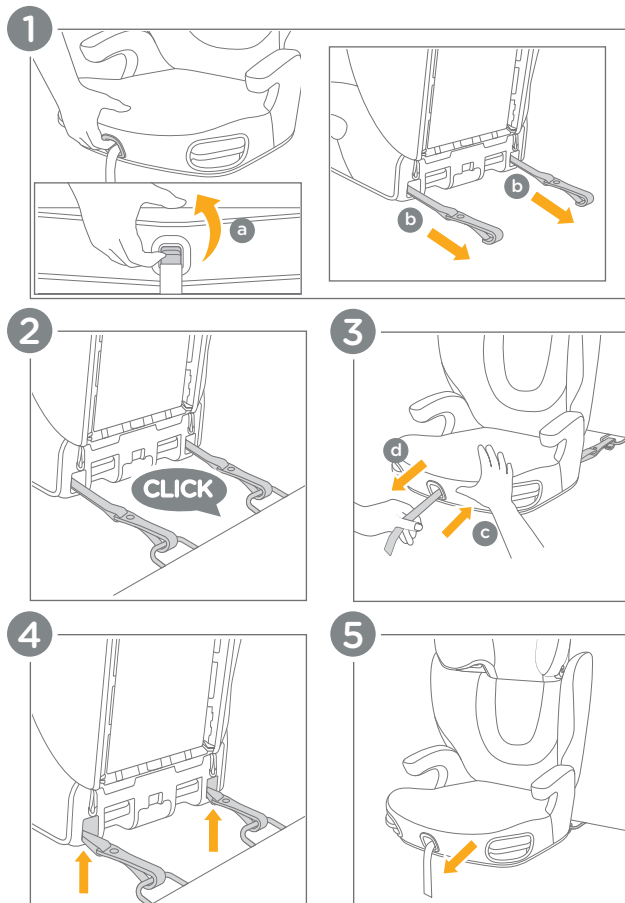

Highback Booster – Securing Child in Seat:

WARNING! Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat. **This restraint is not certified for aircraft use, as a lap-only belt is not permitted.** In addition to the lap/shoulder belt, the lower anchor attachments may be used to secure the seat in place (only included on some models).

Your child must be able to sit upright and keep the vehicle lap/shoulder belt properly secured over their chest and lap throughout the car ride. If your child is unable to do so, please secure your child in a child restraint using a 5-point harness in forward-facing mode.


1 - Thread the vehicle's shoulder belt into the shoulder belt guide in the headrest.

2 - Place the child in the child restraint and buckle them in. Ensure that the vehicle lap belt is **UNDER BOTH** armrests (a). The vehicle shoulder belt must also be **UNDER** the armrest on the buckle side (b).

WARNING: **DO NOT** position the vehicle shoulder belt under the child's arm or behind their back.

3 - The shoulder belt guides **MUST** be **ABOVE** the child's shoulders. If **NOT**, refer to **Adjusting Headrest Height on pg. 24**.

4 - The shoulder belt **MUST** be positioned in the red zone when properly adjusted. Ensure that the shoulder belt lays flat against your child's chest and is not twisted.

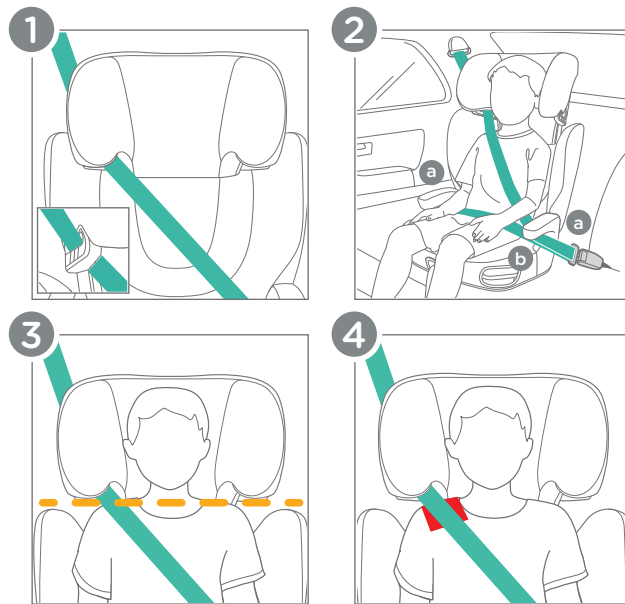

WARNING: The child must be in a seated position against both the back and bottom of the seat with no gap behind the child. **DO NOT** allow the child to slouch.

Backless Booster – Install:

1 - Rotate the seat back away from the base (a) while holding the base in place (b).

2 - Detach the hooks on the bottom of the seat back from the base.

Shoulder belt positioning clip:


3 - Use the shoulder belt positioning clip if the vehicle belt does not naturally fall in the red zone on the child's shoulder.

4 - Insert and thread the entire loop end of the shoulder belt positioning strap into the slot on the base.

5 - Thread the shoulder belt positioning clip through the loop end to secure it.

6 - Pull the shoulder belt positioning strap tight.

(Backless Booster – Install continued on pg. 34)

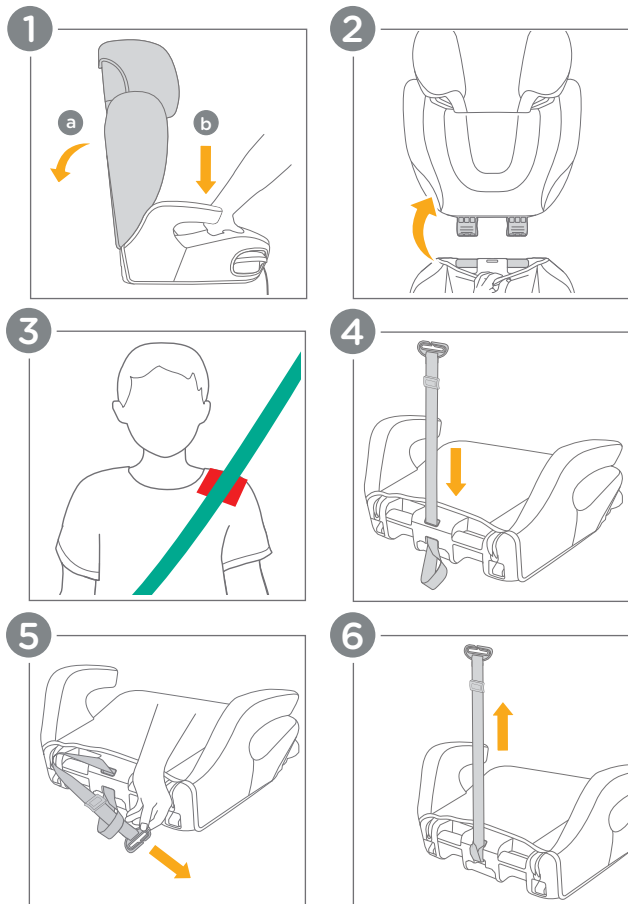

Backless Booster – Install: (cont.)

If your model includes lower anchor attachments, continue below for install. If your model does not include lower anchor attachments, continue on to pg. 38 for [Backless Booster – Securing Child in Seat](#).

WARNING! This child restraint may be secured with the lower anchor attachments. Some models do not include lower anchor attachments. Their use is optional. The child **MUST ALWAYS** be secured with the vehicle's lap/shoulder seat belt.

Verify the following before using the lower anchor attachments:

The lower anchor attachments **DO NOT** interfere with any vehicle seat belts or buckles.

If the lower anchor attachments interfere with the vehicle seat belts or if the chosen seating position does not have lower anchors, you **MUST** store the lower anchor attachments (see pg. 44). Always secure the child restraint with the lower anchor attachments or a vehicle seat belt, even when unoccupied. In a crash, an unsecured child restraint can injure passengers.

(Backless Booster – Install continued on pg. 36)

Backless Booster – Install: (cont.)

1 - For easier installation, extend the lower anchor attachment straps to their maximum length by squeezing the lower anchor attachment adjustment button (a) while pulling out on the straps (b).


2 - Attach the lower anchor attachments to the vehicle's lower anchor points by sliding the hook over the anchor point, pushing down firmly, then pulling the hook away from the anchor point. Hear or feel a **CLICK** indicating that the lower anchor attachments are fully attached. Ensure that the lower anchor attachment straps are not twisted.

3 - Remove all the slack from the lower anchor attachment straps by pushing on the child restraint while pulling the lower anchor attachment straps on the front of the booster.

4 - Depending on your vehicle, you may need to manually align the lower anchor attachments with the slots in the base so they can retract inside to get a proper install.

5 - Pull out lightly on the child restraint after install. If the lower anchor attachment adjustment straps loosen, clean the lower anchor attachment adjustment button and straps (see pg. 53).


IMPORTANT: The bottom of the child restraint should sit as flat as possible on the vehicle seat.

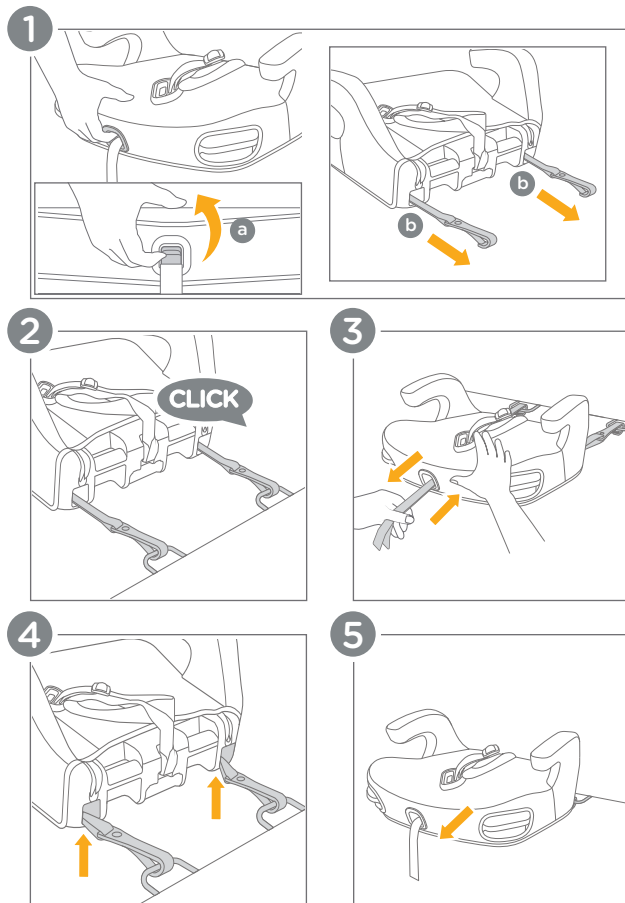

Backless Booster – Securing Child in Seat:

WARNING! Use only the vehicle's lap and shoulder belt system when restraining the child in this booster seat. **This restraint is not certified for aircraft use, as a lap-only belt is not permitted.** In addition to the lap/shoulder belt, the lower anchor attachments may be used to secure the seat in place (only included on some models).

Your child must be able to sit upright and keep the vehicle lap/shoulder belt properly secured over their chest and lap throughout the car ride. If your child is unable to do so, please secure your child in a child restraint using a 5-point harness in forward-facing mode.

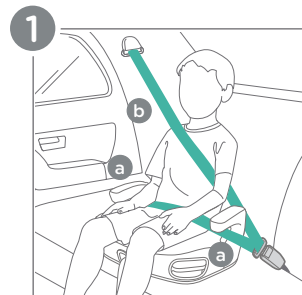

- 1** - Place the child on the child restraint and buckle them in. Ensure that the vehicle lap belt is **UNDER BOTH** armrests (a). The vehicle shoulder belt must be **OVER** the child's shoulder on the retractor side (b).

WARNING: DO NOT allow the child to slouch.

WARNING: DO NOT position the vehicle shoulder belt under the child's arm or behind their back.



(Backless Booster – Securing Child in Seat continued on pg. 40)

Backless Booster – Securing Child in Seat: (cont.)

2 - With the child in the seat: IF the shoulder belt does **NOT** cover **ANY PART** of the label's white line (a), keep the shoulder belt **OVER** the armrest (b).


3 - With the child in the seat: IF **ANY PART** of the shoulder belt covers **ANY PART** of the label's white line (c), move the shoulder belt **UNDER** the armrest (d).

(Backless Booster – Securing Child in Seat continued on pg. 42)

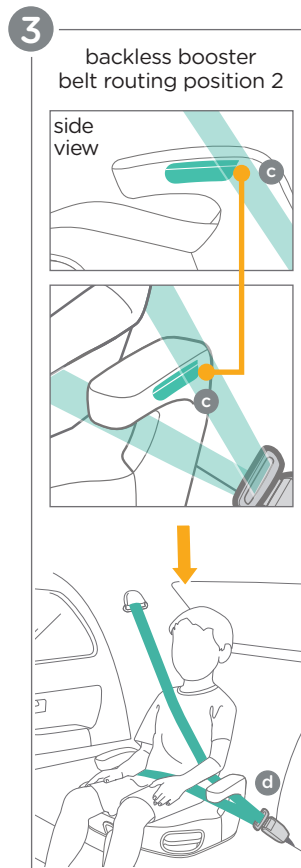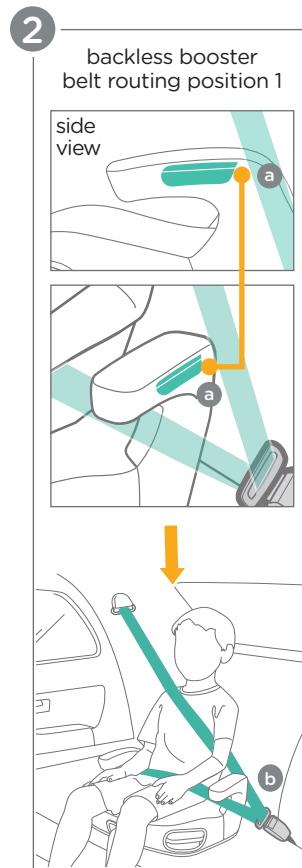

Backless Booster – Securing Child in Seat: (cont.)

4 - If using, thread the shoulder belt through the shoulder belt positioning clip. Slide the shoulder belt positioning strap adjuster to tighten or loosen the shoulder belt positioning strap so that the shoulder belt positioning clip sits just above the shoulder.

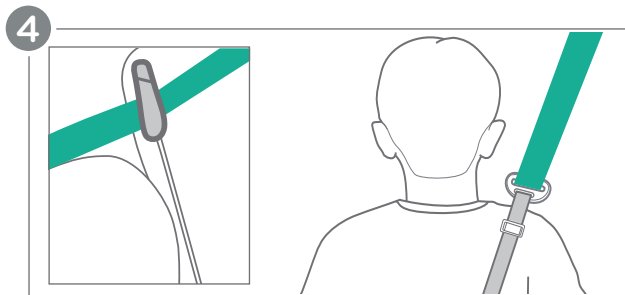


Detaching & Storing Lower Anchor Attachments:

1 - Squeeze the lower anchor attachment adjustment button (a) and pull the child restraint slightly away from the vehicle seat (b).

2 - Press in on the lower anchor attachment hook's spring. Push the hook in, lift the hook up, twist and pull the hook away from the vehicle's lower anchor point.

3 - Pull on the lower anchor attachment adjustment straps to retract the lower anchor attachments into the base.

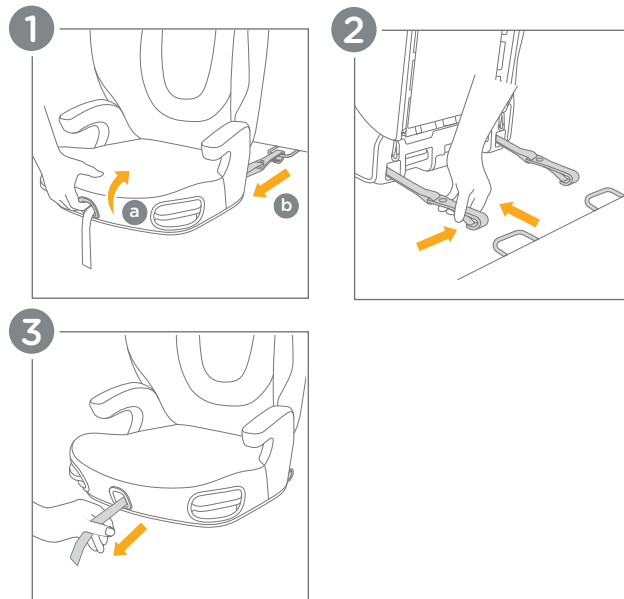


Using Cup Holders:

1 - Pull the cup holders out or push them in to open or close the cup holders.

IMPORTANT: The cup holders **MUST** be installed when using the child restraint.

IMPORTANT: **NEVER** put hot liquids in the cup holders.

IMPORTANT: The maximum recommended weight in each cup holder is 1 lb. (0.5 kg).

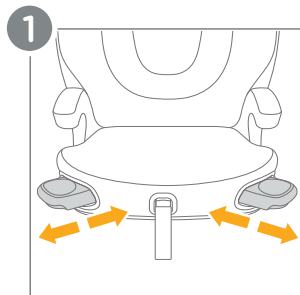


Removing Softgoods:

WARNING! NEVER use the child restraint without the softgoods in place.

- 1 - Release the elastic loops located on the back of the headrest.
- 2 - Squeeze the headrest adjustment lever and lift the headrest to the highest position.
- 3 - Remove the head support fabric from underneath the lower back support. Pull the headrest fabric off from the front.
- 4 - Release the elastic loops from the bottom of the seat back.
- 5 - Remove the seat back fabric.

Remove the seat back from the base, following steps 1 and 2 on pg. 32.

(Removing Softgoods continued on pg. 50)

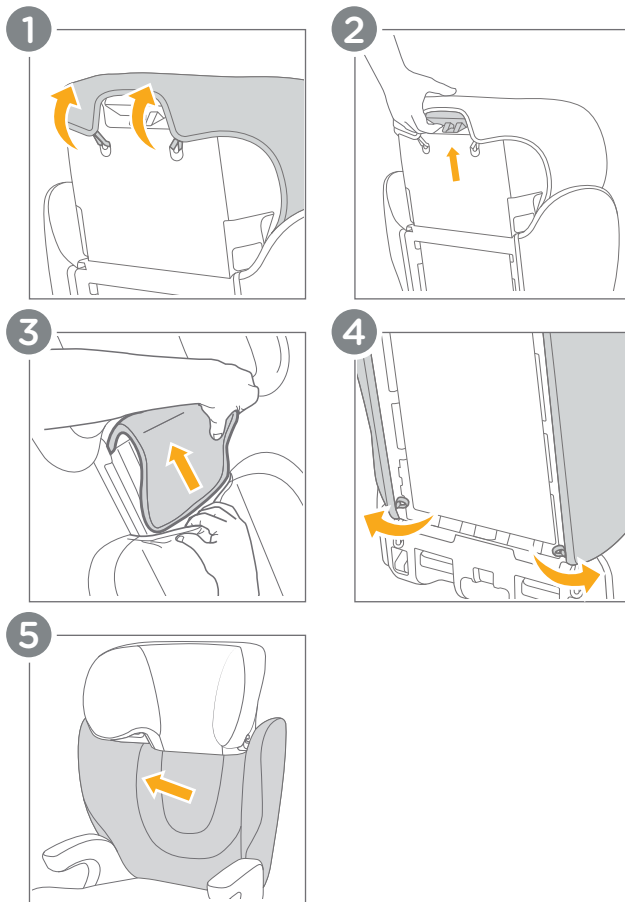

Removing Softgoods: (cont.)

6 - Release the elastic loops located on the back of the base.




7 - On some models, release the elastic loops located on the underside of the base.

8 - On some models, release the base fabric from around the lower anchor attachment straps opening (a).

On all models, pull the base fabric off from the front (b).

To reassemble the softgoods, follow these steps in reverse order.

IMPORTANT: DO NOT remove any foam from the seat.

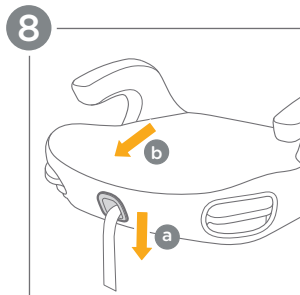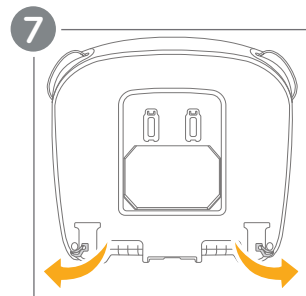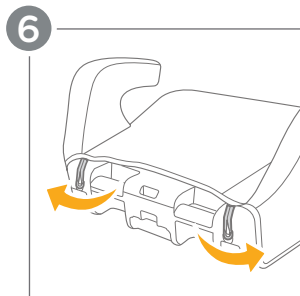

Care & Maintenance:

Washing the Seat Pads: Refer to the care label attached to the fabrics for washing and drying instructions. **DO NOT** attempt to remove the foam or tape from under the seat pad.

Cleaning the Seat Shell and Foams: Use only mild detergent, water, and a soft cloth to clean the shell, base, and foams. Air dry after cleaning. **NEVER** use bleach or any other harsh chemicals anywhere on the child restraint.

Cleaning the Lower Anchor Attachment Straps:

Use a damp soft cloth and mild detergent to hand wipe the straps clean. **DO NOT** submerge or saturate the straps. Doing so may compromise the safety of the straps.

Storage: When not in use for a long period, remove the child restraint from the vehicle seat. Store the child restraint in a cool, dry place that your child does not have access to.

Normal Wear and Tear: It is normal for the fabric to fade from sunlight and show wear and tear over time even when used normally.

Regular Checks: Regularly check that everything functions properly. If any parts are torn, broken, or missing, stop using immediately and contact Joie for replacement parts.


Care & Maintenance:

Keeping Your Lower Anchor Attachment Adjustment Button & Straps Clean *(only included on some models):*

A clean lower anchor attachment adjustment button and straps are key to properly functioning lower anchor attachments. Regularly check the button and straps for dirt and debris, and clean them as needed.

Cleaning Steps:

1. Open the mechanism: Squeeze the lower anchor attachment adjustment button. This will expose the small teeth and any trapped debris. Pull the lower anchor attachment adjustment straps out slightly to help loosen debris.

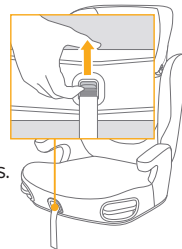

3. Clean the button and strap: Use a soft, nylon-bristled brush to remove any dirt or debris. For stubborn debris or residue, you can use a vacuum cleaner, a damp cloth, or a flat, plastic-edged tool to scrape. **NEVER** use a sharp or metal tool.

4. Test: Gently pull on the lower anchor attachments to ensure that they do not loosen. Reinstall the seat and then test again.

Important:

DO NOT use harsh cleaning chemicals.

DO NOT saturate the lower anchor attachment adjustment straps with liquids.

Joie Baby USA Consumer Service Contact Info.

Address: 70 Thousand Oaks Blvd., Morgantown, PA 19543

Email: info.us@joiebaby.com • **Phone:** 1-866-798-7866



Effortlessly happy.

Helping parents be their best
with worry-free baby gear.